(5) Install the airbag control module (Refer to 8 - ELECTRICAL/RESTRAINTS/AIRBAG CONTROL MODULE - INSTALLATION).

RECIRCULATION DOOR ACTUATOR

DESCRIPTION

When equipped with A/C, a vacuum operated recirculation door actuator is used to control the movement of the recirculation-air door within the HVAC housing (Fig. 33).

When vacuum is supplied by the A/C-heater control to the recirculation door actuator, the actuator linkage is pulled into the actuator, which moves the recirculation door lever and recirculation door to the Recirculation position. The recirculation door actuator is spring loaded, so when vacuum is released from the actuator, the linkage moves the recirculation-air door back to its static position (fresh air).

The recirculation door actuator can be accessed for service through the glove box opening in the instrument panel.

The recirculation door actuator cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.

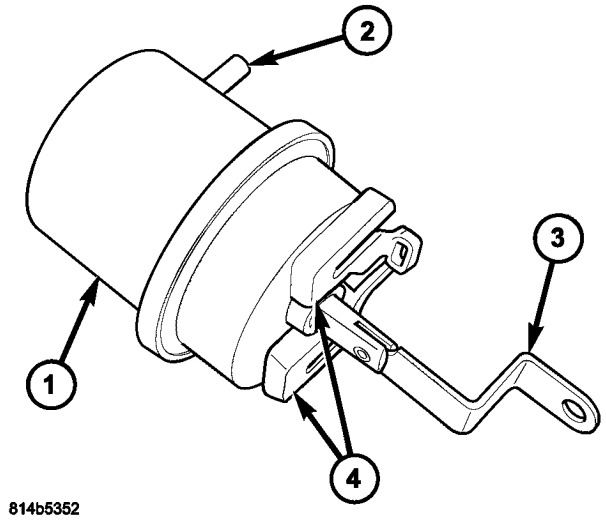

Fig. 33 Recirculation Door Actuator

1 - RECIRCULATION DOOR ACTUATOR
2 - VACUUM CONNECTOR RECEPTACLE
3 - ACTUATOR ROD
4 - ACTUATOR MOUNT

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

NOTE: The recirculation-air door and actuator are used only on models equipped with A/C.

(1) Disconnect and isolate the negative battery cable.

(2) Remove the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - REMOVAL).

(3) Remove the right front speaker bezel and speaker (Refer to 8 - ELECTRICAL/AUDIO/SPEAKER - REMOVAL).

(4) Using a small flat bladed tool, gently pry the actuator latch while pulling firmly outwards on the actuator (Fig. 34). Rotate and tilt the actuator as required to remove the actuator from the HVAC air inlet housing mount.

(5) Disengage the actuator rod from the push-pin type retainer located on the end of the recirculation door actuator lever.

(6) Disconnect the vacuum harness from the recirculation door actuator and remove the actuator from the vehicle.

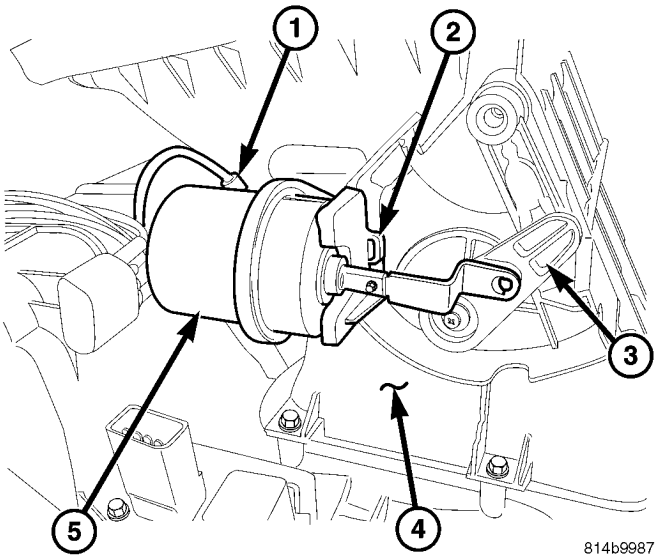

Fig. 34 Recirculation Door Actuator

1 - VACUUM HARNESS
2 - ACTUATOR LATCH
3 - RECIRCULATION DOOR ACTUATOR LEVER
4 - HVAC AIR INLET HOUSING
5 - RECIRCULATION DOOR ACTUATOR

INSTALLATION

NOTE: The recirculation-air door and actuator are used only on models equipped with A/C.