(1) Connect the vacuum harness to the recirculation door actuator.

(2) Engage the actuator rod to the push-pin type retainer located on the end of the recirculation door actuator lever.

(3) Rotate and tilt the recirculation door actuator as required to install the actuator mount onto the HVAC air inlet housing mounting boss. Push the actuator onto the mount until it snaps into the locked position.

(4) Install the right front speaker and speaker bezel (Refer to 8 - ELECTRICAL/AUDIO/SPEAKER - INSTALLATION).

(5) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(6) Reconnect the negative battery cable.

VACUUM CHECK VALVE

DESCRIPTION

Two vacuum check valves (Fig. 35) are installed in the accessory vacuum supply system. One is on the accessory vacuum supply line in the engine compartment, near the vacuum tap on the engine intake manifold. A second vacuum check valve is located at the HVAC system takeout. The vacuum check valves are designed to allow vacuum to flow in only one direction through the vacuum supply circuits.

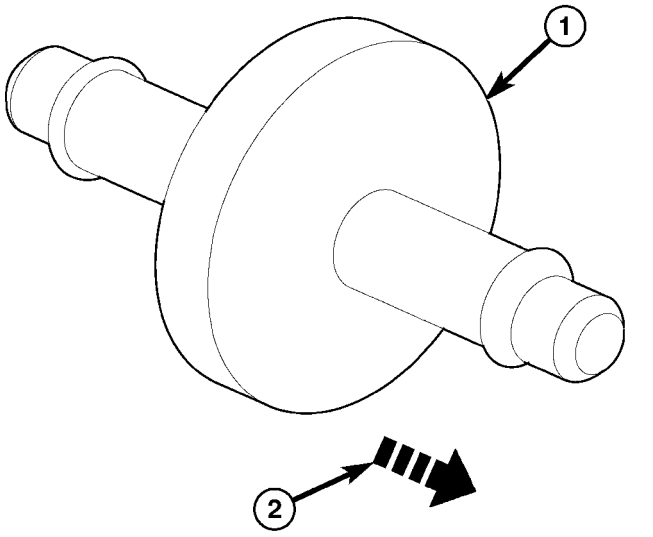

Fig. 35 Vacuum Check Valve - Typical

1 - VACUUM CHECK VALVE
2 - DIRECTION OF AIR FLOW

OPERATION

The use of the two vacuum check valves help to maintain the system vacuum needed to retain the selected A/C-heater mode settings. The check valves prevent the engine from bleeding down system vacuum through the intake manifold during extended heavy engine load (low engine vacuum) operation.

The vacuum check valves cannot be repaired and, if faulty or damaged, must be replaced.

REMOVAL

NOTE: Note the orientation of the check valves in the vacuum supply line for correct reinstallation.

(1) Disconnect the vacuum check valve from the fitting at the engine intake manifold and the accessory vacuum supply line (Fig. 36) and remove the valve.

(2) Disconnect the vacuum check valve from the HVAC vacuum supply line fitting and the accessory vacuum supply line and remove the valve.

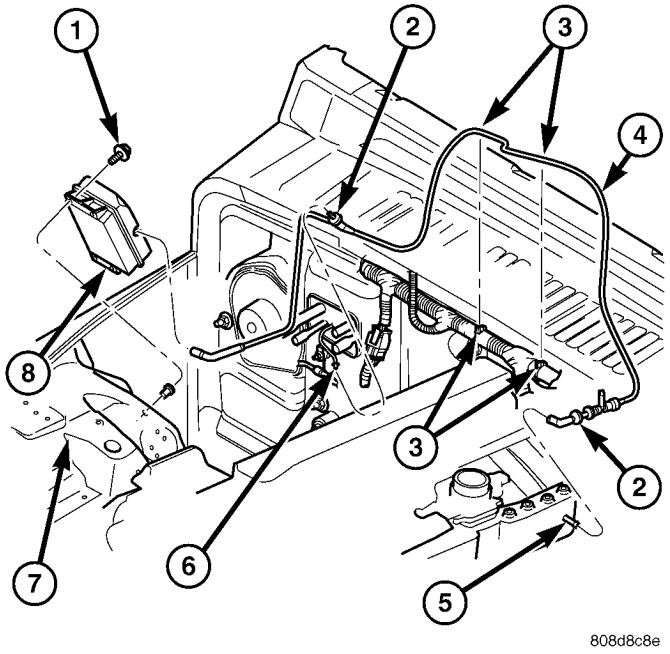

Fig. 36 Vacuum Check Valves - Typical

1 - SCREW
2 - VACUUM CHECK VALVE (2)
3 - VACUUM LINE RETAINER (2)
4 - ACCESSORY VACUUM SUPPLY LINE
5 - ENGINE VACUUM FITTING
6 - HVAC VACUUM SUPPLY LINE
7 - INNER FENDER
8 - VACUUM RESERVOIR

INSTALLATION

(1) Using the orientation noted during Removal, connect the vacuum check valve to the HVAC vacuum supply line fitting and the accessory vacuum supply line.

(2) Using the orientation noted during Removal, connect the vacuum check valve to the fitting at the engine intake manifold and the accessory vacuum supply line.