VACUUM RESERVOIR

DESCRIPTION

The vacuum reservoir (Fig. 37) is mounted to the rear of the right front inner fender in the engine compartment, under the battery tray.

The vacuum reservoir can be accessed for service by removing the battery and battery tray.

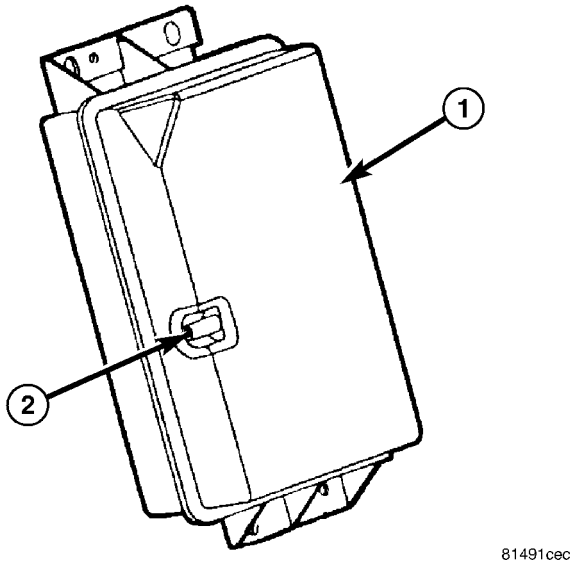

Fig. 37 Vacuum Reservoir - Typical

1 - VACUUM RESERVOIR
2 - VACUUN LINE CONNECTION

OPERATION

Engine vacuum is stored in the vacuum reservoir. The stored vacuum is used to operate the vacuum-controlled vehicle accessories during periods of low engine vacuum such as when the vehicle is climbing a steep grade, or under other high engine load operating conditions.

The vacuum reservoir cannot be repaired and, if faulty or damaged, it must be replaced.

REMOVAL

(1) Remove the battery and battery tray from the engine compartment (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/BATTERY - REMOVAL) and (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/TRAY - REMOVAL).

(2) Disconnect the vacuum supply line from the vacuum reservoir (Fig. 38).

(3) Remove the screw that secures the vacuum reservoir to the inner fender.

(4) Remove the vacuum reservoir from the engine compartment.

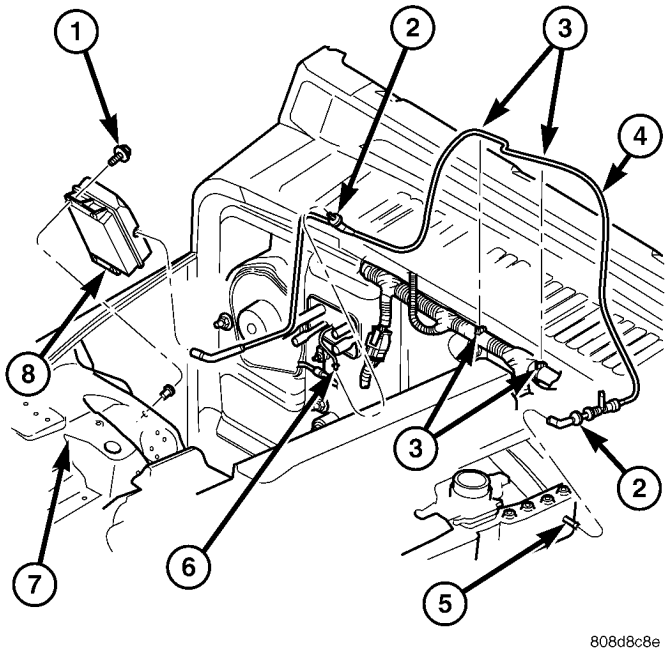

Fig. 38 Vacuum Reservoir - Typical

1 - SCREW
2 - VACUUM CHECK VALVE (2)
3 - VACUUM LINE RETAINER (2)
4 - ACCESSORY VACUUM SUPPLY LINE
5 - ENGINE VACUUM FITTING
6 - HVAC VACUUM SUPPLY LINE
7 - INNER FENDER
8 - VACUUM RESERVOIR

INSTALLATION

(1) Position the vacuum reservoir into the engine compartment.

(2) Install the screw that secures the vacuum reservoir to the inner fender panel. Tighten the screw to 2 N·m (17 in. lbs.).

(3) Connect the vacuum supply line to the vacuum reservoir.

(4) Install the battery tray and battery (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/TRAY - INSTALLATION) and (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/BATTERY - INSTALLATION).