DISTRIBUTION

TABLE OF CONTENTS

page

AIR OUTLETS
DESCRIPTION 35
REMOVAL 35
INSTALLATION 36
BLOWER MOTOR
DESCRIPTION 36
OPERATION 36
DIAGNOSIS AND TESTING
BLOWER MOTOR 36
REMOVAL 37
INSTALLATION 37
DEFROSTER DUCT
REMOVAL 38
INSTALLATION 38
FLOOR DISTRIBUTION DUCT
REMOVAL 38
INSTALLATION 38
HVAC HOUSING
DESCRIPTION 39
REMOVAL
HVAC HOUSING 39
AIR INLET HOUSING 40
DISASSEMBLY
HVAC HOUSING 41
AIR INLET HOUSING 44
ASSEMBLY
HVAC HOUSING 46
AIR INLET HOUSING 49
INSTALLATION
HVAC HOUSING 51
AIR INLET HOUSING 51
INSTRUMENT PANEL DEMISTER DUCTS
REMOVAL 52
INSTALLATION 54
INSTRUMENT PANEL DUCTS
REMOVAL 54
INSTALLATION 55

AIR OUTLETS

DESCRIPTION

There is one defroster air outlet located an the top of the instrument panel (Fig. 1). The airflow from the defroster outlet is directed by fixed vanes in the defroster grille and cannot be adjusted. The defroster outlet and grille are not serviceable from the instrument panel top cover (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL TOP COVER - REMOVAL).

There are four instrument panel air outlets. One air outlet is located near each outboard end of the instrument panel facing the rear of the vehicle, and two located near the top of the instrument panel center bezel. Each of the instrument panel air outlets contain a serviceable grille with movable vanes that are used to direct or shut off the flow of the conditioned air leaving the instrument panel outlets. The instrument panel air outlets can be removed individually for service replacement.

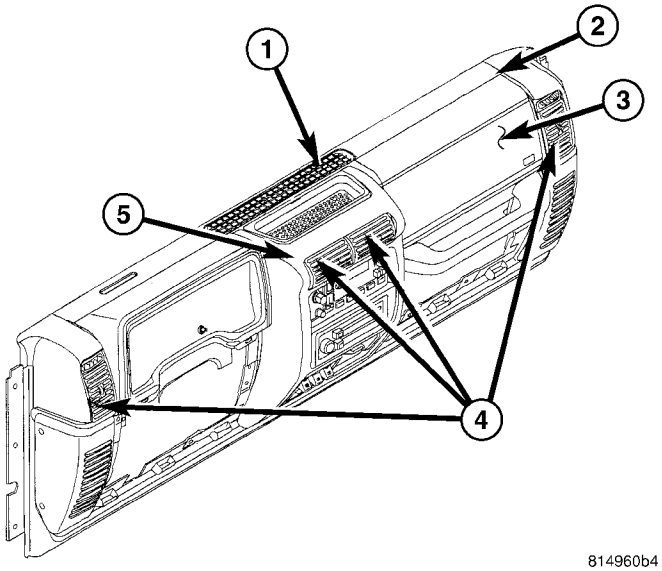

Fig. 1 Air Outlets - LHD shown, RHD similar

1 - DEFROSTER AIR OUTLET
2 - INSTRUMENT PANEL TOP COVER
3 - INSTRUMENT PANEL
4 - INSTRUMENT PANEL AIR OUTLETS (4)
5 - INSTRUMENT PANEL CENTER BEZEL

REMOVAL

NOTE: The instrument panel air outlets are retained to the pivots within the air outlet housings by a snap fit.