(1) Using a trim stick C-4755 or equivalent (Fig. 2), gently pry the panel air outlet out of the panel outlet housing as required.

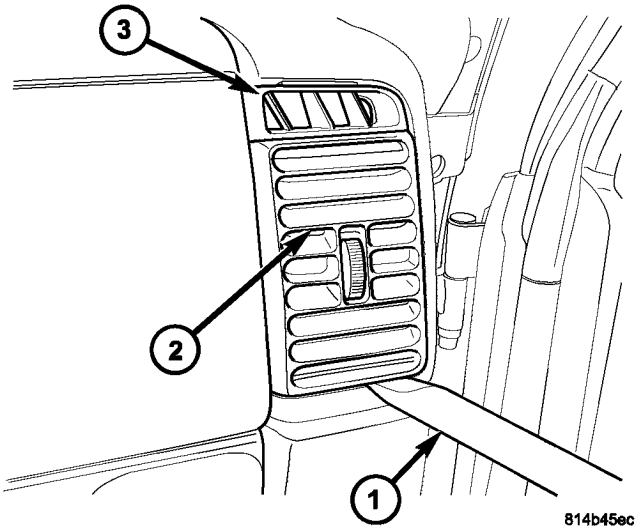

Fig. 2 Instrument Panel Air Outlets

1 - TRIM STICK
2 - PANEL AIR OUTLETS (4)
3 - PANEL OUTLET HOUSING

INSTALLATION

CAUTION: The instrument panel air outlets can only be installed in one direction. If an air outlet is not properly oriented prior to installation, damage to the outlet will occur.

NOTE: Each air outlet is retained into the outlet opening by two pivot shafts. One pivot shaft is larger than the other. The air outlet must be first installed onto the larger pivot shaft, then snapped into place over the smaller pivot shaft.

(1) Install the air outlet onto the larger pivot shaft located in the instrument panel outlet opening.

(2) Gently push the air outlet onto the smaller pivot shaft until it snaps into position.

BLOWER MOTOR

DESCRIPTION

The blower motor (Fig. 3) is a 12-volt, direct current (DC) motor mounted within a plastic housing with an integral wire connector and squirrel cage-type blower wheel that is secured to the blower motor shaft. The blower motor wheel is located in the HVAC air inlet housing which is mounted to the passenger side end of the HVAC housing.

The blower motor can be accessed for service from underneath the instrument panel.

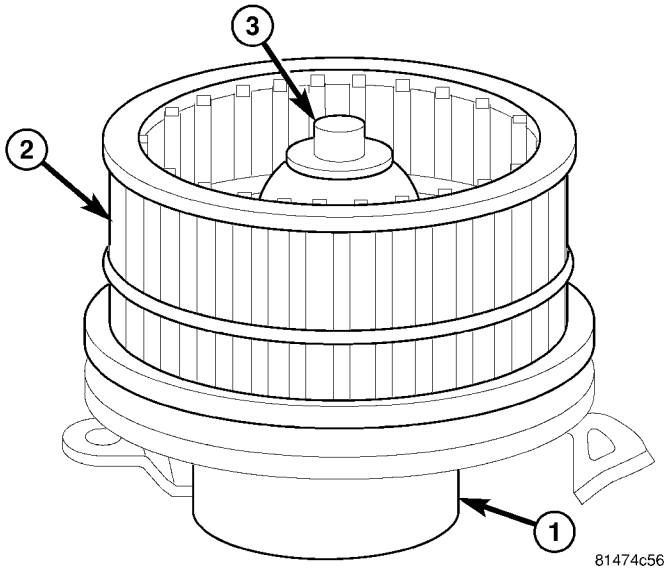

Fig. 3 Blower Motor - Typical

1 - BLOWER MOTOR
2 - BLOWER WHEEL
3 - MOTOR SHAFT

OPERATION

The blower motor is used to control the velocity of air moving through the HVAC housing by spinning the blower wheel within the HVAC air inlet housing at the selected speed.

The blower motor will operate whenever the ignition switch is in the On position and the blower motor control in any position except Off. Blower motor speed is controlled by regulating the path to ground through the blower motor resistor and through the blower motor control located within the A/C-heater control.

The blower motor and blower motor wheel are factory balanced and cannot be adjusted or repaired. If faulty or damaged, the blower motor and blower wheel must be replaced as an assembly.

DIAGNOSIS AND TESTING

BLOWER MOTOR

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.