DEFROSTER DUCT

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

(1) Remove the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL ASSEMBLY - REMOVAL).

(2) Remove the two nuts that secure the defroster duct to the dash panel (Fig. 5).

(3) Remove the defroster duct from the dash panel and disconnect it from the HVAC housing.

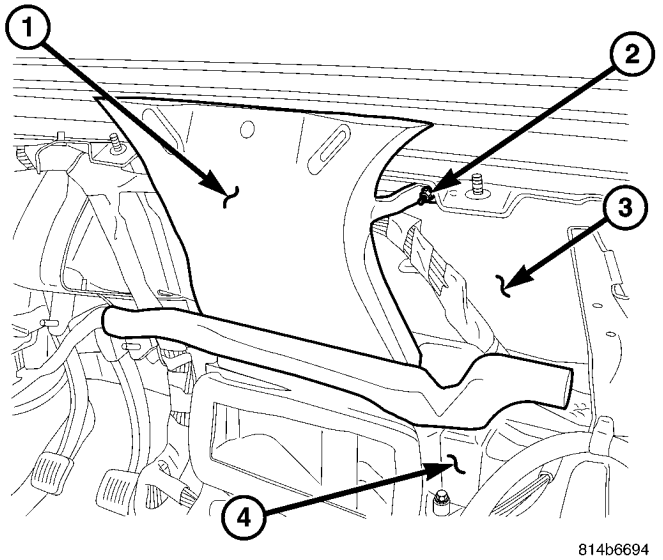

Fig. 5 Defroster Duct

1 - DEFROSTER DUCT
2 - NUT (2)
3 - DASH PANEL
4 - HVAC HOUSING

INSTALLATION

(1) Install the defroster duct onto the top of the HVAC housing and onto the studs located on the dash panel.

(2) Install the two push-nuts that secure the defroster duct to the dash panel.

(3) Install the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL ASSEMBLY - INSTALLATION).

FLOOR DISTRIBUTION DUCT

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

(1) Remove the airbag control module (Refer to 8 - ELECTRICAL/RESTRAINTS/AIRBAG CONTROL MODULE - REMOVAL).

(2) Remove the three screws that secure the floor distribution duct to the bottom of the HVAC housing and remove the duct (Fig. 6).

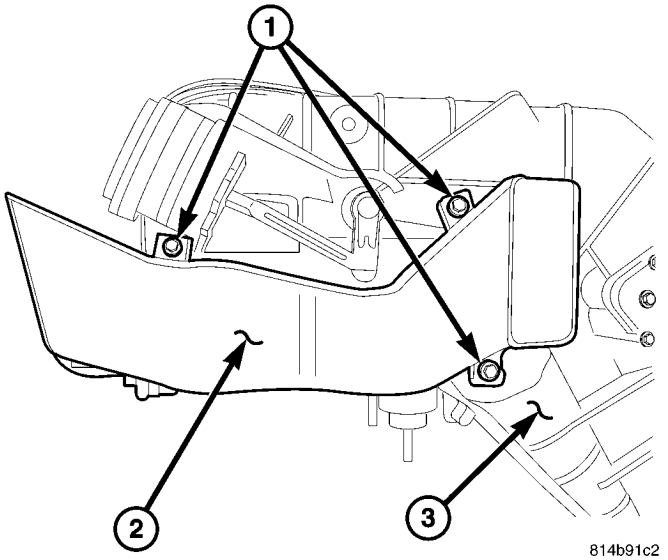

Fig. 6 Floor Distribution Duct

1 - SCREW (3)
2 - FLOOR DISTRIBUTION DUCT
3 - HVAC HOUSING

INSTALLATION

(1) Position the floor distribution duct onto the bottom of the HVAC housing.

(2) Install the three screws that secure the floor distribution duct to HVAC housing. Tighten the screws to 2 N·m (17 in. lbs.).

(3) Install the airbag control module (Refer to 8 - ELECTRICAL/RESTRAINTS/AIRBAG CONTROL MODULE - INSTALLATION).