(1) Remove the HVAC housing (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/ HVAC HOUSING - REMOVAL).

(2) If equipped, disconnect the HVAC vacuum harness connector from the recirculation door actuator.

(3) Remove the five screws that secure the air inlet housing to the top of the HVAC housing and remove the air inlet housing (Fig. 9).

NOTE: If the foam seal on the air inlet housing is deformed or damaged, it must be replaced.

(4) If required, disassemble the air inlet housing (Refer to 24 - HEATING & AIR CONDITIONING/ DISTRIBUTION/HVAC HOUSING - AIR INLET HOUSING - DISASSEMBLY).

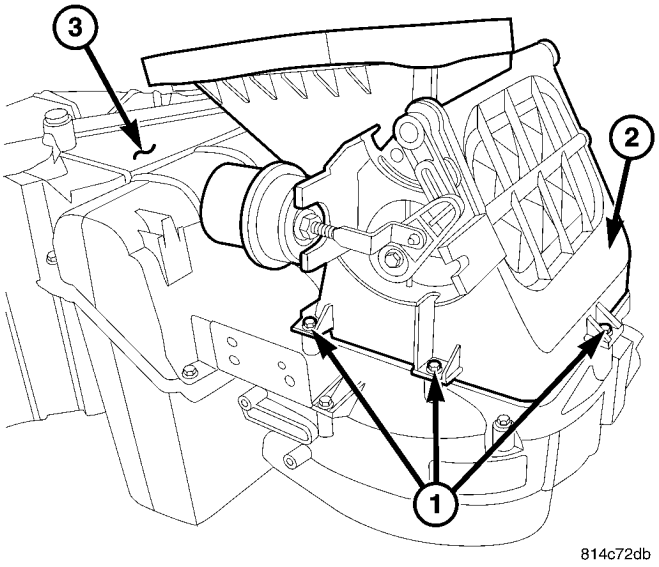

Fig. 9 HVAC Air Inlet Housing - LHD shown, RHD similar

1 - SCREWS (5)
2 - AIR INLET HOUSING
3 - HVAC HOUSING

DISASSEMBLY

HVAC HOUSING

NOTE: The HVAC housing must be removed from the vehicle and disassembled for service of the A/C evaporator, heater core, blend-air and mode-air doors.

(1) Remove the HVAC housing assembly and place it on a workbench (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/HVAC HOUSING - REMOVAL).

(2) Disconnect the HVAC vacuum harness connectors from the mode door actuators and the recirculation door actuator, if equipped (Fig. 10).

(3) Disengage the vacuum harness from any retaining clips located on the HVAC housing and carefully pull the vacuum supply line through the foam seal located at the front of the housing and remove the vacuum harness.

(4) Remove the mode door actuators from the HVAC housing (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/MODE DOOR ACTUATORS - REMOVAL).

(5) Remove the blend door actuator from the HVAC housing (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/BLEND DOOR ACTUATOR - REMOVAL).

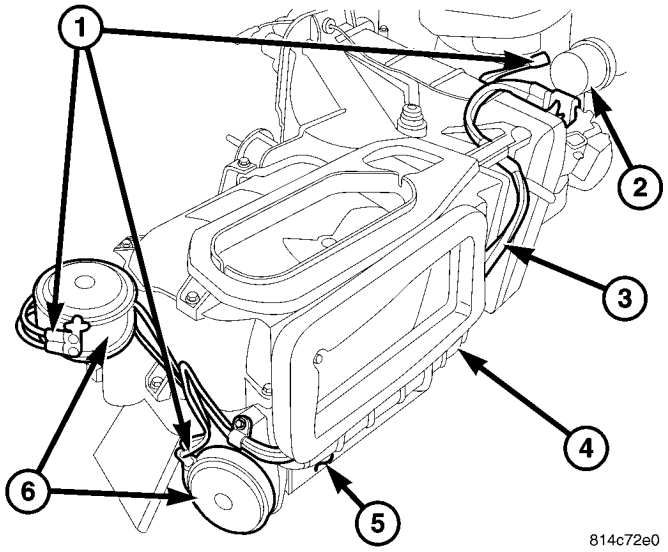

Fig. 10 Vacuum Harness and Actuators - LHD shown, RHD similar

1 - VACUUM HARNESS CONNECTORS
2 - RECIRCULATION DOOR ACTUATOR
3 - HVAC VACUUM HARNESS
4 - BLEND DOOR ACTUATOR
5 - HVAC HOUSING
6 - MODE DOOR ACTUATORS

(6) Disconnect the wire harness connectors from the blower motor resistor and the blower motor (Fig. 11).

(7) Disengage the push-in retainers for the HVAC wire harness connector and the blower motor relay from the HVAC housing.

(8) Remove the three screws that secure the HVAC wire harness to the HVAC housing and remove the wire harness.

(9) Remove the two screws that secure the blower motor resistor to the HVAC housing and remove the resistor.

(10) Disengage the blower motor retaining tab and turn the blower motor counter-clockwise and remove the blower motor from the HVAC housing.