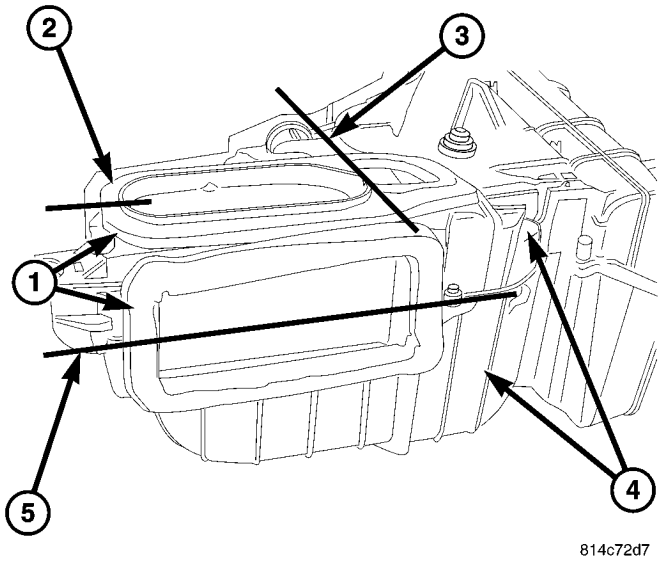

Fig. 14 Foam Seals and Parting Lines - Typical

1 - FOAM SEAL (2)
2 - PARTING LINE
3 - PARTING LINE
4 - HVAC HOUSING HALVES
5 - PARTING LINE

NOTE: If the foam seal for the defrost/demister outlet cover is deformed or damaged, the seal must be replaced.

(16) Remove the five screws that secure the defrost/demister outlet cover to the top of the HVAC housing and remove the cover (Fig. 15).

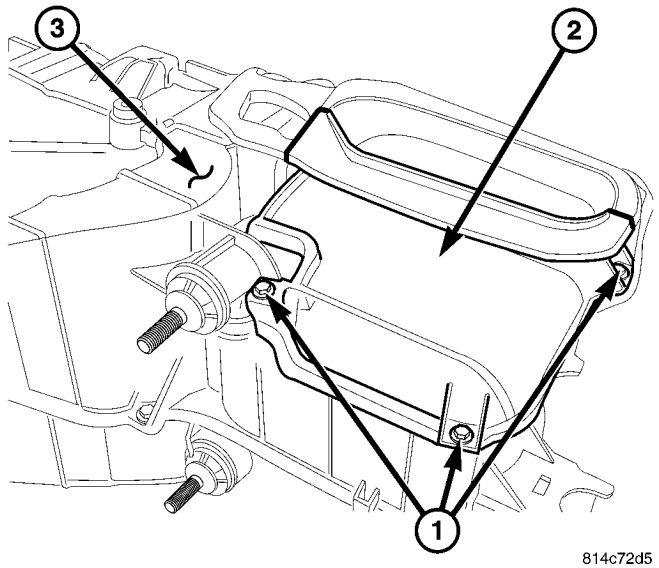

Fig. 15 Defrost/Demister Outlet Cover - LHD shown, RHD similar

1 - SCREW (5)
2 - DEFROST/DEMISTER OUTLET COVER
3 - HVAC HOUSING

NOTE: If the foam seal for the evaporator and heater core tubes is deformed or damaged, the seal must be replaced.

(17) Carefully cut the foam seal for the evaporator and heater core tubes along the parting line of the two HVAC housing halves (Fig. 16).

NOTE: If the foam seal for the evaporator condensate drain tube is deformed or damaged, the seal must be replaced.

(18) Remove the foam seal from the evaporator condensate drain tube.

(19) Remove the fourteen screws and two clips that secure the upper and lower HVAC housing halves together.

(20) Carefully separate the two HVAC housing halves.

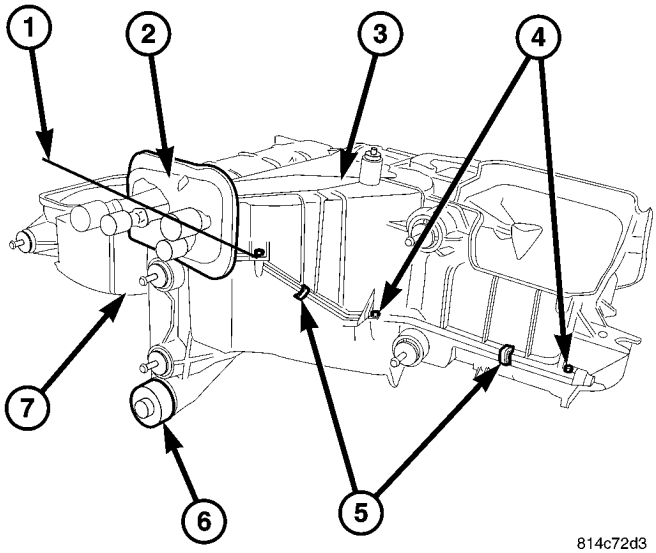

Fig. 16 Foam Seal and HVAC Housing Screws - Typical

1 - PARTING LINE
2 - FOAM SEAL
3 - HVAC HOUSING (UPPER HALF)
4 - SCREWS (14)
5 - CLIP (2)
6 - FOAM SEAL
7 - HVAC HOUSING (LOWER HALF)

NOTE: If either foam seal on the panel-air door is deformed or damaged, the air door must be replaced.

(21) Using a pick or similar tool, release the retaining tab that secures panel door lever to the panel-air door and remove the lever (Fig. 17).

(22) Remove the panel-air door from the lower half of the HVAC housing.