NOTE: If a foam seal on the recirculation-air door is deformed or damaged, the air door must be replaced.

(7) Remove the recirculation-air door from the air inlet housing.

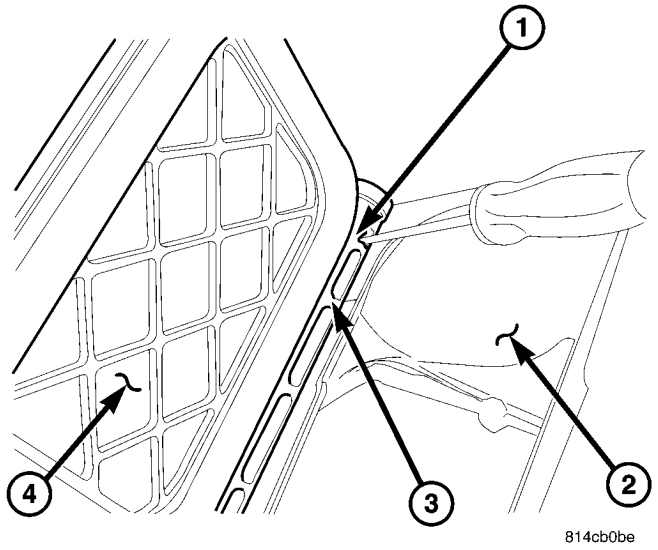

Fig. 23 Recirculation Door Retainer

1 - RETAINING TAB
2 - HVAC AIR INLET HOUSING (INSIDE VIEW)
3 - RECIRCULATION DOOR PIVOT SHAFT
4 - RECIRCULATION-AIR DOOR

ASSEMBLY

HVAC HOUSING

NOTE: The HVAC housing must be removed from the vehicle and disassembled for service of the A/C evaporator, heater core, blend-air and mode-air doors.

NOTE: If any foam or rubber seal on the HVAC housing or an air-door is deformed or damaged, it must be replaced.

(1) Carefully install the A/C evaporator, foam insulator and the rubber seal into the lower half of the HVAC housing. If removed, install the evaporator tube clamp (Fig. 24).

(2) Carefully install the heater core and foam insulator into the lower half of the HVAC housing.

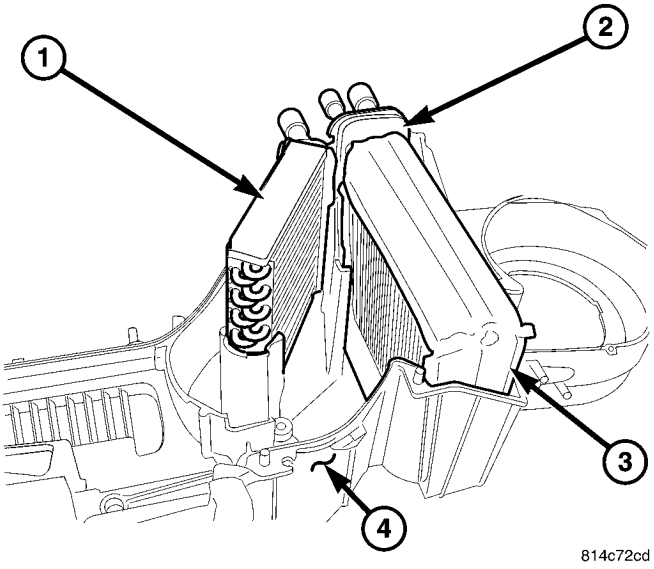

Fig. 24 Heater Core and A/C Evaporator - Typical

1 - HEATER CORE
2 - RUBBER SEAL
3 - A/C EVAPORATOR (IF EQUIPPED)
4 - HVAC HOUSING (LOWER HALF)

(3) Install the floor/defroster-air door and the blend-air door into their pivot holes in the lower half of the HVAC housing (Fig. 25).

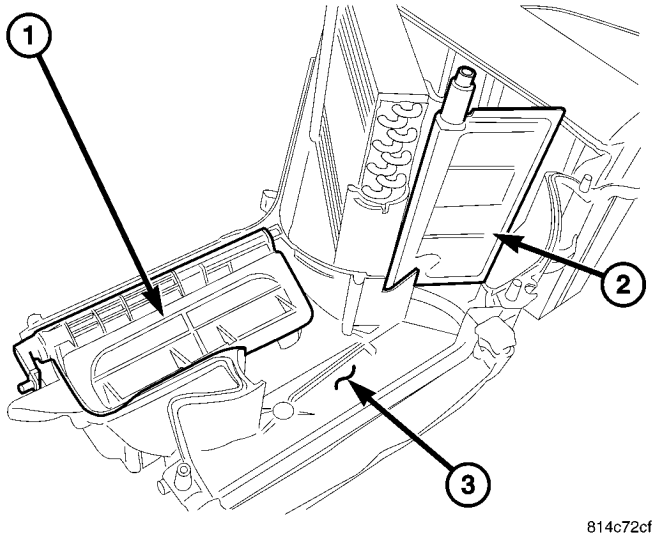

Fig. 25 Floor/Defrost and Blend-Air Doors - LHD shown, RHD similar

1 - FLOOR/DEFROST-AIR DOOR
2 - BLEND-AIR DOOR
3 - HVAC HOUSING (LOWER HALF)

(4) Position the panel-air door into the pivot hole located in the lower half of the HVAC housing (Fig. 26).

(5) Align the panel door lever with the panel-air door pivot shaft and install the lever into the shaft. Be sure that the lever retaining tab fully engages the pivot shaft.