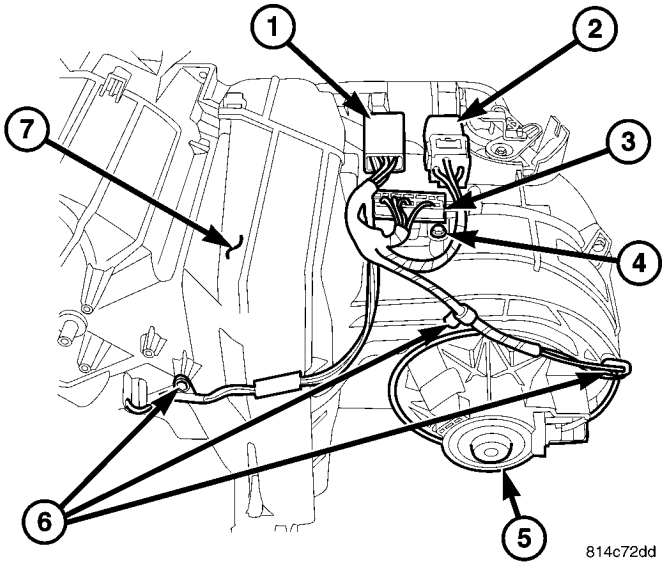

Fig. 31 HVAC Wire Harness - LHD shown, RHD similar

1 - HVAC WIRE HARNESS
2 - BLOWER MOTOR RELAY
3 - BLOWER MOTOR RESISTOR
4 - SCREW (2)
5 - BLOWER MOTOR
6 - SCREW (3)
7 - HVAC HOUSING

(22) Install the mode door actuators (Fig. 32) (Refer to 24 - HEATING & AIR CONDITIONING/ CONTROLS/MODE DOOR ACTUATORS - INSTALLATION).

(23) Install the blend door actuator (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/ BLEND DOOR ACTUATOR - INSTALLATION).

(24) Install the HVAC vacuum harness onto the HVAC housing. Make sure the harness is routed through all the retaining clips located on the HVAC housing.

(25) Insert the vacuum supply line through the foam seal located at the front of the HVAC housing and connect the vacuum harness connectors to the mode door actuators and the recirculation door actuator, if equipped.

(26) Install the HVAC housing assembly (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/HVAC HOUSING - INSTALLATION).

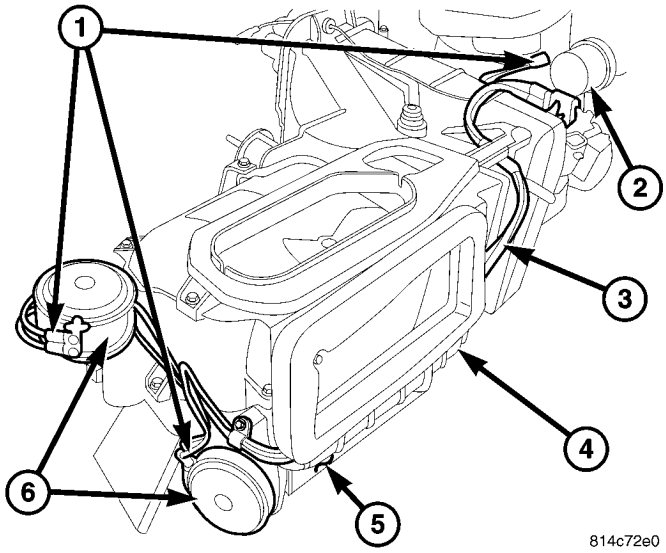

Fig. 32 Vacuum Harness and Actuators - LHD shown, RHD similar

1 - VACUUM HARNESS CONNECTORS
2 - RECIRCULATION DOOR ACTUATOR
3 - HVAC VACUUM HARNESS
4 - BLEND DOOR ACTUATOR
5 - HVAC HOUSING
6 - MODE DOOR ACTUATORS

AIR INLET HOUSING

NOTE: The recirculation-air door and actuator are used only on models equipped with A/C.

NOTE: The air inlet housing must be removed from HVAC housing and disassembled for service of the recirculation-air door.

NOTE: If a foam seal on the recirculation-air door is deformed or damaged, the air door must be replaced.

(1) Position the recirculation-air door into the air inlet housing.

CAUTION: Make sure that the recirculation-air door pivot shaft is properly seated in the pivot seats located in the air inlet housing.

(2) Align the recirculation door lever with the recirculation-air door pivot shaft and install the lever until the retaining tab is fully engaged to the pivot shaft (Fig. 33).