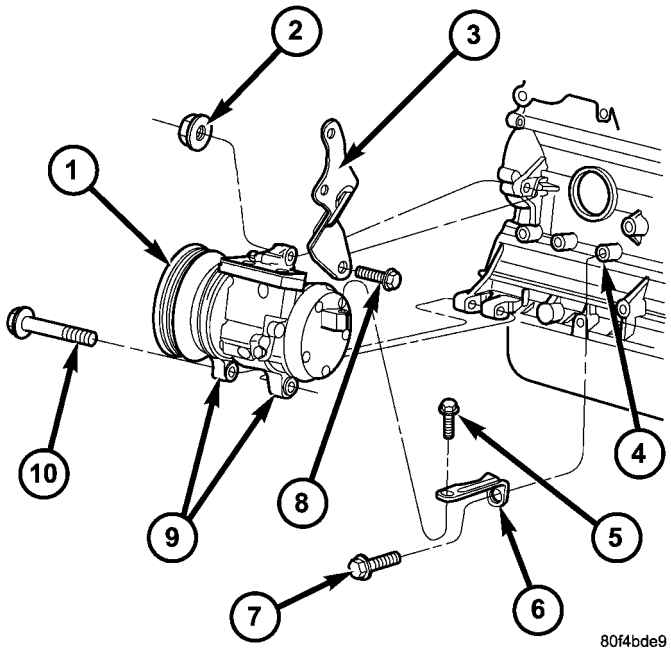

Fig. 6 A/C Compressor - 4.0L Engine

1 - A/C COMPRESSOR
2 - NUT
3 - UPPER MOUNTING BRACKET
4 - CYLINDER BLOCK
5 - BOLT
6 - LOWER MOUNTING BRACKET
7 - BOLT
8 - BOLT
9 - COMPRESSOR LOWER MOUNTING POINT
10 - BOLT

INSTALLATION

2.4L ENGINE

NOTE: If a replacement A/C compressor is being installed, be certain to check the refrigerant oil level. See Refrigerant Oil Level in this group for the procedures. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(1) Position the A/C compressor into the engine compartment.

(2) Install the bolts and nuts that secure the A/C compressor to the engine. Tighten the bolts and nuts to 28 N·m (21 ft. lbs.).

(3) Remove the tape or plugs from the opened refrigerant line fittings and compressor ports.

(4) Lubricate new rubber O-ring seals with clean refrigerant oil and install them on the discharge and liquid line fittings. Use only the specified O-rings as they are made of a special material for the R-134a system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(5) Install the A/C suction and discharge lines onto the A/C compressor.

(6) Install the nuts that secure the A/C suction and discharge lines to the A/C compressor. Tighten the nuts to 25 N·m (18 ft. lbs.).

(7) Connect the wire harness connector to the A/C clutch field coil.

(8) Install the accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(9) Reconnect the negative battery cable.

(10) Evacuate the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM EVACUATE).

(11) Charge the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM CHARGE).

4.0L ENGINE

NOTE: If a replacement A/C compressor is being installed, be certain to check the refrigerant oil level. See Refrigerant Oil Level in this group for the procedures. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(1) Position the A/C compressor into the engine compartment.

(2) Install the bolts and nut that secure the A/C compressor to the engine.

- Tighten the bolts and nut fastening the compressor to the cylinder block to 45-65 N·m (35-50 ft. lbs.).
- Tighten the bolts fastening the rear brace to the compressor and cylinder block to 40-55 N·m (30-40 ft. lbs.).

(3) Remove the tape or plugs from the opened refrigerant line fittings and compressor ports.

(4) Lubricate new rubber O-ring seals with clean refrigerant oil and install them on the discharge and liquid line fittings. Use only the specified O-rings as they are made of a special material for the R-134a system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(5) Install the A/C suction and discharge lines onto the A/C compressor.

(6) Install the nuts that secure the A/C suction and discharge lines to the A/C compressor. Tighten the nuts to 25 N·m (18 ft. lbs.).

(7) Connect the wire harness connector to the A/C clutch field coil.

(8) Install the accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(9) Reconnect the negative battery cable.

(10) Evacuate the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM EVACUATE).