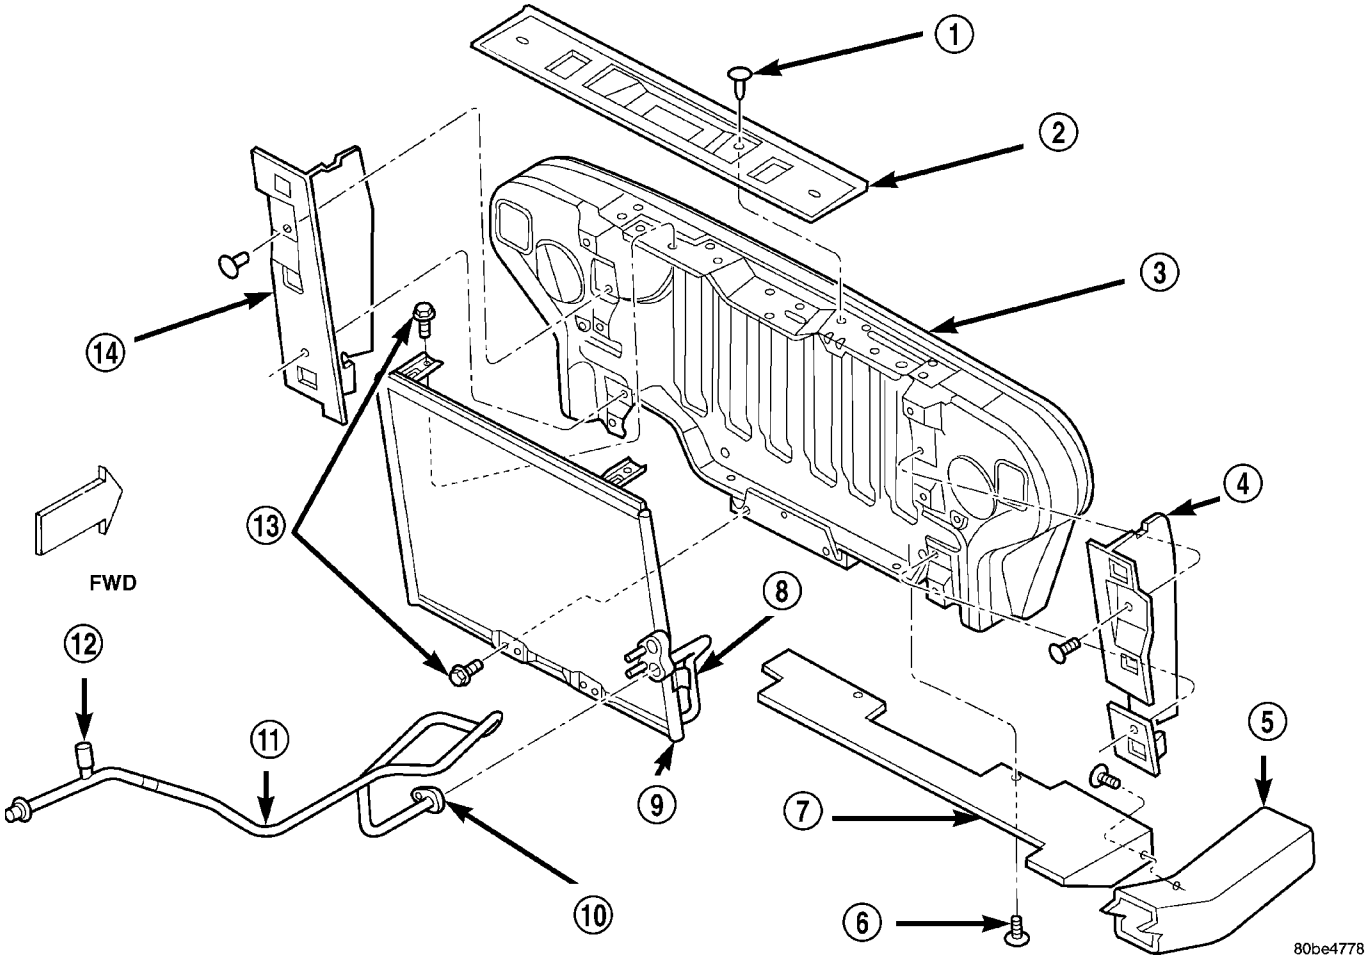

Fig. 8 A/C Condenser

1 - PUSH-PIN RETAINER
2 - UPPER AIR SEAL
3 - GRILLE PANEL
4 - AIR SEAL
5 - FRAME RAIL
6 - PUSH-PIN RETAINER
7 - LOWER AIR SEAL
8 - CONDENSER TAPPING BLOCK
9 - A/C CONDENSER
10 - REFRIGERANT LINE FITTING
11 - LIQUID LINE
12 - SERVICE PORT
13 - BOLTS
14 - AIR SEAL

INSTALLATION

NOTE: If the A/C condenser is being replaced, add 22 milliliters (0.75 fluid ounce) of refrigerant oil to the refrigerant system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(1) Carefully position the A/C condenser into the engine compartment.

(2) Install the two bolts that secure the upper condenser mounting brackets to the top of the grille panel. Tighten the bolts to 5 N·m (44 in. lbs.).

(3) Align the radiator mounting brackets to the grille panel and install the six bolts that secure the radiator to the grille panel. Tighten the bolts to 8 N·m (72 in. lbs.).

(4) Raise and support the vehicle.

(5) Position the lower condenser/radiator air seal out of the way and install the two bolts that secure the lower condenser mounting bracket to the bottom of the grille panel. Tighten the bolts to 5 N·m (44 in. lbs.).

(6) Lower the vehicle.

(7) Remove the tape or plugs from the discharge and liquid line fittings and the condenser ports.

(8) Lubricate new rubber O-ring seals with clean refrigerant oil and install them onto the discharge and liquid line fittings. Use only the specified O-rings as they are made of a special material for the R-134a system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(9) Install the discharge and liquid lines onto the condenser tapping block.

(10) Install the nuts that secures the discharge and liquid lines to the condenser tapping block. Tighten the nuts to 12 N·m (105 in. lbs.).