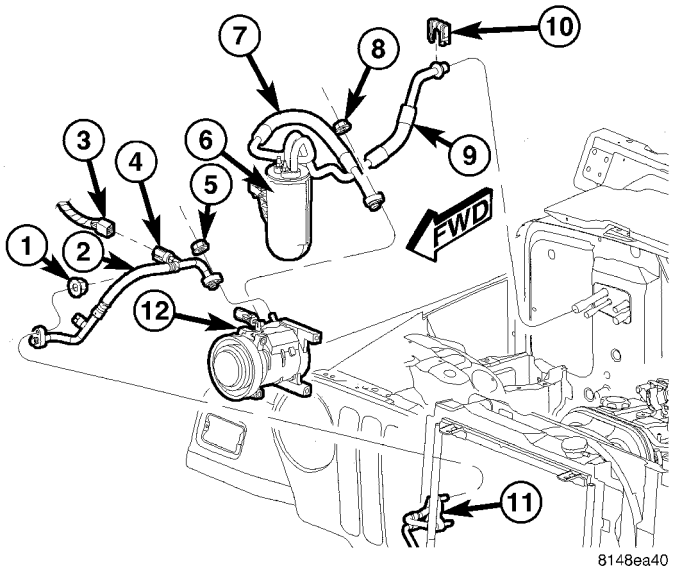

Fig. 9 A/C Discharge Line - 2.4L Engine

1 - NUT
2 - A/C DISCHARGE LINE
3 - WIRE HARNESS CONNECTOR
4 - A/C PRESSURE TRANSDUCER
5 - NUT
6 - ACCUMULATOR
7 - A/C SUCTION LINE (FRONT SECTION)
8 - NUT (4)
9 - A/C SUCTION LINE (REAR SECTION)
10 - SECONDARY RETAINING CLIP
11 - A/C CONDENSER
12 - A/C COMPRESSOR

4.0L ENGINE

WARNING: Refer to the applicable warnings and cautions for this system before performing the following operation (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - WARNINGS) and (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - CAUTIONS). Failure to follow the warnings and cautions could result in possible personal injury or death.

(1) Disconnect and isolate the negative battery cable.

(2) Recover the refrigerant from the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM RECOVERY).

(3) Disconnect the wire harness connector from the A/C high pressure switch located on the A/C discharge line (Fig. 10).

(4) Remove the nut that secures the refrigerant line support bracket to the top of the engine and remove the discharge line from the bracket.

(5) Remove the nut that secures the A/C discharge line to the A/C compressor.

(6) Disconnect the A/C discharge line from the A/C compressor and remove and discard the O-ring seal.

(7) Install plug in, or tape over the opened discharge line fitting and the compressor port.

(8) Remove the nut that secures the A/C discharge line to the A/C condenser.

(9) Disconnect the A/C discharge line from theA/C condenser and remove discard the O-ring seal.

(10) Install plug in, or tape over the opened discharge line fitting and the condenser port.

(11) Remove the A/C discharge line from the engine compartment and if required, remove the A/C high pressure switch from the A/C discharge line.

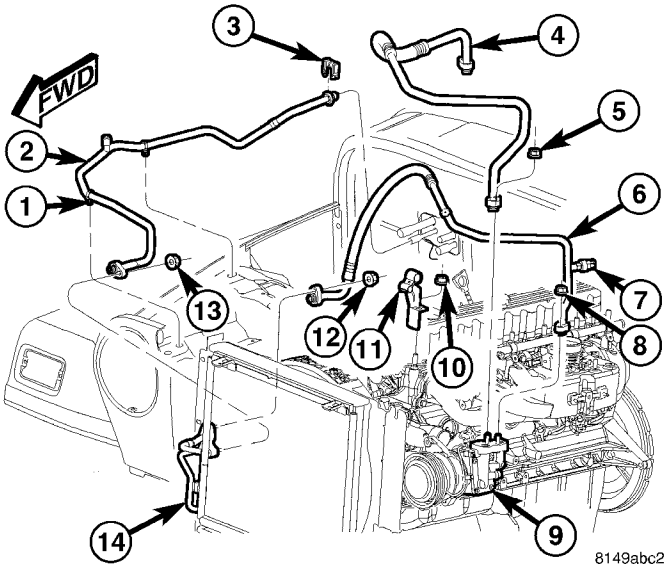

Fig. 10 A/C Discharge Line - 4.0L LHD shown, RHD similar

1 - REFRIGERANT LINE RETAINING CLIP (2)
2 - A/C LIQUID LINE
3 - SECONDARY RETAINING CLIP
4 - A/C SUCTION LINE (FRONT SECTION)
5 - NUT
6 - A/C DISCHARGE LINE
7 - A/C HIGH PRESSURE SWITCH
8 - NUT
9 - A/C COMPRESSOR
10 - NUT
11 - REFRIGERANT LINE BRACKET
12 - NUT
13 - NUT
14 - A/C CONDENSER

INSTALLATION

2.4L ENGINE

NOTE: Replacement of the refrigerant line O-ring seals is required anytime a refrigerant line is opened. Failure to replace the rubber O-ring seals could result in a refrigerant system leak.

(1) If removed, install the A/C pressure transducer onto the A/C discharge line. Hand-tighten the transducer securely.

(2) Position the A/C discharge line into the engine compartment.