REMOVAL

WARNING: Refer to the applicable warnings and cautions for this system before performing the following operation (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - WARNINGS) and (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - CAUTIONS). Failure to follow the warnings and cautions could result in possible personal injury or death.

(1) Disconnect and isolate the negative battery cable.

(2) Recover the refrigerant from the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM RECOVERY).

(3) Depending on application, remove the engine air cleaner housing (Refer to 9 - ENGINE/AIR INTAKE SYSTEM/AIR CLEANER HOUSING - REMOVAL).

(4) Remove the secondary retaining clip from the spring-lock coupler that secures the liquid line to the A/C evaporator (Fig. 18) or (Fig. 19).

(5) Using the proper A/C line disconnect tool, disconnect the liquid line from the A/C evaporator and remove and discard the O-ring seal (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/REFRIGERANT LINE COUPLER - REMOVAL).

(6) Install plugs in, or tape over the opened liquid line fitting and the evaporator port.

(7) Remove the liquid line from the retaining clips located on the right inner fender.

(8) Remove the nut that secures the liquid line to the A/C condenser.

(9) Disconnect the liquid line from the A/C condenser and remove and discard the O-ring seal.

(10) Install plugs in, or tape over the opened liquid line fitting and the condenser port.

(11) On LHD models, remove the liquid line from the engine compartment. On RHD models, proceed to Step 12.

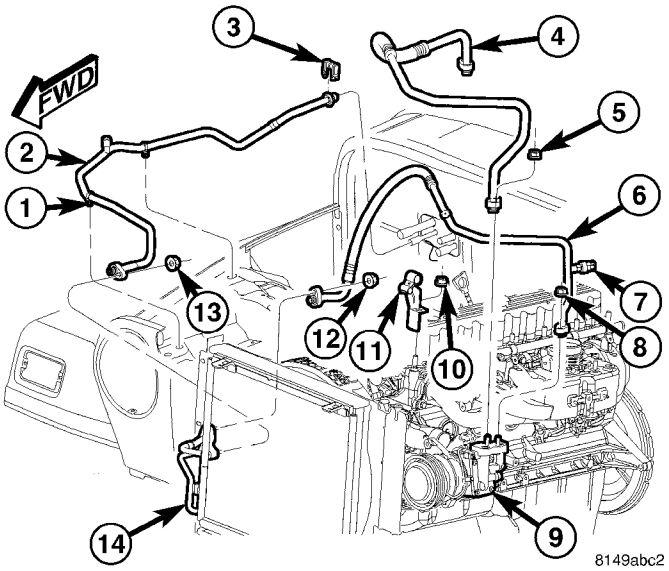

Fig. 18 A/C Liquid Line - 4.0L LHD shown, 2.4L similar

1 - REFRIGERANT LINE RETAINING CLIP (2)
2 - A/C LIQUID LINE
3 - SECONDARY RETAINING CLIP
4 - A/C SUCTION LINE (FRONT SECTION)
5 - NUT
6 - A/C DISCHARGE LINE
7 - A/C HIGH PRESSURE SWITCH
8 - NUT
9 - A/C COMPRESSOR
10 - NUT
11 - REFRIGERANT LINE BRACKET
12 - NUT
13 - NUT
14 - A/C CONDENSER

(12) On RHD models, remove the rear section of the liquid line from the retaining clips located on the dash panel (Fig. 19).

(13) Remove the secondary retaining clip from the spring-lock coupler that secures the rear section of the liquid line to the front section of the liquid line.

(14) Using the proper A/C line disconnect tool, disconnect the rear section of the liquid line from the front section of the liquid line and remove and discard the O-ring seal (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/REFRIGERANT LINE COUPLER - REMOVAL).

(15) Install plugs in, or tape over the two opened liquid line fittings.

(16) Remove the front and rear section of the liquid line from the engine compartment.