(2) Recover the refrigerant from the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM RECOVERY).

(3) Using a Schrader-type valve core tool, remove the valve core from the service port.

(4) Install a plug in or tape over the opened service port(s).

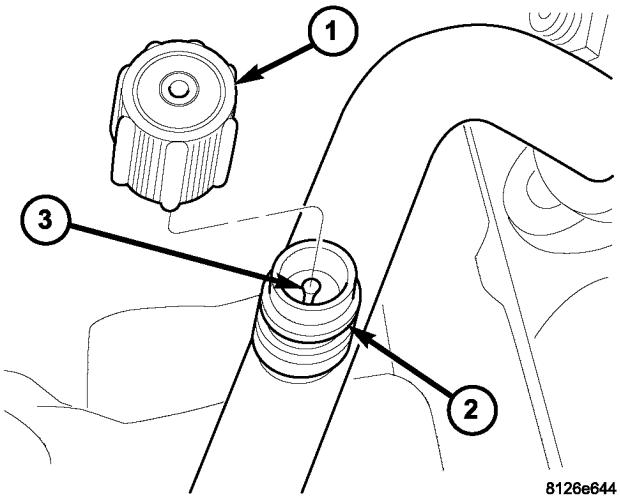

Fig. 22 A/C Service Port-Typical

1 - PROTECTIVE CAP
2 - SERVICE PORT
3 - VALVE CORE

INSTALLATION

(1) Lubricate the valve core with clean refrigerant oil prior to installation. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(2) Remove the tape or plug from the service port.

CAUTION: A valve core that is not fully seated in the A/C service port can result in damage to the valve during refrigerant system evacuation and charge. Such damage may result in a loss of system refrigerant while uncoupling the charge adapters.

(3) Using a Schrader-type valve core tool, install and tighten the valve core into the service port(s).

(4) Evacuate the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM EVACUATE).

(5) Charge the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM CHARGE).

NOTE: The protective cap helps aid in service port sealing and helps protects the refrigerant system from contamination. Remember to always reinstall the protective cap onto the service port when refrigerant system service is complete.

(6) Install the protective cap onto the service port.

SUCTION LINE

DESCRIPTION

The A/C suction line is the refrigerant line that goes from the A/C evaporator to the A/C accumulator, then to the A/C compressor. The A/C suction line is serviced in two sections.

CAUTION: Use only O-ring seals specified for the vehicle. Failure to use the correct O-ring seal will cause the refrigerant system connections to leak.

The A/C suction lines have no serviceable parts except for the rubber O-ring seals.

If an A/C suction line is found to be leaking or is damaged, it must be replaced.

REMOVAL

WARNING: Refer to the applicable warnings and cautions for this system before performing the following operation (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - WARNINGS) and (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - CAUTIONS). Failure to follow the warnings and cautions could result in possible personal injury or death.

(1) Disconnect and isolate the negative battery cable.

(2) Recover the refrigerant from the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM RECOVERY).

(3) Remove the suction line from the retaining clip located near the accumulator.

(4) Remove the secondary retaining clip from the spring-lock coupler that secures the suction line to the A/C evaporator

(5) Using the proper A/C line disconnect tool, disconnect the suction line from the A/C evaporator and remove and discard the O-ring seal (Fig. 23) (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/ REFRIGERANT LINE COUPLER - REMOVAL).

(6) Install plugs in, or tape over the opened suction line fitting and the evaporator port.

(7) Remove the nuts that secure the suction lines to the accumulator and to the A/C compressor.

(8) Disconnect the suction lines from the accumulator and the A/C compressor.