(4) A vapor line (4) (Fig. 14) connects the fuel tank to the EVAP canister and NVLD pump. This connection is made near the right/rear corner of the fuel tank. Carefully disconnect this line. Be very careful not to bend or kink the vapor lines. If lines leak, a Diagnostic Trouble Code (DTC) will be set.

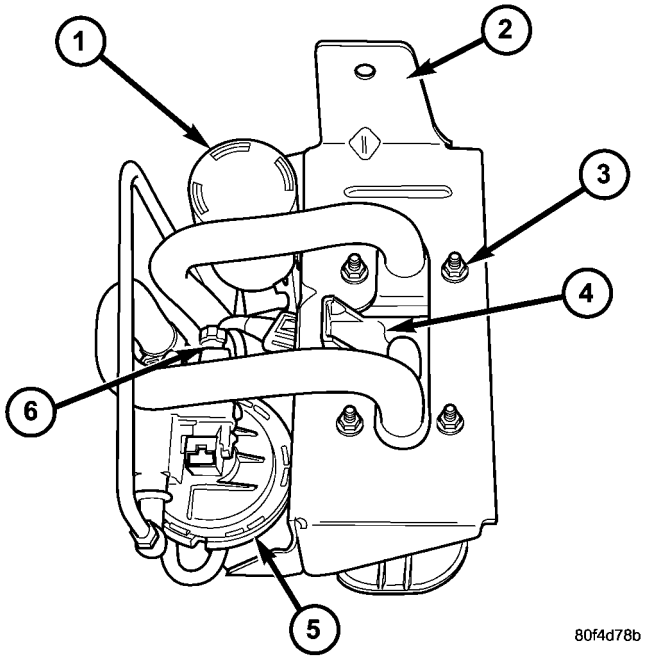

Fig. 15 COMMON SUPPORT BRACKET ASSEMBLY

1 - LDP FILTER
2 - COMMON SUPPORT BRACKET
3 - EVAP CANISTER NUTS (4)
4 - EVAP CANISTER
5 - LDP
6 - LDP ELEC. CONNECT.

(5) Remove common support bracket assembly (2) (Fig. 15) containing pump, pump filter and EVAP canister from vehicle. While lowering this assembly, disconnect pump electrical connector (6) (Fig. 15) at LDP pump. **Do not allow the assembly to hang from the wire harness.**

(6) Carefully separate hose at bottom of pump filter.

(7) Carefully remove vapor/vacuum lines at pump.

(8) If necessary, remove pump filter mounting bolt and remove filter.

(9) Remove EVAP canister from common support bracket by removing four nuts (3) (Fig. 15).

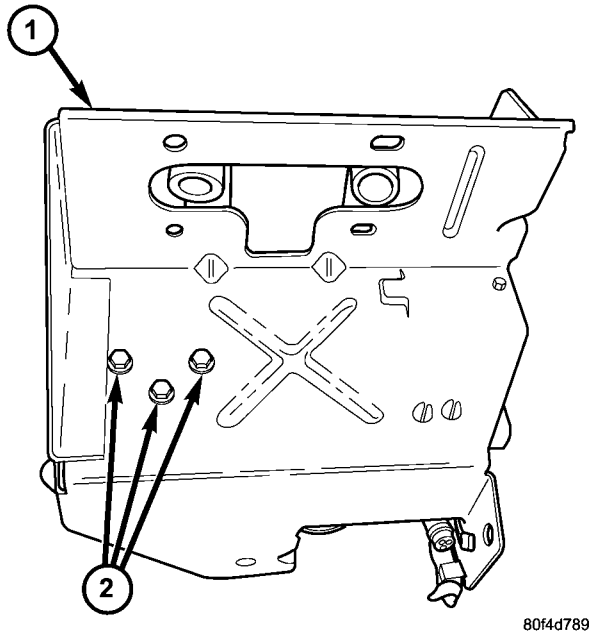

Fig. 16 LDP MOUNTING BOLTS

1 - COMMON SUPPORT BRACKET
2 - LDP MOUNTING BOLTS (3)

(10) Remove three pump mounting bolts (2) (Fig. 16) and remove pump from support bracket.

INSTALLATION

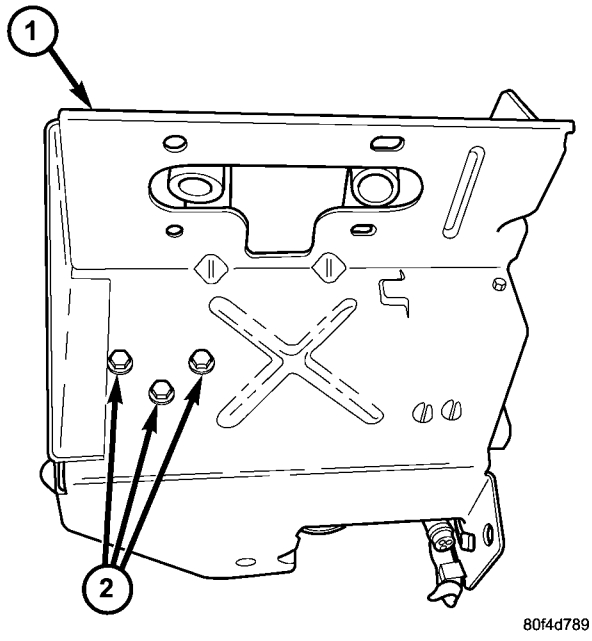

Fig. 17 LDP MOUNTING BOLTS

1 - COMMON SUPPORT BRACKET
2 - LDP MOUNTING BOLTS (3)

(1) Install pump and three mounting bolts (3) (Fig. 17) to common support bracket. Tighten bolts to 1 N·m (11 in. lbs.) torque.