9.0 CONNECTOR PINOUTS

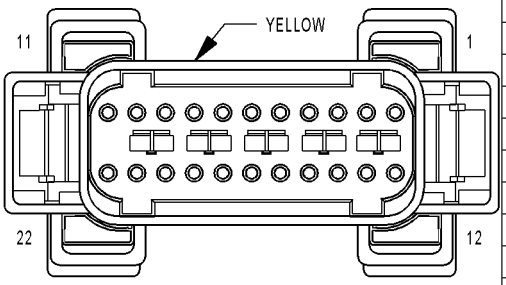

AIRBAG CONTROL MODULE

AIRBAG CONTROL MODULE - YELLOW 22 WAY

CAV	CIRCUIT	FUNCTION
1	R43 18LG/BR	DRIVER SQUIB 1 LINE 1
2	R45 18LG/OR	DRIVER SQUIB 1 LINE 2
3	-	-
4	-	-
5	R44 18LB/OR	PASSENGER SQUIB 1 LINE 2
6	R42 18LB/BR	PASSENGER SQUIB 1 LINE 1
7	-	-
8	G104 18VT/GY (PAD)	PASSENGER AIRBAG INDICATOR DRIVER
9	-	-
10	Z104 18BK/LG	GROUND
11	R106 18LG/LB (PAD)	PASSENGER AIRBAG MUX SWITCH SENSE
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-
17	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
18	D25 18WT/VT	PCI BUS
19	-	-
20	F100 18PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
21	-	-
22	R104 18LB/LG (PAD)	PASSENGER AIRBAG MUX SWITCH RETURN

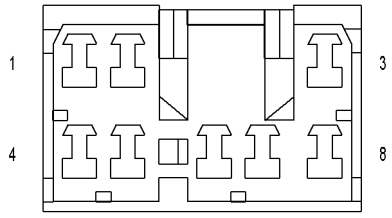

AXLE LOCK SWITCH (OFF-ROAD PACKAGE)

AXLE LOCK SWITCH (OFF-ROAD PACKAGE) - 8 WAY

CAV	CIRCUIT	FUNCTION
1	Z1 18BK	GROUND
2	E2 20OR/BR	PANEL LAMPS FEED
3	M21 20YL/BR	FUSED B(+)
4	G302 20VT/OR	LOCKER ENABLE SIGNAL 1
5	G303 20VT/DG	LOCKER ENABLE SIGNAL 2
6	G305 20VT/LG	REAR LOCKER REQUEST
7	G304 20VT/DB	FRONT LOCKER REQUEST
8	-	-

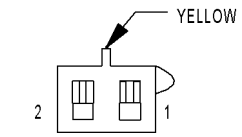

CLOCKSPRING C2

CLOCKSPRING C2 - YELLOW 2 WAY

CAV	CIRCUIT	FUNCTION
1	R43 18LG/BR	DRIVER SQUIB 1 LINE 1
2	R45 18LG/OR	DRIVER SQUIB 1 LINE 2