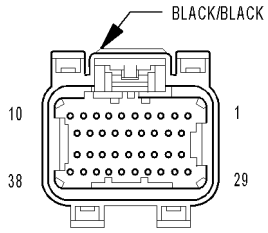

POWERTRAIN CONTROL MODULE C1

POWERTRAIN CONTROL MODULE C1 - BLACK/BLACK 38 WAY

CAV	CIRCUIT	FUNCTION
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
8	-	-
9	Z130 18BK/BR	GROUND
10	C20 20DB/YL (2.4L)	A/C REQUEST SIGNAL
10	C20 18DB/YL (4.0L)	A/C REQUEST SIGNAL
11	F1 18PK/WT (EXCEPT MAN 6 SPD TRANS)	FUSED IGNITION SWITCH OUTPUT (RUN-START)
11	F1 20PK/WT (MAN 6 SPD TRANS)	FUSED IGNITION SWITCH OUTPUT (RUN-START)
12	F1 18PK/WT (A/T)	FUSED IGNITION SWITCH OUTPUT (RUN-START)
13	K75 18DB/OR (EXCEPT MAN 6 SPD TRANS)	VEHICLE SPEED SENSOR SIGNAL
13	K75 20DB/OR (MAN 6 SPD TRANS)	VEHICLE SPEED SENSOR SIGNAL
14	-	-
15	-	-
16	-	-
17	-	-
18	Z131 18BK/DG	GROUND
19	-	-
20	G6 18VT/GY (EXCEPT MAN 6 SPD TRANS)	OIL PRESSURE SIGNAL
20	G6 20VT/GY (MAN 6 SPD TRANS)	OIL PRESSURE SIGNAL
21	-	-
22	G31 18VT/LG (EXCEPT MAN 6 SPD TRANS)	AAT SIGNAL
22	G31 20VT/LG (MAN 6 SPD TRANS)	AAT SIGNAL
23	-	-
24	-	-
25	D20 18WT/LG (EXCEPT MAN 6 SPD TRANS)	SCI RECEIVE (PCM)
25	D20 20WT/LG (MAN 6 SPD TRANS)	SCI RECEIVE (PCM)
26	D16 18WT/OR	SCI RECEIVE (TCM)
27	F856 18YL/PK (EXCEPT MAN 6 SPD TRANS)	5 VOLT SUPPLY
27	F856 20YL/PK (MAN 6 SPD TRANS)	5 VOLT SUPPLY
28	T56 18DG/LB	OVERDRIVE OFF SWITCH INDICATOR
29	A209 18RD	FUSED B(+)
30	F26 16PK/OR	IGNITION SWITCH OUTPUT (START)
31	K141 18DB/YL (EXCEPT MAN 6 SPD TRANS)	O2 1/2 SIGNAL
31	K141 20DB/YL (MAN 6 SPD TRANS)	O2 1/2 SIGNAL
32	K902 18BR/DG (EXCEPT MAN 6 SPD TRANS)	O2 RETURN (UPSTREAM)
32	K902 20BR/DG (MAN 6 SPD TRANS)	O2 RETURN (UPSTREAM)
33	K243 18BR (4.0L)	O2 2/2 SIGNAL
34	-	-
35	-	-
36	D21 18WT/BR (EXCEPT MAN 6 SPD TRANS)	SCI TRANSMIT (PCM/CAB)
36	D21 20WT/BR (MAN 6 SPD TRANS)	SCI TRANSMIT (PCM/CAB)
37	D15 18WT/DG	SCI RECEIVE (TCM)
38	D25 18WT/VT (EXCEPT MAN 6 SPD TRANS)	PCI BUS
38	D25 20WT/VT (MAN 6 SPD TRANS)	PCI BUS