ver: 2.29
date: 1 oct 93
file: key_itf.cc
date: Jan 12 1994
line: 544
err: 0x1User-Requested WARM Boot
Press MORE to switch between this display and the application screen.
Press F4 when done noting information.

or User Requested COLD Boot by pressing MORE YES at the same time.

ver: 2.29
date: 1 oct 99
file: key HND1.CC
date: Mar 8 2000
line: 1297
err: 0x1
User-Requested COLD Boot
Press MORE to switch between this display and the application screen.
Press F4 when done noting information.

If the DRBIII® should display any other error message, record the entire display and call the Star Center.

3.5.1 DRBIII® DOES NOT POWER UP

If the LED's do not light or no sound is emitted at start up, check for loose cable connections or a bad cable. Check the vehicle battery voltage (data link connector cavity 16). Check for proper ground connection at DLC cavity. A minimum of 11 volts is required to adequately power the DRBIII®.

If all connections are proper between the DRBI-II® and the vehicle or other devices, and the vehicle battery is fully charged, an inoperative DRBIII® may be the result of a faulty cable or vehicle wiring. For a blank screen, refer to the appropriate body diagnostics manual.

3.5.2 DISPLAY IS NOT VISIBLE

Low temperatures will affect the visibility of the display. Adjust the contrast to compensate for this condition.

3.5.3 SOME DISPLAY ITEMS READ "___"

This is caused by scrolling the DRBIII® display a single line up or down. The line which was scrolled onto the screen might read "___". Use the page down or page up function to display the information.

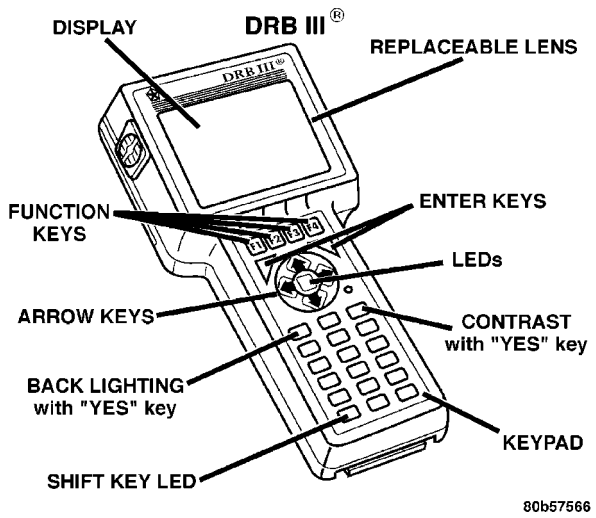

3.6 TRANSMISSION SIMULATOR (MILLER TOOL # 8333) AND ELECTRONIC TRANSMISSION ADAPTER KIT (MILLER TOOL #8333-1A)

NOTE: Remove the starter Relay when using the transmission simulator
***Failure to remove the Starter Relay can cause a PCM - No Response condition.**
***The removal of the Starter Relay will also prevent the engine from starting in gear.**
***The Transmission Simulator will not accurately diagnose intermittent faults.**

The transmission simulator, simply put, is an electronic device that simulates the electronic functions of any EATX or NGC controlled transmission. The Simulators basic function is to aid the technician in determining if an internal transmission problem exists or if the problem resides in the vehicle wiring or control module. It is only useful for electrical problems. It will not aid in the diagnosis of a failed mechanical component, but it can tell you that the control module and wiring are working properly and that the problem is internal.

The ignition switch should be in the lock position before attempting to install the simulator. Follow all instructions included with the simulator. If the feedback from the simulator is in doubt, you can verify it's operation by installing it on a known good vehicle. A "known good vehicle" would be defined as a vehicle that does not set any DTC's and drives and shifts as expected.

One important point to remember is that the Simulator receives it's power from the Trans Relay Output circuit. If the transmission system is in Limp-in (Relay open), the simulator will not operate. This is not really an indication of a problem,