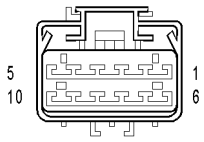

TRANSMISSION RANGE SENSOR

TRANSMISSION RANGE SENSOR - 10 WAY

CAV	CIRCUIT	FUNCTION
1	F102 20PK/DB	FUSED IGNITION SWITCH OUTPUT (RUN)
2	-	-
3	T13 18DG/VT	SPEED SENSOR GROUND
4	T54 18DG/OR	TRANSMISSION TEMPERATURE SENSOR SIGNAL
5	-	-
6	L1 20WT/LG	BACK-UP LAMP FEED
7	T1 18DG/LB	TRS T1 SENSE
8	T3 18DG/DB	TRS T3 SENSE
9	T42 18DG/YL	TRS T42 SENSE
10	T41 18YL/DB	TRS T41 SENSE (P/N)

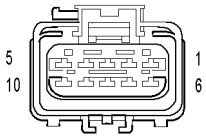

TRANSMISSION SOLENOID/ PRESSURE SWITCH ASSEMBLY

TRANSMISSION SOLENOID/PRESSURE SWITCH ASSEMBLY - 10 WAY

CAV	CIRCUIT	FUNCTION
1	T60 16YL/GY	OD SOLENOID CONTROL
2	T59 16YL/LB	UD SOLENOID CONTROL
3	T16 16YL/OR	TRANSMISSION CONTROL RELAY OUTPUT
4	T19 16YL/DB	2-4 SOLENOID CONTROL
5	T47 18YL/DG	2-4 PRESSURE SWITCH SENSE
6	T9 18DG/TN	OD PRESSURE SWITCH SENSE
7	T20 16DG/WT	L/R SOLENOID CONTROL
8	-	-
9	-	-
10	T50 18YL/TN	L/R PRESSURE SWITCH SENSE

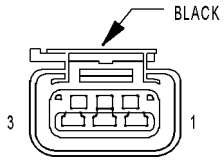

VEHICLE SPEED SENSOR

VEHICLE SPEED SENSOR - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	F856 20YL/PK	5 VOLT SUPPLY
2	K900 20DB/DG	SENSOR GROUND
3	K75 18DB/OR	VEHICLE SPEED SENSOR SIGNAL