10.3 42 RLE

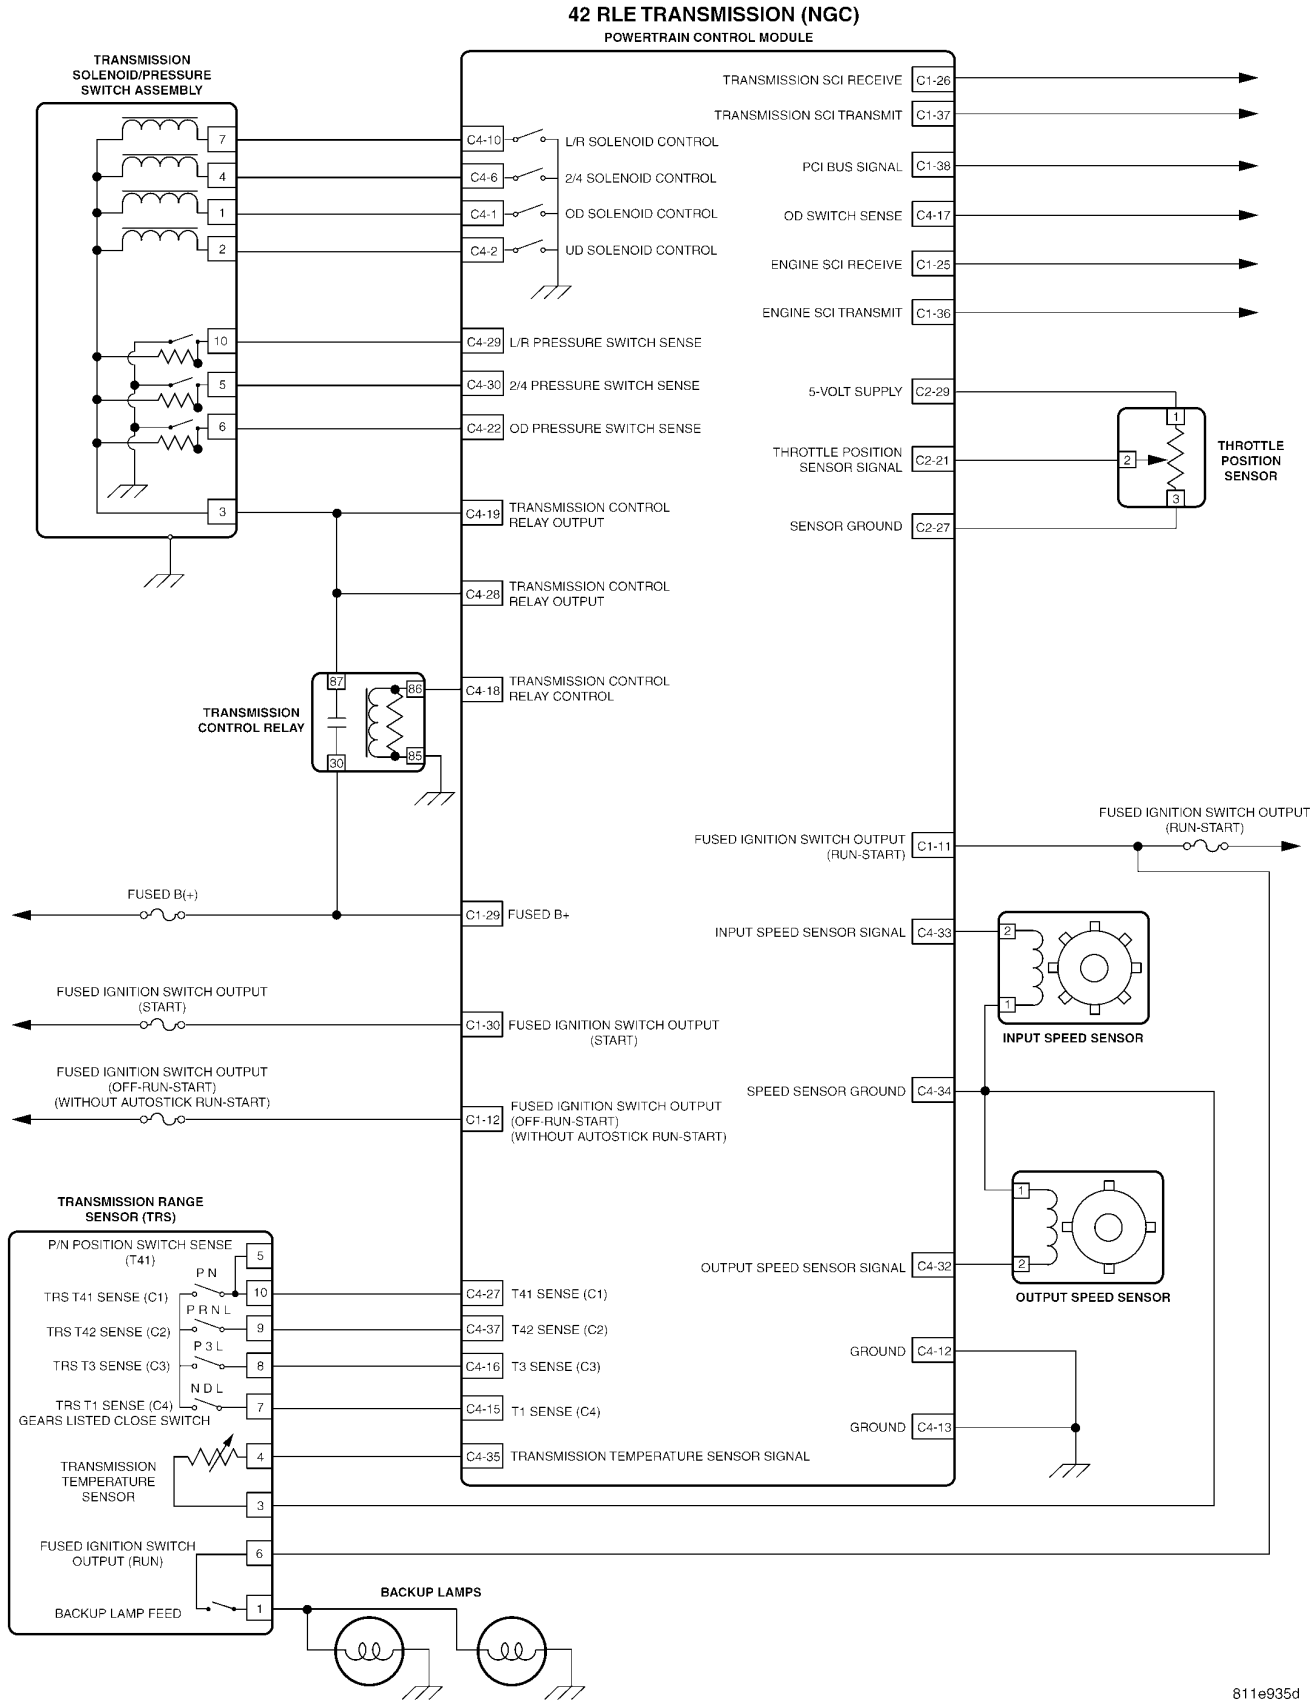
42 RLE TRANSMISSION (NGC)
POWERTRAIN CONTROL MODULE
TRANSMISSION SOLENOID/PRESSURE SWITCH ASSEMBLY
TRANSMISSION SCI RECEIVE C1-26
TRANSMISSION SCI TRANSMIT C1-37
PCI BUS SIGNAL C1-38
OD SWITCH SENSE C4-17
ENGINE SCI RECEIVE C1-25
ENGINE SCI TRANSMIT C1-36
C4-10 L/R SOLENOID CONTROL
C4-6 2/4 SOLENOID CONTROL
C4-1 OD SOLENOID CONTROL
C4-2 UD SOLENOID CONTROL
C4-29 L/R PRESSURE SWITCH SENSE
C4-30 2/4 PRESSURE SWITCH SENSE
C4-22 OD PRESSURE SWITCH SENSE
5-VOLT SUPPLY C2-29
THROTTLE POSITION SENSOR SIGNAL C2-21
SENSOR GROUND C2-27
THROTTLE POSITION SENSOR
C4-19 TRANSMISSION CONTROL RELAY OUTPUT
C4-28 TRANSMISSION CONTROL RELAY OUTPUT
C4-18 TRANSMISSION CONTROL RELAY CONTROL
TRANSMISSION CONTROL RELAY
FUSED IGNITION SWITCH OUTPUT (RUN-START)
FUSED IGNITION SWITCH OUTPUT (RUN-START) C1-11
FUSED B(+)
C1-29 FUSED B+
INPUT SPEED SENSOR SIGNAL C4-33
INPUT SPEED SENSOR
FUSED IGNITION SWITCH OUTPUT (START)
C1-30 FUSED IGNITION SWITCH OUTPUT (START)
FUSED IGNITION SWITCH OUTPUT (OFF-RUN-START) (WITHOUT AUTOSTICK RUN-START)
C1-12 FUSED IGNITION SWITCH OUTPUT (OFF-RUN-START) (WITHOUT AUTOSTICK RUN-START)
SPEED SENSOR GROUND C4-34
TRANSMISSION RANGE SENSOR (TRS)
P/N POSITION SWITCH SENSE (T41)
TRS T41 SENSE (C1)
TRS T42 SENSE (C2)
TRS T3 SENSE (C3)
TRS T1 SENSE (C4)
GEARS LISTED CLOSE SWITCH
C4-27 T41 SENSE (C1)
C4-37 T42 SENSE (C2)
C4-16 T3 SENSE (C3)
C4-15 T1 SENSE (C4)
OUTPUT SPEED SENSOR SIGNAL C4-32
OUTPUT SPEED SENSOR
GROUND C4-12
GROUND C4-13
TRANSMISSION TEMPERATURE SENSOR
C4-35 TRANSMISSION TEMPERATURE SENSOR SIGNAL
FUSED IGNITION SWITCH OUTPUT (RUN)
BACKUP LAMP FEED
BACKUP LAMPS
811e935d