11.6 TRANSMISSION TEMPERATURE SENSOR

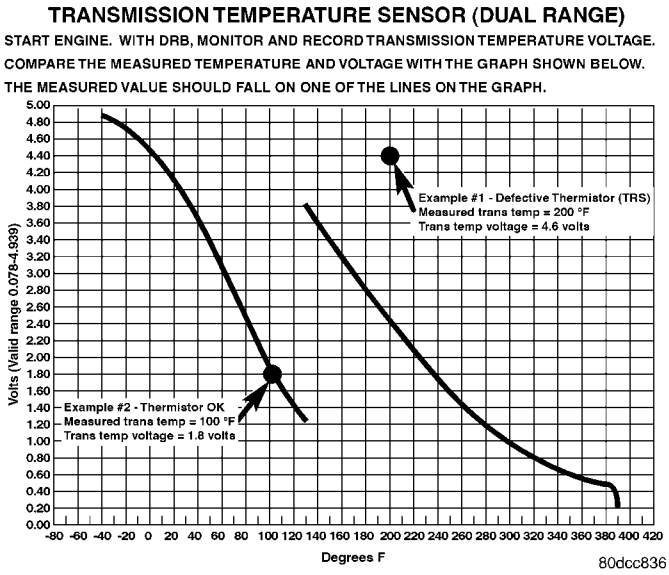

NORMAL READING RANGE AT IDLE

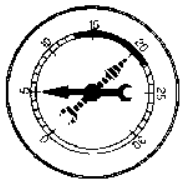

BLOWN HEAD GASKET AT IDLE

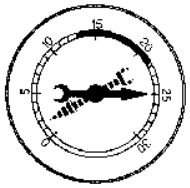

NORMAL READING RAPID ACCELERATION/ DECELERATION

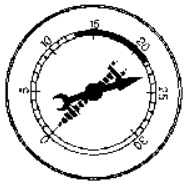

WORN RINGS OR DILUTED OIL RAPID ACCELERATION/ DECELERATION

LATE VALVE TIMING, VACUUM LEAK AT IDLE

RESTRICTED EXHAUST (DROPS TOWARD ZERO AS ENGINE RPM INCREASES)

POOR VALVE SEATING AT IDLE

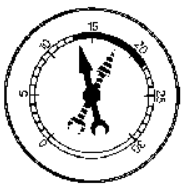

STICKING VALVE AT IDLE

WORN VALVE GUIDES (STEADIES AS ENGINE SPEED INCREASES)

WORN VALVE SPRINGS (MORE PRONOUNCED AS ENGINE SPEED INCREASES)

0920606