HOISTING

STANDARD PROCEDURE - HOISTING RECOMMENDATIONS

Refer to the Owner's Manual for emergency vehicle lifting procedures.

When properly positioned, a floor jack can be used to lift a Jeep vehicle (Fig. 5). Support the vehicle in the raised position with jack stands at the front and rear ends of the frame rails.

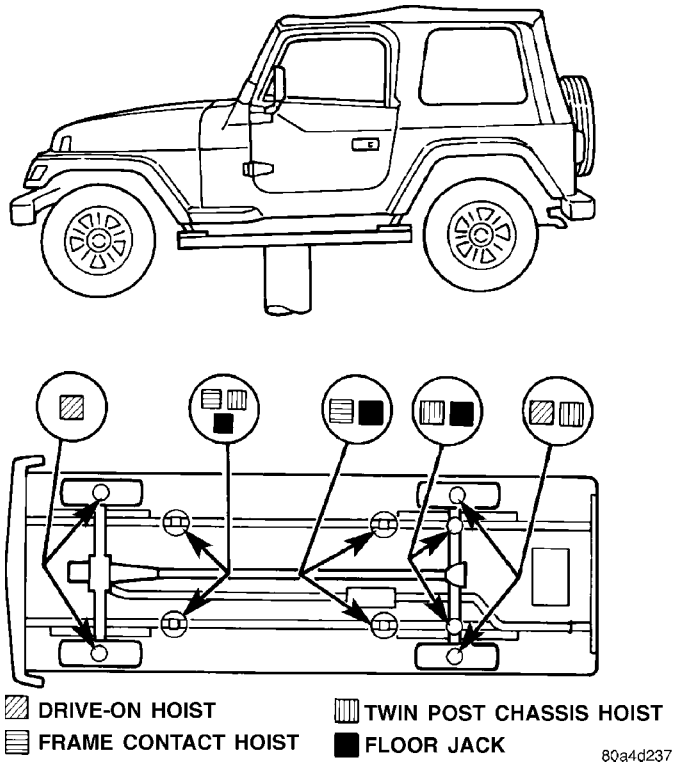

Fig. 5 Vehicle Lifting Locations

CAUTION: Do not attempt to lift a Jeep vehicle with a floor jack positioned under:

- An axle tube.
- A body side sill.
- A steering linkage component.
- A drive shaft.
- The engine or transmission oil pan.
- The fuel tank.
- A front suspension arm.
- Transfer case.

NOTE: Use the correct sub-frame rail or frame rail lifting locations only.

HOIST

Refer to the Owner's Manual for emergency vehicle lifting procedures.

A vehicle can be lifted with:

- A single-post, frame-contact hoist.
- A twin-post, chassis hoist.
- A ramp-type, drive-on hoist.

NOTE: When a frame-contact type hoist is used, verify that the lifting pads are positioned properly.

WARNING: THE HOISTING AND JACK LIFTING POINTS PROVIDED ARE FOR A COMPLETE VEHICLE. WHEN A CHASSIS OR DRIVETRAIN COMPONENT IS REMOVED FROM A VEHICLE, THE CENTER OF GRAVITY IS ALTERED MAKING SOME HOISTING CONDITIONS UNSTABLE. PROPERLY SUPPORT OR SECURE VEHICLE TO HOISTING DEVICE WHEN THESE CONDITIONS EXIST.

TOWING

STANDARD PROCEDURE - TOWING RECOMMENDATIONS

DaimlerChrysler Corporation recommends that a 4WD vehicle be transported on a flat-bed device. A Wheel-lift or front end attached Sling-type device can be used provided all the wheels are lifted off the ground using tow dollies (Fig. 6) and (Fig. 7).

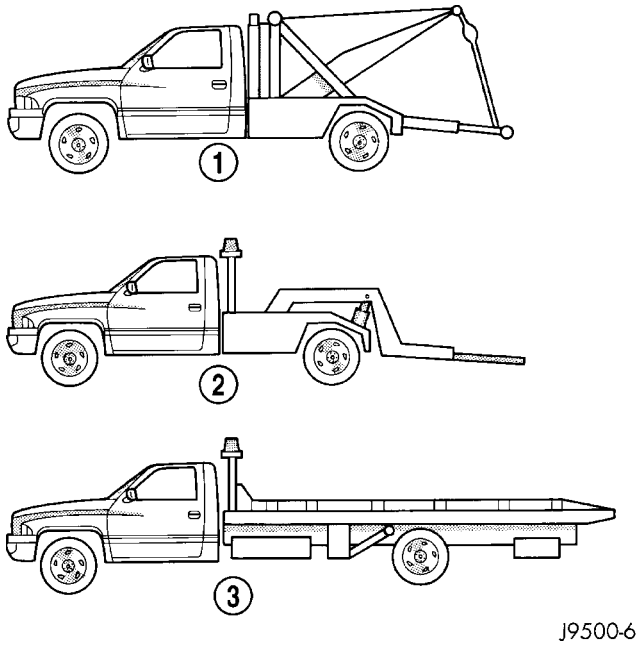

Fig. 6 Tow Vehicles With Approved Equipment

1 - SLING TYPE
2 - WHEEL LIFT
3 - FLAT BED

SAFETY PRECAUTIONS

- Secure loose and protruding parts.