WHEEL ALIGNMENT (Continued)

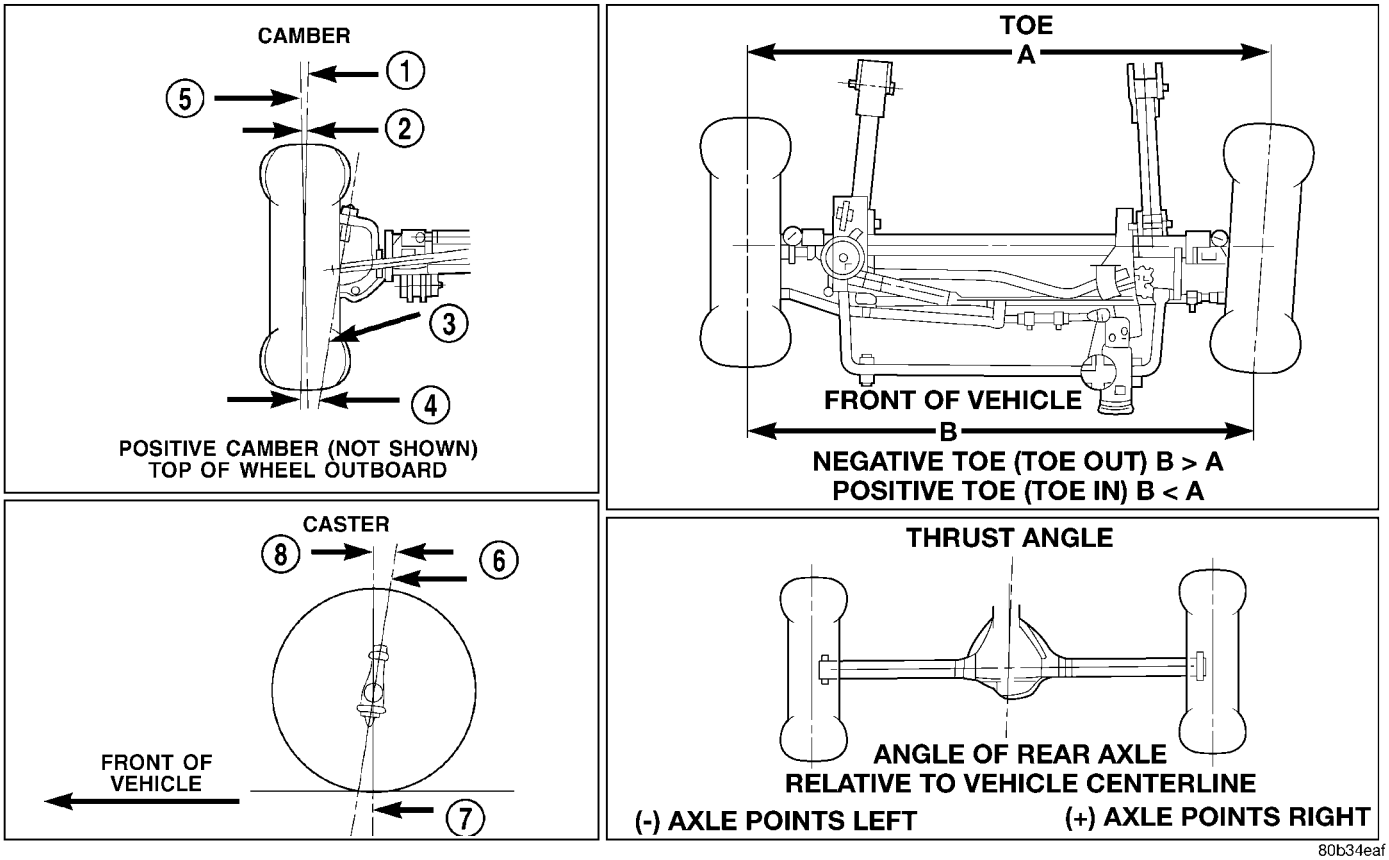

Fig. 1 Wheel Alignment Measurements

1 - WHEEL CENTERLINE
2 - NEGATIVE CAMBER ANGLE
3 - PIVOT CENTERLINE
4 - SCRUB RADIUS
5 - TRUE VERTICAL
6 - KING PIN
7 - VERTICAL
8 - POSITIVE CASTER

component(s) must be replaced to correct the steering axis inclination angle (Fig. 1)

- **THRUST ANGLE** is the angle of the rear axle relative to the centerline of the vehicle. Incorrect thrust angle can cause off-center steering and excessive tire wear. This angle is not adjustable, damaged component(s) must be replaced to correct the thrust angle (Fig. 1)

DIAGNOSIS AND TESTING - SUSPENSION AND STEERING SYSTEM

CONDITION	POSSIBLE CAUSES	CORRECTION
FRONT END NOISE	1. Loose or worn wheel bearings.	1. Adjust or replace wheel bearings.
	2. Loose or worn steering or suspension components.	2. Tighten or replace components as necessary.
EXCESSIVE PLAY IN STEERING	1. Loose or worn wheel bearings.	1. Adjust or replace wheel bearings.
	2. Loose or worn steering or suspension components.	2. Tighten or replace components as necessary.
	3. Loose or worn steering gear.	3. Adjust or replace steering gear.