HUB / BEARING (Continued)

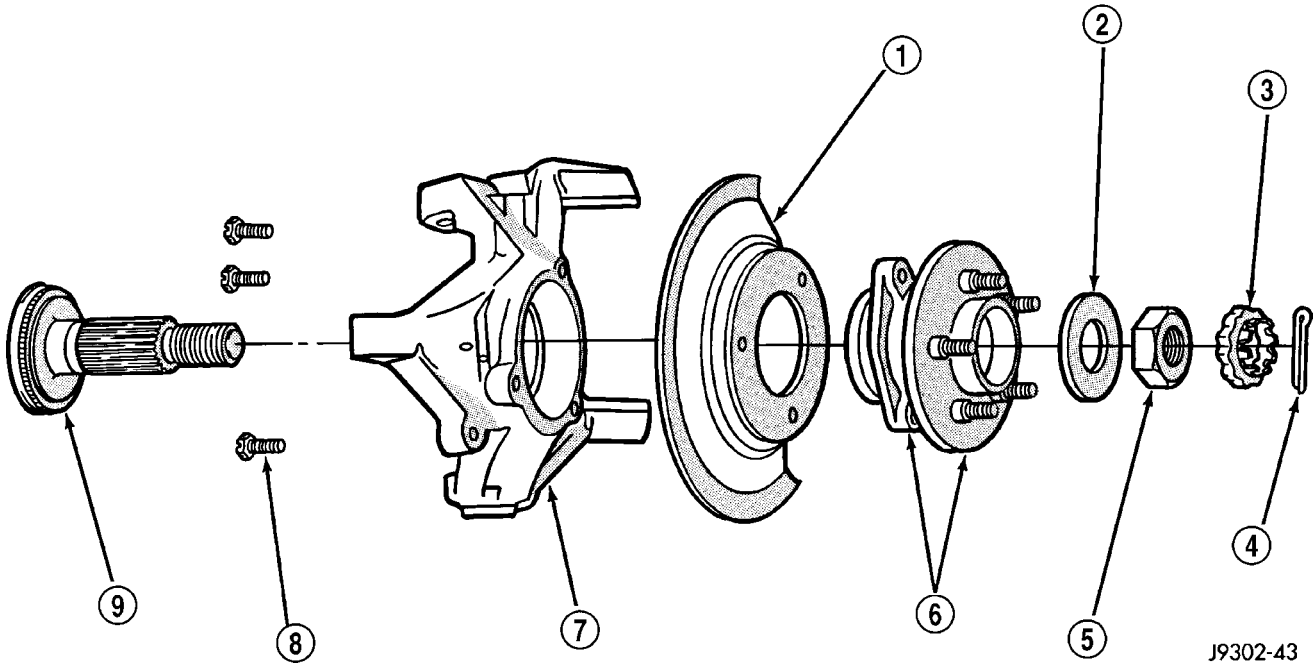

Fig. 3 Hub Bearing & Knuckle

1 - BRAKE SHIELD
2 - WASHER
3 - RETAINER
4 - COTTER PIN
5 - NUT
6 - HUB AND BEARING ASSEMBLY
7 - STEERING KNUCKLE
8 - BOLT
9 - TONE WHEEL (ABS)

OPERATION

The hub/bearing assembly is mounted to the steering knuckle and is retained by three mounting bolts accessible from the back of the steering knuckle. The hub/bearing unit is not serviceable and must be replaced as an assembly if the bearing or the hub is determined to be defective.

REMOVAL

(1) Raise and support the vehicle.

(2) Remove the wheel and tire assembly.

(3) Remove the brake caliper, rotor and ABS wheel speed sensor, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - REMOVAL).

(4) Remove the cotter pin, nut retainer and axle hub nut (Fig. 3).

(5) Remove the hub bearing mounting bolts from the back of the steering knuckle. Remove hub bearing from the steering knuckle and off the axle shaft.

INSTALLATION

(1) Install the hub bearing and brake dust shield to the knuckle.

(2) Install the hub bearing to knuckle bolts and tighten to 102 N·m (75 ft. lbs.).

(3) Install the hub washer and nut. Tighten the hub nut to 237 N·m (175 ft. lbs.). Install the nut retainer and a new cotter pin.

(4) Install the brake rotor, caliper and ABS wheel speed sensor, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - INSTALLATION).

(5) Install the wheel and tire assembly. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).

(6) Remove support and lower the vehicle.