JOUNCE BUMPER

DESCRIPTION

The jounce bumpers are mounted under the frame rails inside of the coil springs.

KNUCKLE

REMOVAL

Ball stud service procedures below require removal of the hub bearing and axle shaft. Removal and installation of upper and lower ball studs require the use of Tool Kit 6289.

(1) Remove hub bearing and axle shaft. (Refer to 2 - SUSPENSION/FRONT/HUB / BEARING - REMOVAL) (Refer to 3 - DIFFERENTIAL & DRIVELINE/FRONT AXLE - 181FBI/AXLE SHAFTS - REMOVAL).

(2) Disconnect the tie-rod or drag link from the steering knuckle arm,(Refer to 19 - STEERING/LINKAGE/TIE ROD END - REMOVAL) OR (Refer to 19 - STEERING/LINKAGE/DRAG LINK - REMOVAL).

(3) Remove the cotter pins from the upper and lower ball studs.

(4) Remove the upper and lower ball stud nuts.

(5) Using special tool C-4150A seperate the ball joints from the steering knuckle. Remove knuckle from ball studs (Fig. 4).

INSTALLATION

Ball stud service procedures below require removal of the hub bearing and axle shaft. Removal and installation of upper and lower ball studs require the use of Tool Kit 6289.

(1) Position the steering knuckle on the ball studs.

(2) Install and tighten the bottom retaining nut to 109 N·m (80 ft. lbs.) torque. Install new cotter pin.

(3) Install and tighten the top retaining nut to 101 N·m (75 ft. lbs.) torque. Install new cotter pin.

(4) Install the hub bearing and axle shaft. (Refer to 2 - SUSPENSION/FRONT/HUB / BEARING - INSTALLATION) (Refer to 3 - DIFFERENTIAL & DRIVELINE/FRONT AXLE - 181FBI/AXLE SHAFTS - INSTALLATION).

(5) Connect the tie-rod or drag link end to the steering knuckle arm,(Refer to 19 - STEERING/LINKAGE/TIE ROD END - INSTALLATION) OR (Refer to 19 - STEERING/LINKAGE/DRAG LINK - INSTALLATION).

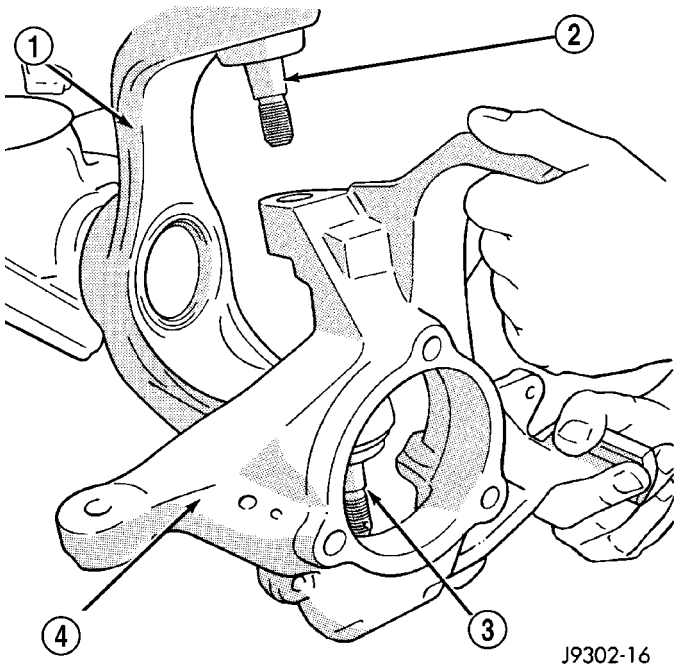

Fig. 4 Steering Knuckle Removal/Installation

1 - AXLE YOKE
2 - UPPER BALL STUD
3 - LOWER BALL STUD
4 - STEERING KNUCKLE

LOWER BALL JOINT

REMOVAL

Ball stud service procedures below require removal of the hub bearing and axle shaft. (Refer to 2 - SUSPENSION/FRONT/HUB / BEARING - REMOVAL) (Refer to 3 - DIFFERENTIAL & DRIVELINE/FRONT AXLE - 181FBI/AXLE SHAFTS - REMOVAL). Removal and installation of upper and lower ball studs require the use of Tool Kit 6289.

(1) Position tools as shown to remove and install ball stud (Fig. 5).