# STABILIZER BAR

## DESCRIPTION

The spring steel bar extends across the top of the chassis frame rails. Links are connected from the bar to the axle brackets. The stabilizer bar and links are isolated by rubber bushings.

## OPERATION

The stabilizer bar is used to control vehicle body roll during turns. The bar helps to control the vehicle body in relationship to the suspension.

## REMOVAL

(1) Remove upper link nuts (Fig. 9) and separate the links from the stabilizer bar with Remover MB-991113.

(2) Remove front bumper valence.

(3) Remove stabilizer retainer bolts (Fig. 9)and remove retainers.

(4) Remove stabilizer bar.

(5) Remove lower link nuts and bolts and remove links (Fig. 9).

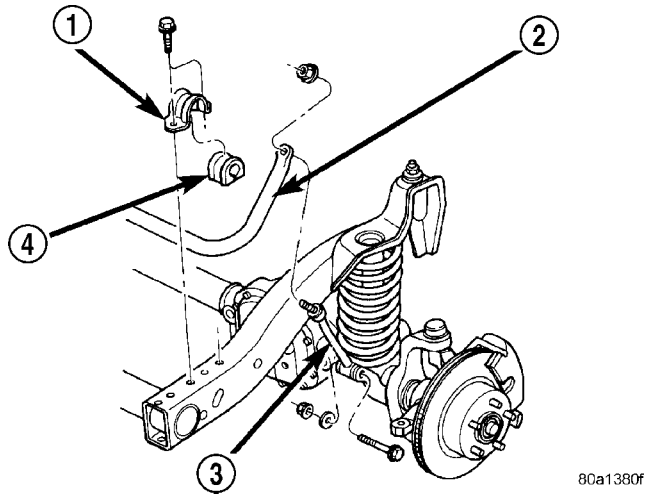


***Fig. 9 Stabilizer Bar***

1 - RETAINER
2 - STABILIZER BAR
3 - LINK
4 - BUSHING

## INSTALLATION

(1) Center stabilizer bar on top of the frame rails and install retainers and bolts. Tighten bolts to 61 N·m (45 ft. lbs.).

(2) Position links on axle brackets and into the stabilizer bar. Install lower link bolts and nuts and tighten to 102 N·m (75 ft. lbs.).

(3) Install upper link nuts and tighten to 61 N·m (45 ft. lbs.).

(4) Install bumper valence.

# TRACK BAR

## DESCRIPTION

The bar is attached to a frame rail bracket with a ball stud and an axle bracket with a bushing. The bar is forged and has non replaceable isolator bushing and ball stud.

## OPERATION

The track bar is used to control front axle lateral movement and provides cross car location of the axle assembly.

## REMOVAL

(1) Raise and support the vehicle.

(2) Remove the cotter pin and nut from the ball stud end at the frame rail bracket (Fig. 10).

(3) Use a universal puller tool to separate the track bar ball stud from the frame rail bracket.

(4) Remove the bolt and flag nut from the axle bracket (Fig. 10). Remove the track bar.

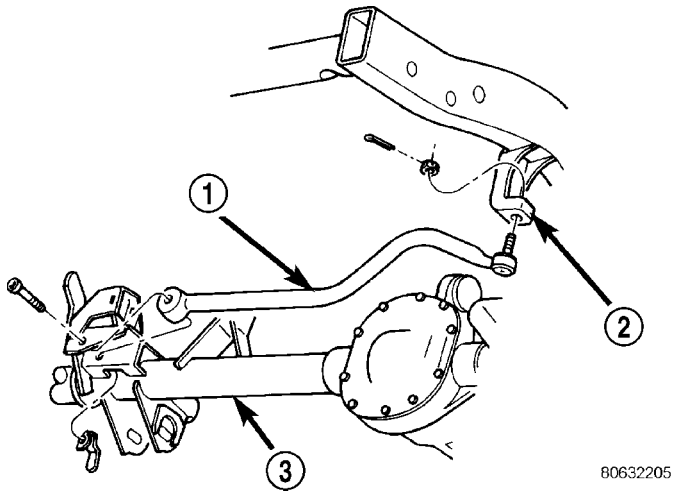


***Fig. 10 Track Bar***

1 - TRACK BAR
2 - FRAME BRACKET
3 - FRONT AXLE

## INSTALLATION

(1) Install the track bar at axle tube bracket. Loosely install the retaining bolt and flag nut.

(2) It may be necessary to pry the axle assembly over to install the track bar at the frame rail. Install track bar at the frame rail bracket. Install the retaining nut on the stud.

(3) Tighten the ball stud nut to 81N·m (60 ft. lbs.) and install a new cotter pin.

(4) Remove the supports and lower the vehicle.

(5) Tighten the bolt at the axle bracket to 47 N·m (40 ft. lbs.).