TRACK BAR (Continued)

(6) Check alignment if a new track bar was installed. (Refer to 2 - SUSPENSION/WHEEL ALIGNMENT - STANDARD PROCEDURE).

UPPER BALL JOINT

REMOVAL

Ball stud service procedures below require removal of the hub bearing and axle shaft. (Refer to 2 - SUSPENSION/FRONT/HUB / BEARING - REMOVAL) (Refer to 3 - DIFFERENTIAL & DRIVELINE/ FRONT AXLE - 181FBI/AXLE SHAFTS - REMOVAL). Removal and installation of upper and lower ball studs require the use of Tool Kit 6289.

(1) Position tools as shown to remove and install ball stud (Fig. 11).

UPPER CONTROL ARM

DESCRIPTION

The upper suspension arms are steel and use rubber bushings at each end of the arm. The arms mount to the frame rail bracket and the axle brackets.

OPERATION

The arm and bushings provide location and react to loads from the axle. The bushings provide isolation from the axle.

REMOVAL

(1) Raise and support the vehicle.

(2) Remove the upper suspension arm nut and bolt at the axle bracket (Fig. 7).

(3) Remove the nut and bolt at the frame rail and remove the upper suspension arm.

INSTALLATION

(1) Position the upper suspension arm at the axle and frame rail.

(2) Install the bolts and finger tighten the nuts.

(3) Remove the supports and lower the vehicle.

(4) Tighten the nut at the axle and frame brackets to 81 N·m (60 ft. lbs.).

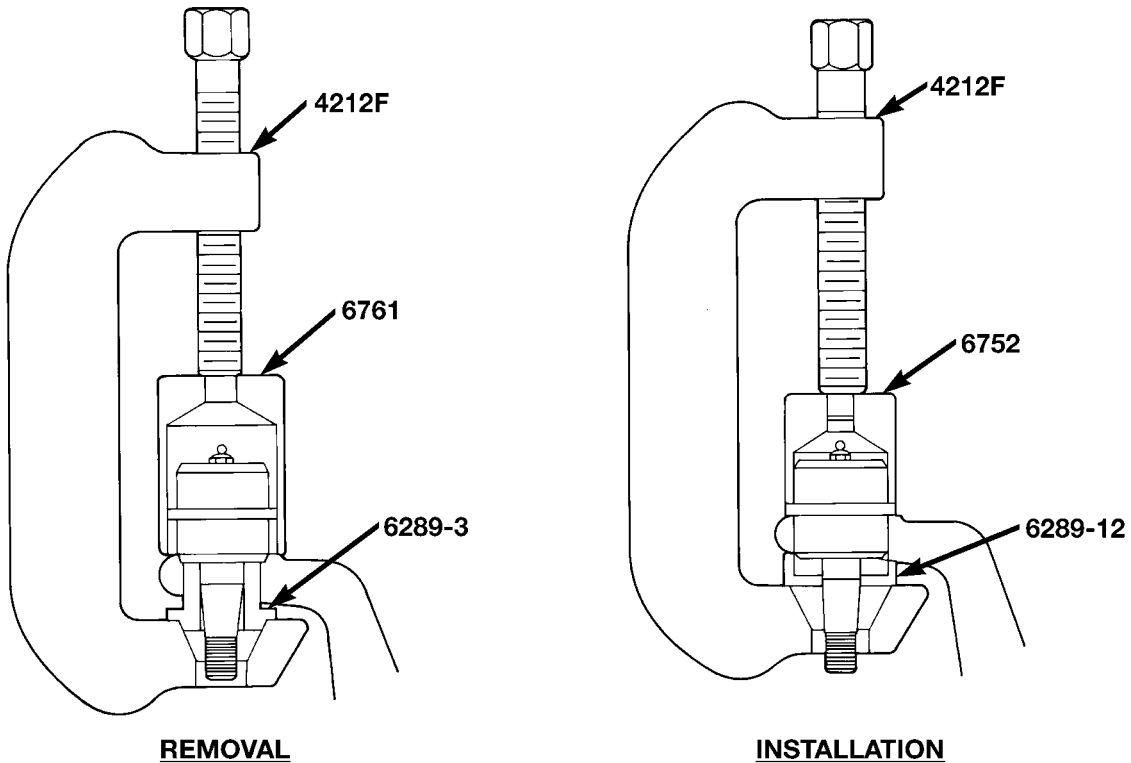

Fig. 11 Upper