REAR (Continued)

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Suspension Arm Lower Frame Bracket Nut	203	150	—
Suspension Arm Upper Axle Bracket Nut	75	55	—
Suspension Arm Upper Frame Bracket Bolt	75	55	—
Stabilizer Bar Retainer Bolts	54	40	—
Stabilizer Bar Link Nut/Bolt	54	40	—
Track Bar Frame Bracket Nut	100	74	—
Track Bar Axle Bracket Bolt	100	74	—

JOUNCE BUMPER

DESCRIPTION

The jounce bumpers are mounted inside the coil spring to the frame rail.

OPERATION

The jounce bumpers are used to limit suspension travel in compression.

LOWER CONTROL ARM

DESCRIPTION

The lower suspension arms are steel and use bushings at each end of the arm. The arms are mounted from the frame to the axle brackets.

OPERATION

The bushings isolation axle and road noise. The arm and bushings provide location and react to loads from the axle.

REMOVAL

(1) Raise and support the vehicle.

(2) Remove the lower suspension arm nut and bolt at the axle bracket (Fig. 1).

(3) Remove the nut and bolt at the frame rail mount (Fig. 2) and remove the lower suspension arm.

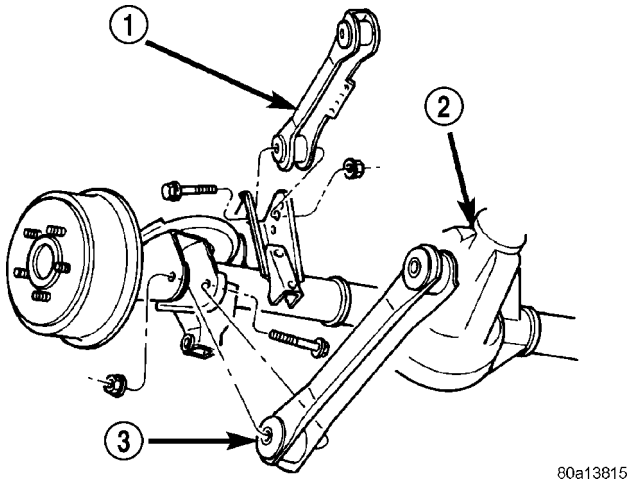

Fig. 1 Upper & Lower Suspension Arms

1 - UPPER SUSPENSION ARM
2 - REAR AXLE
3 - LOWER SUSPENSION ARM

INSTALLATION

(1) Position the lower suspension arm in the axle bracket and frame rail mount.

(2) Install the mounting bolts and finger tighten the nuts.

(3) Remove the supports and lower the vehicle.

(4) Tighten the lower suspension arm nuts to 203 N·m (150 ft. lbs.).