SPRING (Continued)

PENSION/REAR/STABILIZER BAR - REMOVAL) (Refer to 2 - SUSPENSION/REAR/SHOCK - REMOVAL).

(3) Disconnect the track bar from the frame rail bracket. (Refer to 2 - SUSPENSION/REAR/TRACK BAR - REMOVAL).

(4) Lower the axle until the spring is free from the upper mount seat and remove the spring.

INSTALLATION

NOTE: Springs can be install with either end up.

(1) Position the coil spring on the axle pad isolator.

(2) Raise the axle into position until the spring seats on the upper isolator.

(3) Connect the stabilizer bar links and shock absorbers to the axle bracket. Connect the track bar to the frame rail bracket.

(4) Remove the supports and lower the vehicle.

(5) Tighten the stabilizer bar links, shock absorbers and track bar to specified torque.

STABILIZER BAR

DESCRIPTION

The spring steel bar extends across the axle and mounts to bracket on the axle. Links are connected from the bar to the side of the frame rail. The stabilizer bar and links are isolated by rubber bushings.

OPERATION

The stabilizer bar is used to control vehicle body roll during turns. The bar helps to control the vehicle body in relationship to the suspension.

REMOVAL

(1) Raise and support the vehicle.

(2) Remove the stabilizer bar link bolts from the frame mounts (Fig. 4).

(3) Remove the link bolts from the stabilizer bar.

(4) Remove the stabilizer bar retainer bolts and retainers from the axle mounts (Fig. 5) and remove the bar.

INSTALLATION

(1) Install the stabilizer bar on the axle mounts and install the retainers and bolts.

NOTE: Ensure the bar is centered with equal spacing on both sides and is positioned above the differential housing (Fig. 5).

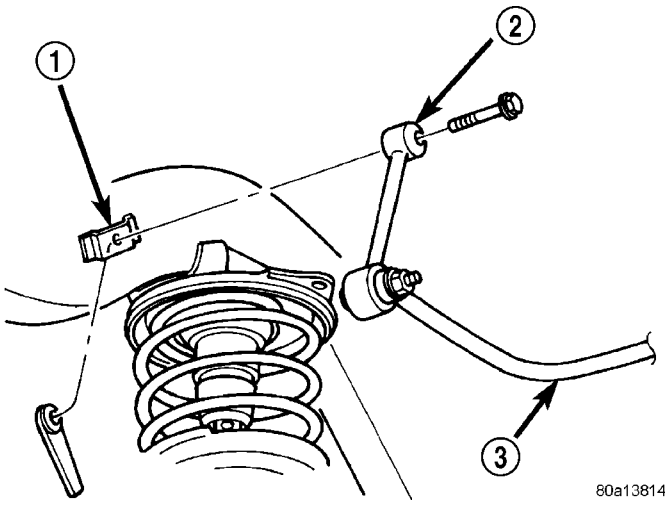

Fig. 4 Stabilizer Bar Link

1 - FRAME MOUNT
2 - LINK
3 - STABILIZER BAR

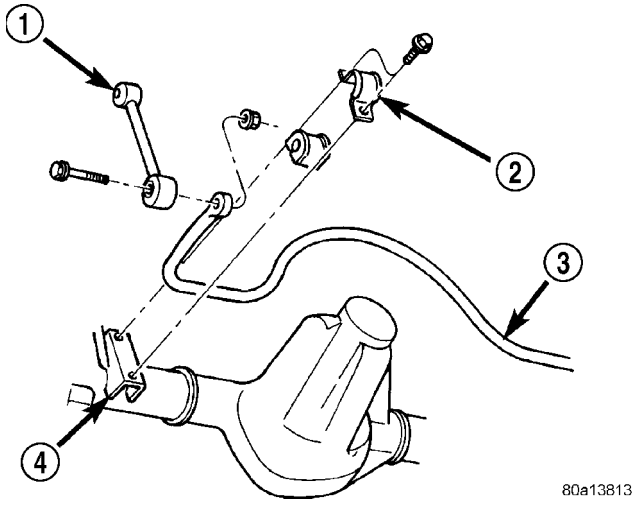

Fig. 5 Stabilizer Bar

1 - LINK
2 - RETAINER
3 - STABILIZER BAR
4 - AXLE MOUNT

(2) Tighten the retainer bolts to 54 N·m (40 ft. lbs.).

(3) Install the links onto the stabilizer bar and frame mounts. Install the bolts and nuts finger tight.

(4) Remove support and lower vehicle.

(5) Tighten the link nuts/bolts to 54 N·m (40 ft. lbs.).