TRACK BAR

DESCRIPTION

The bar is attached to a frame rail bracket and axle bracket. The bar has bushings at both ends.

OPERATION

The track bar is used to control rear axle lateral movement.

REMOVAL

(1) Raise and support the vehicle.
(2) Remove the bolt and nut from the frame rail bracket (Fig. 6).
(3) Remove the bolt from the axle bracket (Fig. 6) and remove the track bar.

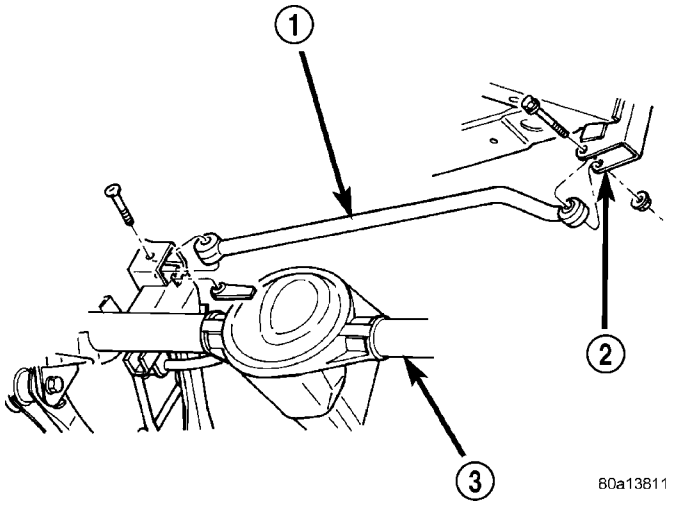

Fig. 6 Rear Track Bar

1 - TRACK BAR
2 - FRAME BRACKET
3 - REAR AXLE

INSTALLATION

(1) Install the track bar in the axle bracket and install the bolt loosely.
(2) Install the track bar in the frame rail bracket and loosely install the bolt and nut.

NOTE: It may be necessary to pry the axle assembly over to install the track bar.

(3) Remove supports and lower the vehicle.
(4) Tighten the track bar nut/bolt at both ends to 100 N·m (74 ft. lbs.).

UPPER CONTROL ARM

REMOVAL

(1) Raise and support the vehicle.
(2) Remove the parking brake cable/bracket and ABS wiring bracket from the arm if equipped (Fig. 7).

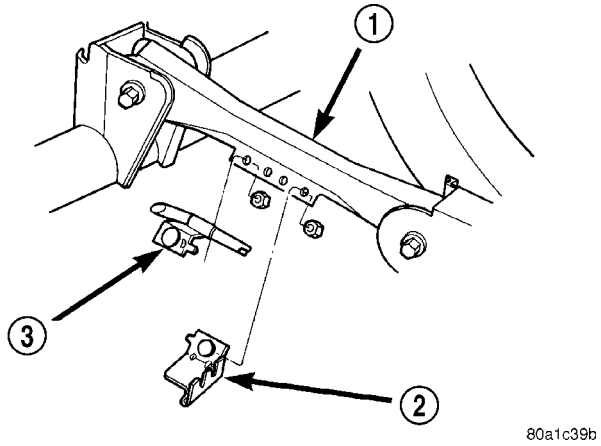

Fig. 7 Parking Brake Cable/Bracket And Wiring Bracket

1 - UPPER SUSPENSION ARM
2 - WIRING BRACKET
3 - PARKING BRAKE CABLE BRACKET

(3) Remove the upper suspension arm nut and bolt from the axle bracket (Fig. 1).
(4) Remove the nut and bolt from the frame rail bracket (Fig. 2)and remove the upper suspension arm.

INSTALLATION

(1) Position the upper suspension arm in the axle bracket and frame rail bracket.
(2) Install the bolts and finger tighten the nuts.
(3) Install the parking brake cable/bracket and ABS wiring bracket on the arm if equipped.
(4) Remove the supports and lower the vehicle.
(5) Tighten the upper suspension arm frame rail bracket bolt to 75 N·m (55 ft. lbs.).
(6) Tighten the upper suspension arm axle bracket nut to 75 N·m (55 ft. lbs.).