PROPELLER SHAFT (Continued)

that the effects of the weld process will not enter into the measurements.

(4) Refer to Runout Specifications chart.

(5) If the propeller shaft runout is out of specification, remove the propeller shaft, index the shaft 180°, and re-install the propeller shaft. Measure shaft runout again.

(6) If the propeller shaft runout is now within specifications, mark the shaft and yokes for proper orientation.

(7) If the propeller shaft runout is not within specifications, verify that the runout of the transmission/transfer case and axle are within specifications. Correct as necessary and re-measure propeller shaft runout.

(8) Replace the propeller shaft if the runout still exceeds the limits.

RUNOUT SPECIFICATIONS

Front of Shaft	0.020 in. (0.50 mm)
Center of Shaft	0.025 in. (0.63 mm)
Rear of Shaft	0.020 in. (0.50 mm)
note: Measure front/rear runout approximately 3 inches (76 mm) from the weld seam at each end of the shaft tube for tube lengths over 30 inches. For tube lengths under 30 inches, the maximum allowed runout is 0.020 in. (0.50 mm) for the full length of the tube.	

STANDARD PROCEDURE

PROPELLER SHAFT ANGLE

(1) Place transmission in netural.

(2) Raise and support the vehicle at the axles as level as possible.

(3) Remove any external bearing snap rings from universal joint so protractor base sits flat.

(4) Rotate the shaft until transmission/transfer case output yoke bearing is facing downward.

NOTE: Always make measurements from front to rear and from the same side of the vehicle.

(5) Place Inclinometer 7663 (J-23498A) on yoke bearing (A) parallel to the shaft (Fig. 4). Center bubble in sight glass and record measurement.

NOTE: This measurement will give you the Output Yoke Angle (A).

(6) Rotate propeller shaft 90 degrees and place Inclinometer on yoke bearing parallel to the shaft (Fig. 5). Center bubble in sight glass and record measurement. This measurement can also be taken at the rear end of the shaft.

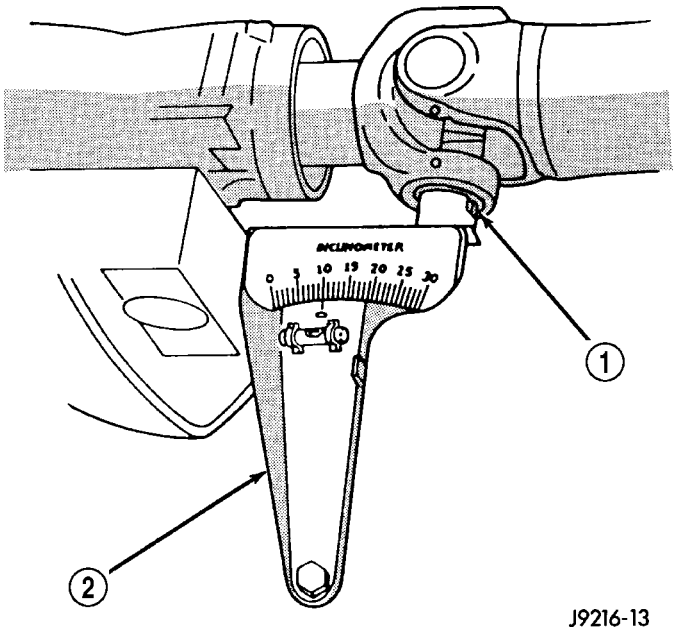

Fig. 4 OUTPUT YOKE ANGLE (A)

1 - SLIP YOKE BEARING CAP
2 - INCLINOMETER

NOTE: This measurement will give you the Propeller Shaft Angle (C).

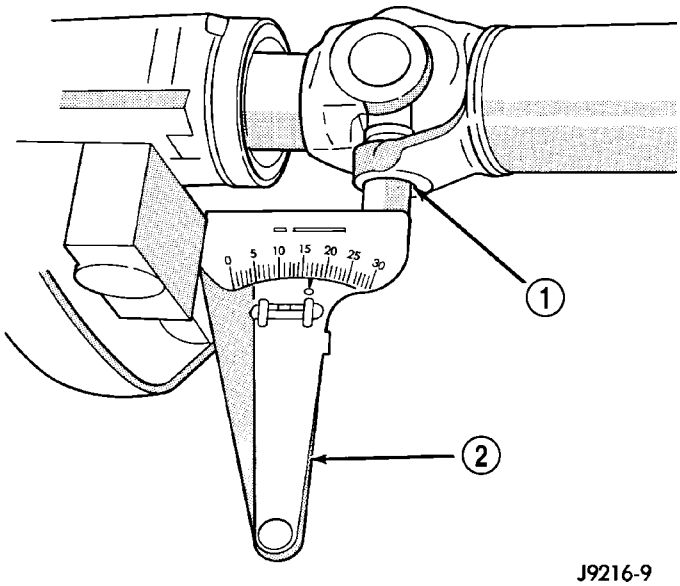

Fig. 5 PROPELLER SHAFT ANGLE (C)

1 - SHAFT YOKE BEARING CAP
2 - INCLINOMETER

(7) Subtract smaller figure from larger (C minus A) to obtain Transmission Output Operating Angle.

(8) Rotate propeller shaft 90 degrees and place Inclinometer on pinion yoke bearing parallel to the shaft (Fig. 6). Center bubble in sight glass and record measurement.