PROPELLER SHAFT (Continued)

ADJUSTMENTS

The pinion angle of the front axle can be adjusted by the use of adjustment cams in the lower suspension arms (Fig. 8). The primary function of the cams is to adjust caster angle for alignment of the front suspension. When using the cams to adjust pinion angle, make sure that both cams are moved equally. After pinion angle is adjusted, the front suspension alignment should be checked to ensure that side-to-side caster is with in acceptable range. Having the correct pinion angle does have priority over having the preferred caster angle.

A cam kit is available for the rear axle upper suspension arms in order to provide adjustablity of the pinion angle. Follow the procedures supplied with the kit in order to ensure a safe installation.

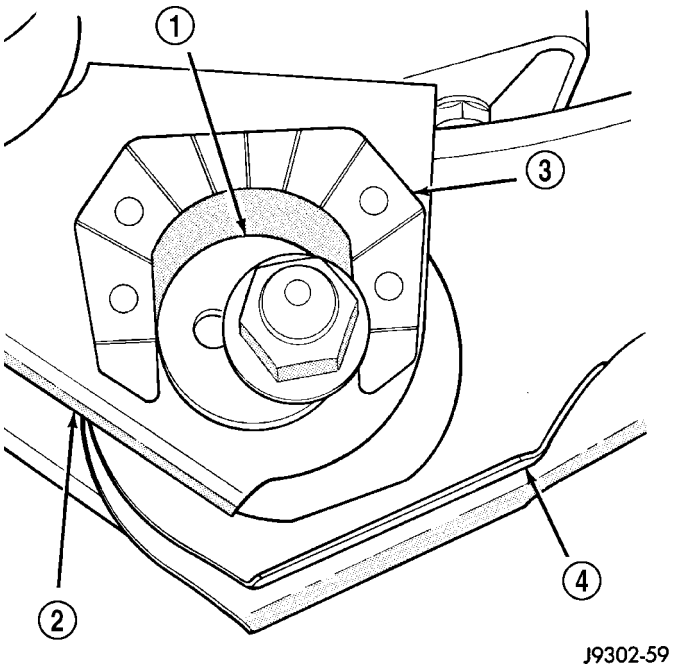

Fig. 8 ADJUSTMENT CAM

1 - ADJUSTMENT CAM
2 - AXLE BRACKET
3 - BRACKET REINFORCEMENT
4 - LOWER SUSPENSION ARM

SPECIFICATIONS

PROPELLER SHAFT

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Front Shaft Front Yoke Bolts	19	14	-
Front Shaft Rear Flange Bolts	27	20	-
Rear Saft Rear Yoke Bolts	19	14	-
Rear Shaft Transfer Case Flange Bolts	115	85	-