PROPELLER SHAFT (Continued)

SPECIAL TOOLS

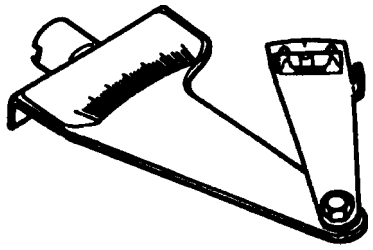

INCLINOMETER 7663

PROPELLER SHAFT - FRONT

REMOVAL

(1) With vehicle in neutral positon vehicle on hoist.

(2) Remove skid plate if equipped to gain access to the propeller shaft.

(3) Mark a line across the transfer case yoke, link yoke and propeller shaft yoke for installation reference (Fig. 9).

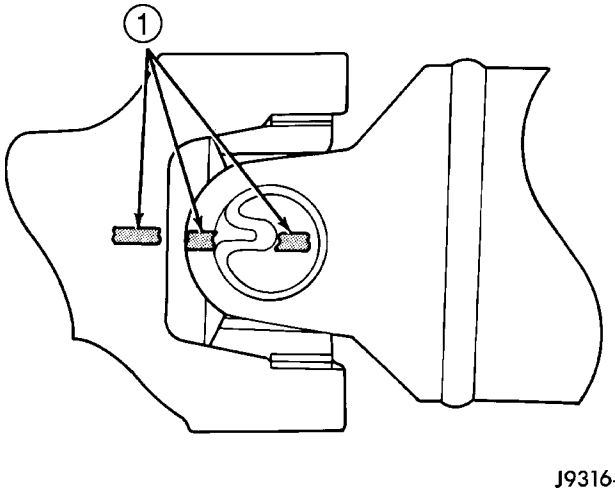

Fig. 9 YOKE REFERENCE MARKS

1 - REFERENCE MARKS

(4) Remove U-joint strap bolts at the pinion shaft yoke (Fig. 10).

(5) Remove transfer case yoke bolts.

(6) Push rear of propeller shaft forward to clear transfer case yoke.

(7) Remove propeller shaft from vehicle.

INSTALLATION

(1) Install propeller shaft with reference marks aligned.

(2) Loosely install bolts to hold universal joint to transfer case yoke.

(3) Install U-joint strap bolts at the axle yoke and tighten to 19 N·m (14 ft. lbs.).

(4) Install universal joint to transfer case bolts and tighten to 27 N·m (20 ft. lbs.).

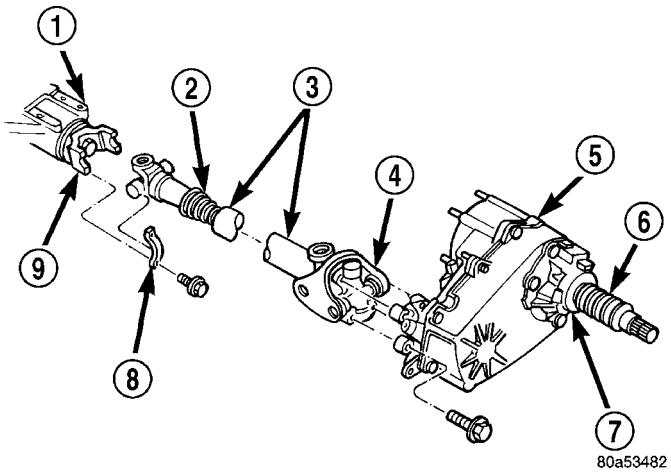

Fig. 10 FRONT PROPELLER SHAFT

1 - FRONT AXLE
2 - BOOT
3 - PROPELLER SHAFT
4 - CV-JOINT
5 - TRANSFER CASE
6 - BOOT
7 - SLINGER
8 - CLAMP
9 - YOKE

PROPELLER SHAFT - REAR

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Mark a line across the shaft and at each end of the propeller shaft for installation reference.

(3) Remove U-joint strap bolts, at pinion shaft yoke.

(4) Pry open clamp, holding dust boot to propeller shaft yoke (Fig. 11).

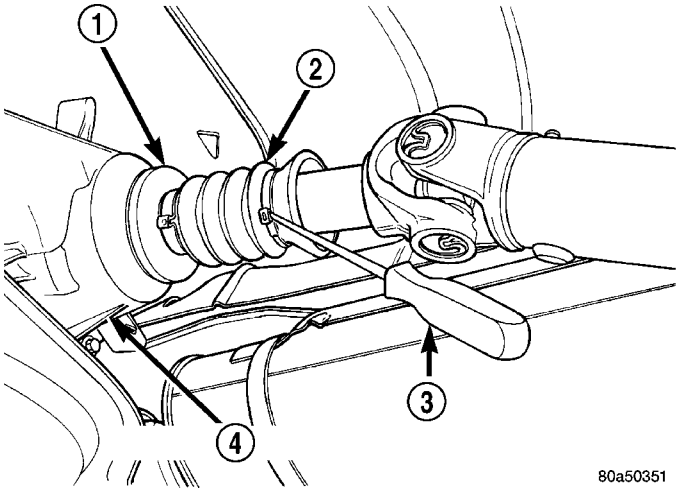

Fig. 11 DUST BOOT CLAMP

1 - SLINGER
2 - BOOT
3 - AWL
4 - TRANSFER CASE