PROPELLER SHAFT - REAR RUBICON (Continued)

INSTALLATION

(1) Align installation reference marks at the pinion yoke, transfer case flange and propeller shaft.

(2) Install U-joint strap and tighten bolts to 19 N·m (14 ft. lbs.).

(3) Install transfer case flange bolts (Fig. 15) and tighten to 115 N·m (85 ft. lbs.).

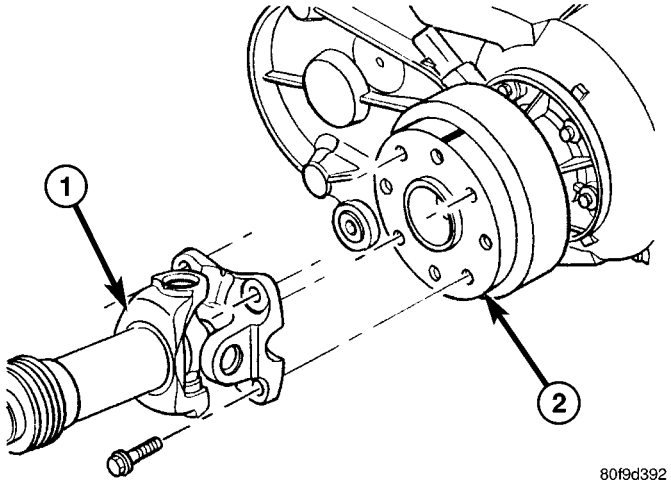

Fig. 15 TRANSFER CASE FLANGE BOLTS

1 - REAR PROPELLER SHAFT
2 - TRANSFER CASE FLANGE

SINGLE CARDAN UNIVERSAL JOINTS

DISASSEMBLY

NOTE: Individual components of cardan universal joints are not serviceable, they must be replaced as an assembly.

(1) Tap the outside of the bearing cap assembly with a drift to loosen the snap rings.

(2) Remove snap rings from both sides of yoke (Fig. 16).

(3) Position a socket with a inside diameter large enough to receive the bearing cap beneath the yoke on the press.

(4) Position yoke with the grease fitting if equipped, pointing up.

(5) Place another socket with an outside diameter smaller than bearing cap on the upper bearing cap and press the lower cap through the yoke (Fig. 17).

(6) Pull bearing cap of the yoke.

NOTE: If bearing cap will not come out, tap the yoke ear near the bearing cap to dislodge the cap.

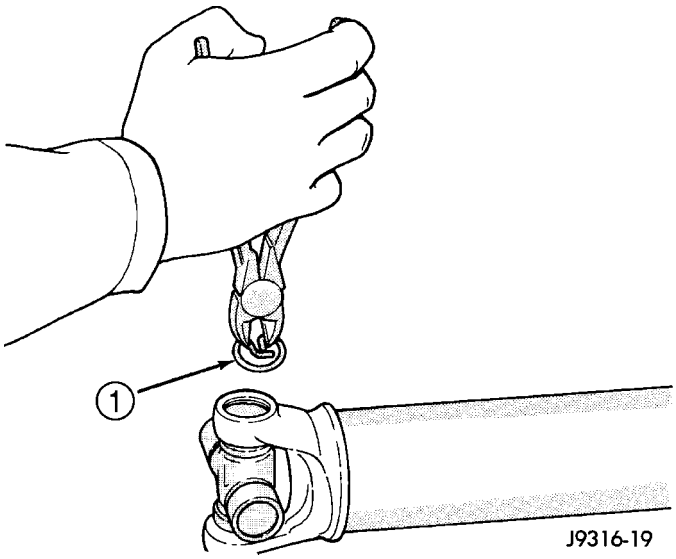

Fig. 16 YOKE SNAP RING

1 - SNAP RING

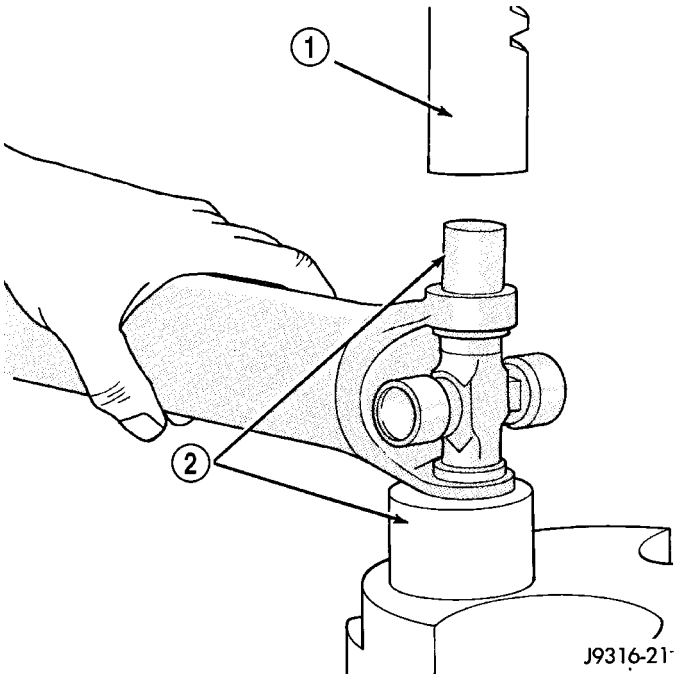

Fig. 17 PRESS OUT BEARING CAP

1 - PRESS
2 - SOCKET