SINGLE CARDAN UNIVERSAL JOINTS (Continued)

(7) Turn yoke over and straighten the cross in the open hole. Then carefully press the end of the cross until the other bearing cap can be removed (Fig. 18).

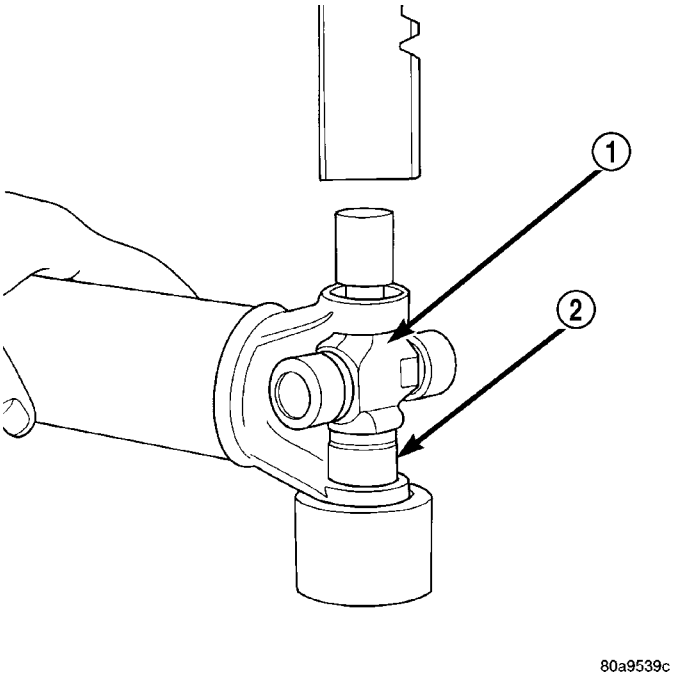

Fig. 18 PRESS OUT BEARING CAP

1 - CROSS
2 - BEARING CAP

ASSEMBLY

CAUTION: Keep cross and bearing cap straight during installation. Failure to heed caution may result in damage.

(1) Apply extreme pressure (EP) N.L.G.I. Grade 1 or 2 grease to inside of yoke bores.
(2) Position cross in the yoke with lube fitting if equipped, pointing up (Fig. 19).
(3) Place a bearing cap over the trunnion and align cap with yoke bore (Fig. 20).
(4) Press bearing cap into the yoke bore enough to clear snap ring groove.
(5) Install a snap ring.
(6) Repeat Step 3 and Step 4 to install the other bearing cap.

NOTE: If joint is stiff or binding, strike the yoke with a soft hammer to seat the needle bearings.

(7) Add grease to lube fitting, if equipped.

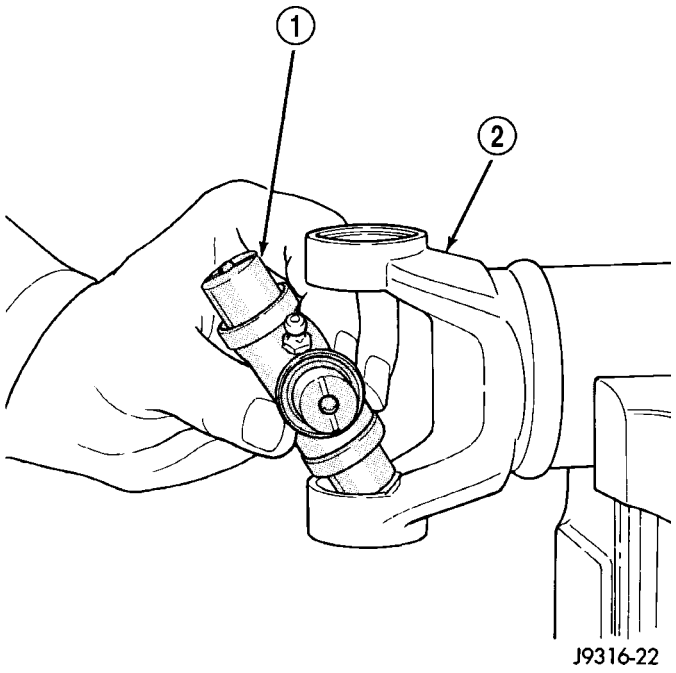

Fig. 19 U-JOINT CROSS

1 - CROSS
2 - YOKE

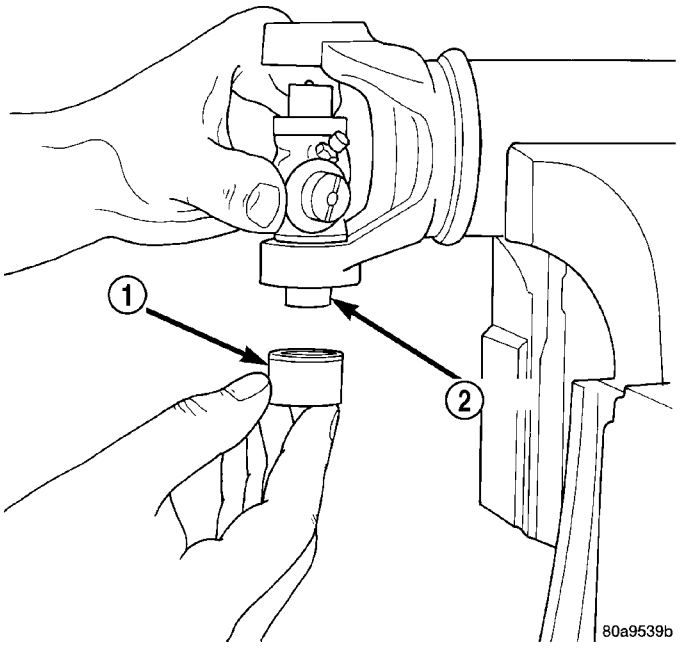

Fig. 20 BEARING AND CROSS

1 - BEARING CAP
2 - TRUNNION