DOUBLE CARDAN UNIVERSAL JOINTS (Continued)

(9) Flip assembly and repeat Step 5, Step 6, Step 7 and Step 8 to remove the opposite bearing cap.

(10) Remove cross centering kit assembly and spring (Fig. 24).

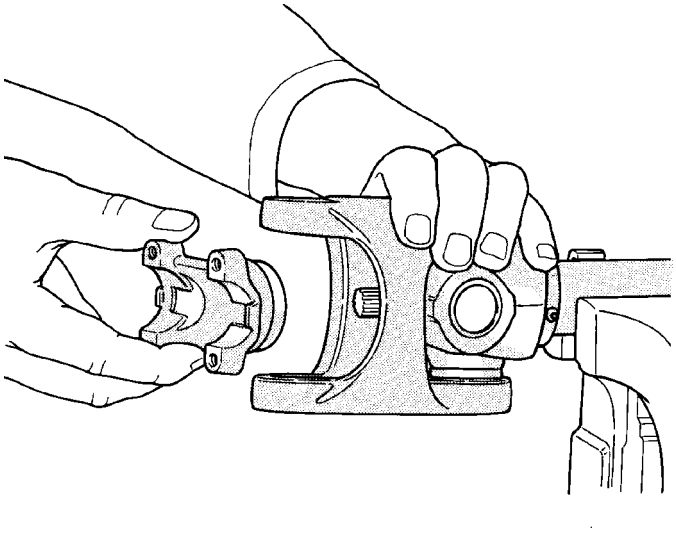


Fig. 24 CENTERING KIT

(11) Press remaining bearing caps out the other end of the link yoke, as described above to complete the disassembly.

ASSEMBLY

CAUTION: Alignment marks on link yoke and propeller shaft yoke must be aligned during assembled. Keep needle bearings upright in the bearing cap. Failure to heed caution may result in damage.

(1) Apply extreme pressure (EP) N.L.G.I. Grade 1 or 2 grease to inside of yoke bores.

(2) Fit a cross into propeller shaft yoke (Fig. 25).

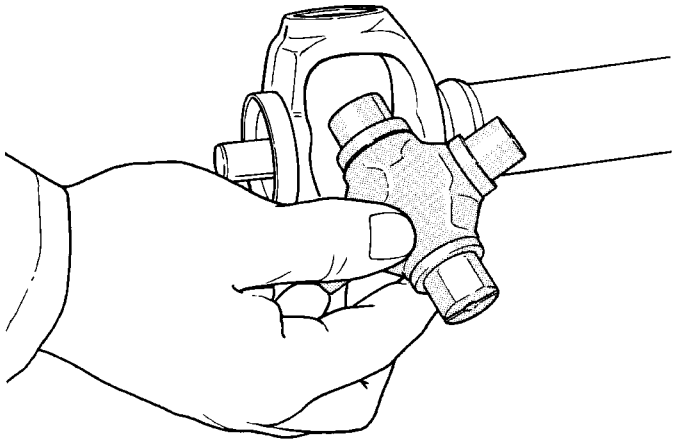


Fig. 25 INSTALL CROSS IN YOKE

(3) Place a bearing cap over the trunnion and align cap with the yoke bore (Fig. 26).

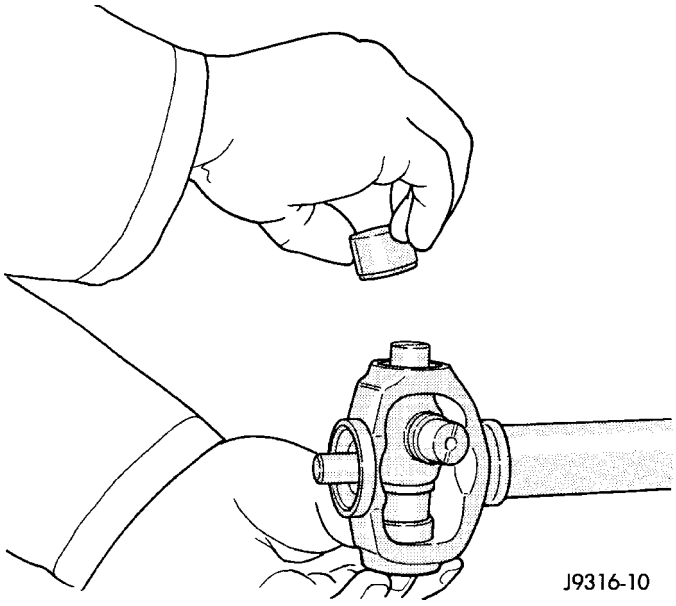


Fig. 26 INSTALL BEARING CAP

(4) Press bearing cap into the yoke bore enough to clear snap ring groove (Fig. 27).

(5) Install a snap ring.

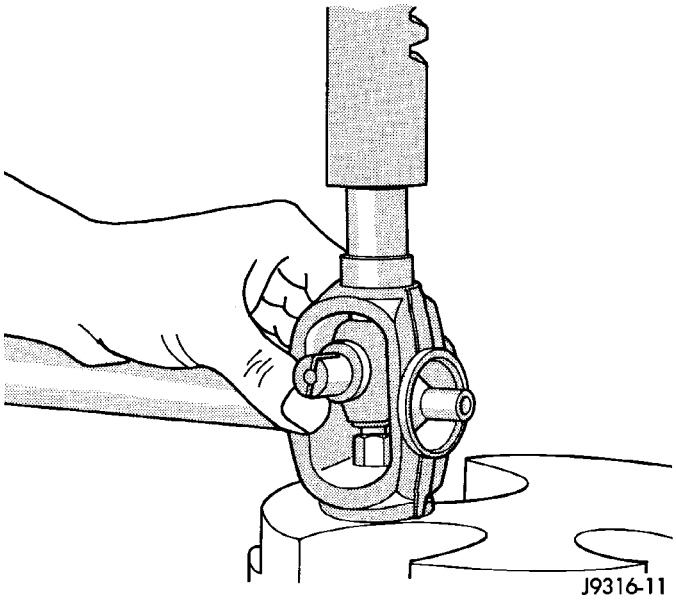


Fig. 27 PRESS BEARING CAP