DOUBLE CARDAN UNIVERSAL JOINTS (Continued)

(6) Flip propeller shaft yoke and install other bearing cap onto the opposite trunnion and install a snap ring (Fig. 28).

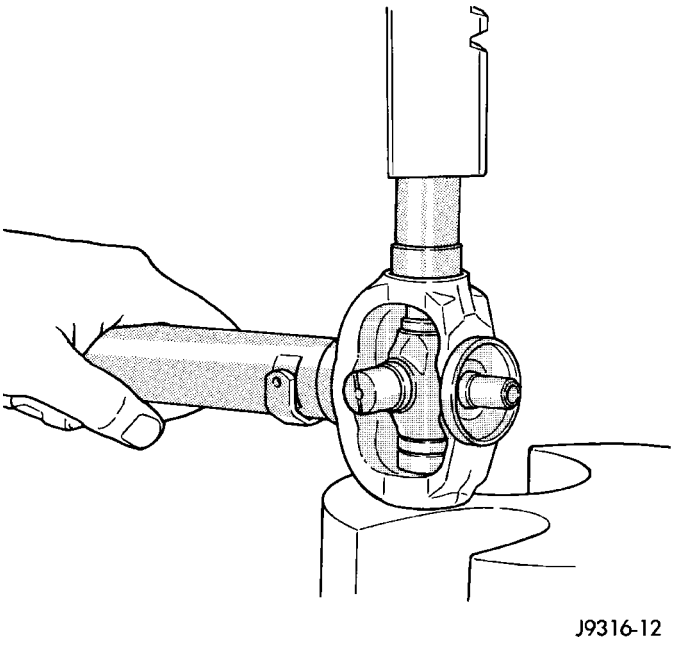

Fig. 28 PRESS BEARING CAP

(7) Fit link yoke onto the remaining trunnions and press both bearing caps into place and install snap rings (Fig. 29).

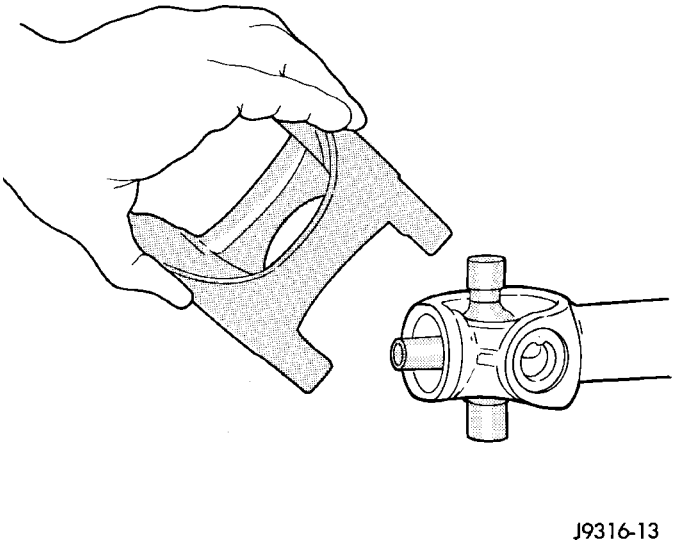

Fig. 29 INSTALL LINK YOKE

(8) Install centering kit assembly inside the link yoke (Fig. 30).

NOTE: Making sure the spring is properly positioned.

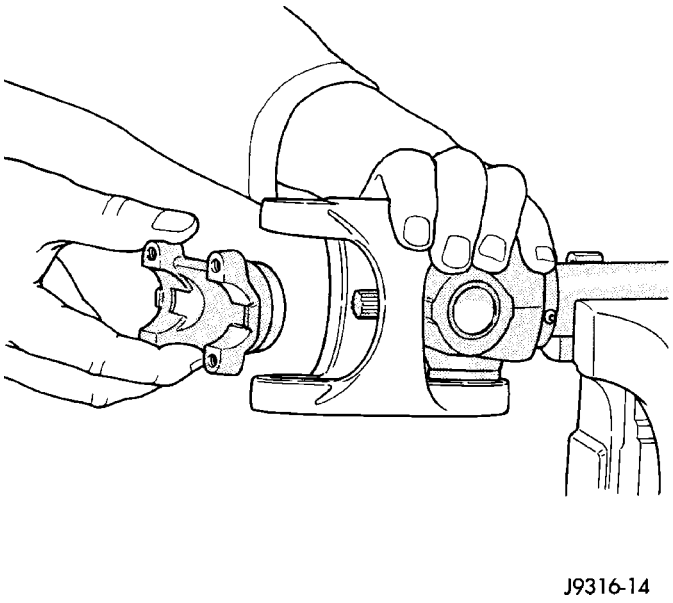

Fig. 30 CENTERING KIT

(9) Place two bearing caps on opposite trunnions of the remaining cross. Fit open trunnions into the link yoke bores and the bearing caps into the centering kit (Fig. 31).

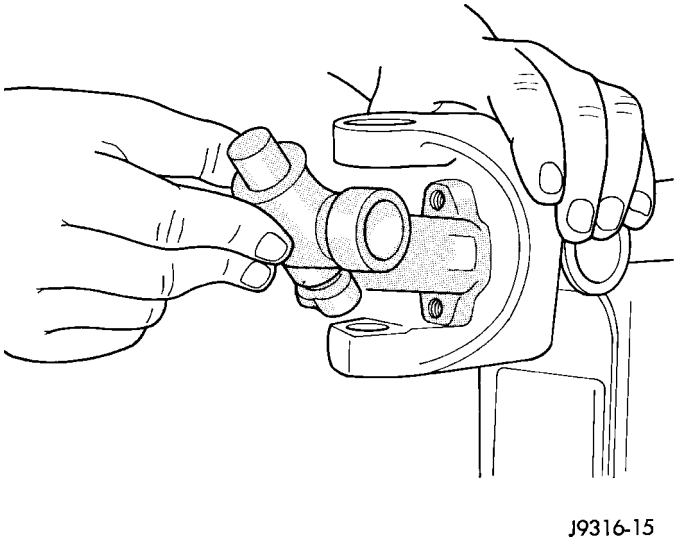

Fig. 31 REMAINING CROSS