DOUBLE CARDAN UNIVERSAL JOINTS (Continued)

(10) Press remaining two bearing caps into place and install snap rings (Fig. 32).

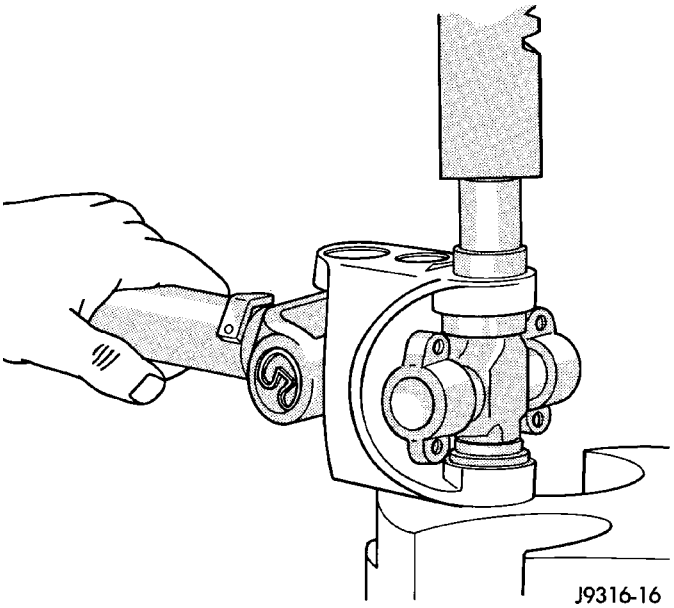

Fig. 32 PRESS BEARING CAP

(11) Tap snap rings to seat them into the grooves (Fig. 33).

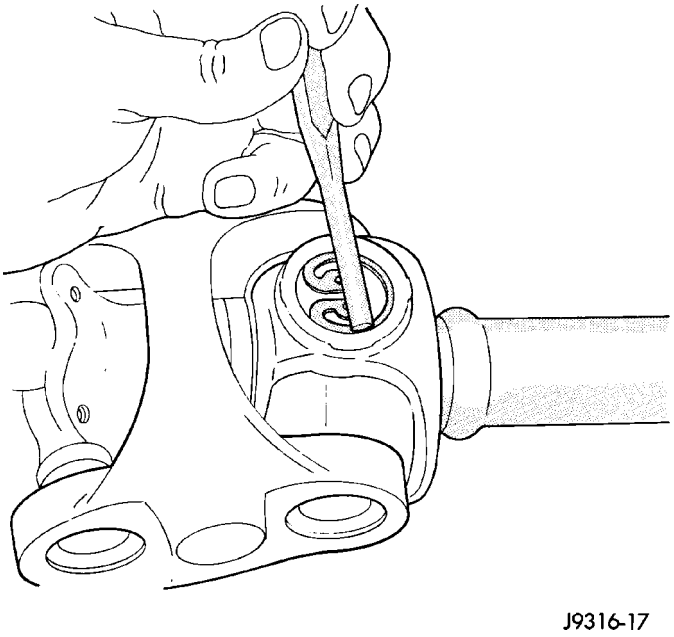

Fig. 33 SEAT SNAP RINGS

(12) Flexing joint beyond center, the joint should snap over-center in both directions if assembled correctly (Fig. 34).

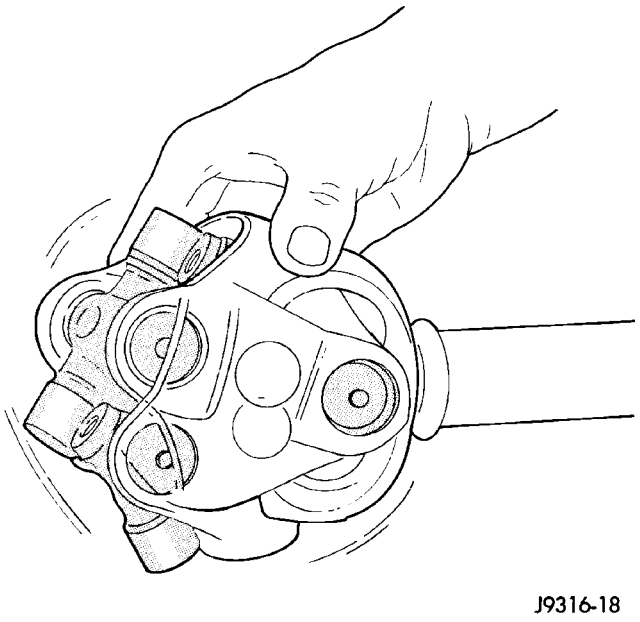

Fig. 34 VERIFY ASSEMBLY