(8) Install drag link and tie rod and tighten nut to torque specification

(9) Install steering damper to the axle bracket and tighten nut to torque specification.

(10) Install brake components.

(11) Install propeller shaft.

(12) Remove lift from the axle and lower vehicle.

(13) Tighten upper and lower control arm nuts to torque specification.

(14) Tighten track bar bolt at the axle bracket to torque specification.

(15) Check the front wheel alignment.

ADJUSTMENTS

Ring and pinion gears are supplied as matched sets only. The identifying numbers for the ring and pinion gear are etched/marked onto each gear (Fig. 8). A plus (+) number, minus (–) number or zero (0) is etched/marked on the pinion gear. This number is the amount (in thousandths of an inch) the depth varies from the standard depth setting of a pinion etched/marked with a (0). The standard setting from the center line of the ring gear to the back face of the pinion is 92.08 mm (3.625 in.). The standard depth provides the best gear tooth contact pattern.

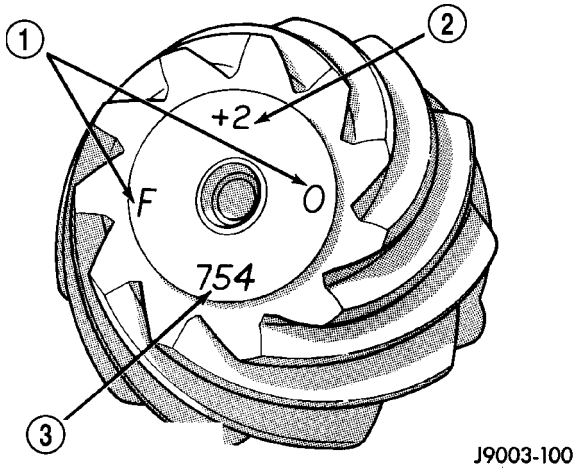

Fig. 8 PINION GEAR ID NUMBERS

1 - PRODUCTION NUMBERS
2 - PINION GEAR DEPTH VARIANCE
3 - GEAR MATCHING NUMBER

Compensation for pinion depth variance is achieved with a select shim/oil slinger. The shims are placed between the rear pinion bearing and the pinion gear head (Fig. 9).

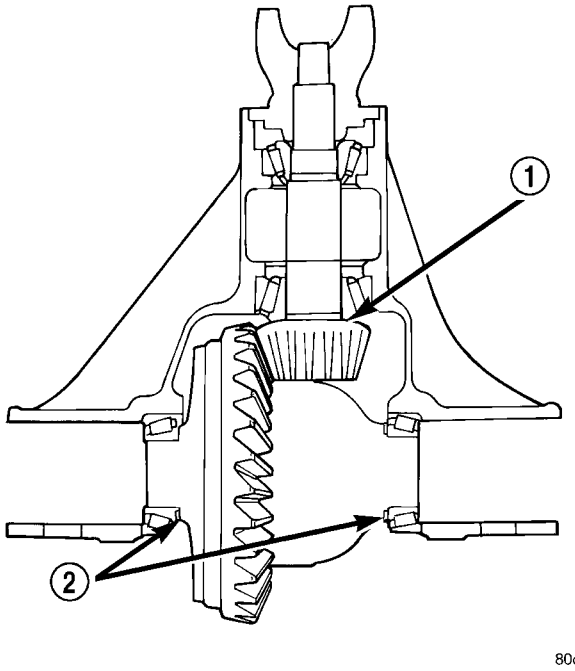

Fig. 9 SHIM LOCATIONS

1 - PINION GEAR DEPTH SHIM/OIL SLINGER
2 - DIFFERENTIAL BEARING SHIM

If a new gear set is being installed, note the depth variance etched into both the original and replacement pinion. Add or subtract this number from the thickness of the original depth shim/oil slinger to compensate for the difference in the depth variances. Refer to the Pinion Gear Depth Variance chart.

Note where Old and New Pinion Marking columns intersect. Intersecting figure represents plus or minus the amount needed.

Note the etched number on the face of the pinion gear head (–1, –2, 0, +1, +2, etc.). The numbers represent thousands of an inch deviation from the standard. If the number is negative, add that value to the required thickness of the depth shims. If the number is positive, subtract that value from the thickness of the depth shim. If the number is 0 no change is necessary.