FRONT AXLE - 181FBI (Continued)

PRELOAD SHIM SELECTION

NOTE: It is difficult to salvage the differential side bearings during the removal procedure. Install replacement bearings if necessary.

(1) Remove differential side bearings from differential case.
(2) Remove factory installed shims from differential case.
(3) Install ring gear on differential case and tighten bolts to specification.
(4) Install dummy side bearings D-348 on differential case.
(5) Install differential case in the housing.
(6) Install marked bearing caps in their correct positions. Install and snug the bolts (Fig. 15).

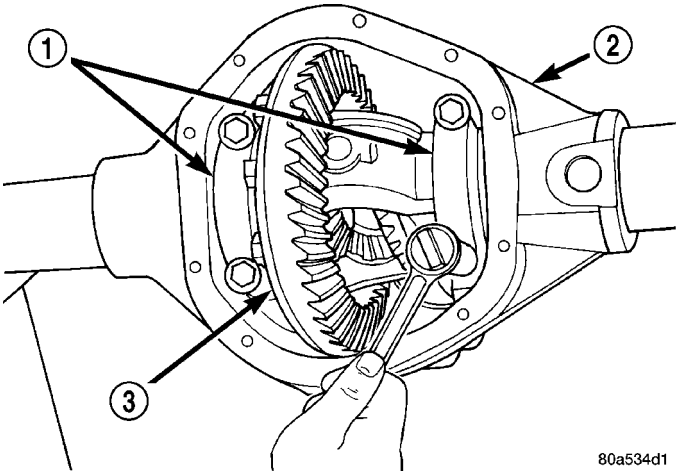

Fig. 15 BEARING CAP BOLTS

1 - BEARING CAP
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

(7) With a dead-blow hammer, seat the differential dummy bearings to each side of the housing (Fig. 16) and (Fig. 17).
(8) Thread Pilot Stud C-3288-B into rear cover bolt hole below ring gear (Fig. 18).
(9) Attach the Dial Indicator C-3339 to pilot stud. Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 18).
(10) Push and hold differential case to pinion gear side of the housing and zero dial indicator (Fig. 19).
(11) Push and hold differential case to ring gear side of the housing and record the dial indicator reading (Fig. 20).
(12) Add 0.008 in. (0.2 mm) to the zero end play total. This new total represents the thickness of shims to compress or preload the new bearings when the differential is installed.
(13) Rotate dial indicator out of the way on the pilot stud.

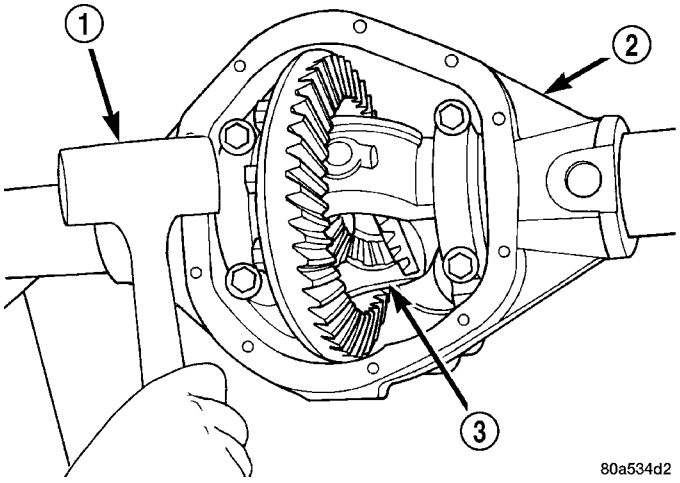

Fig. 16 SEAT DUMMY BEARINGS PINION SIDE

1 - MALLET
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

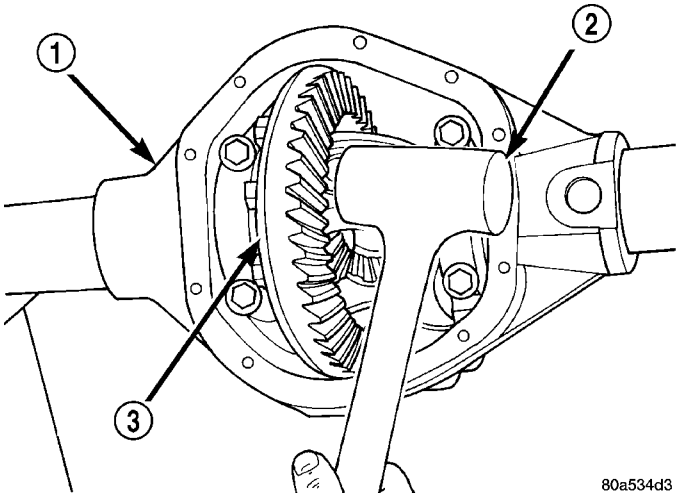

Fig. 17 SEAT DUMMY BEARING RING GEAR SIDE

1 - DIFFERENTIAL HOUSING
2 - MALLET
3 - DIFFERENTIAL CASE

(14) Remove differential case and dummy bearings from the housing.
(15) Install the pinion gear in the housing. Install the pinion yoke and establish the correct pinion rotating torque.
(16) Install differential case and dummy bearings D-348 in the housing (without shims), install bearing caps and tighten bolts snug.
(17) Seat ring gear side dummy bearing (Fig. 17).