FRONT AXLE - 181FBI (Continued)

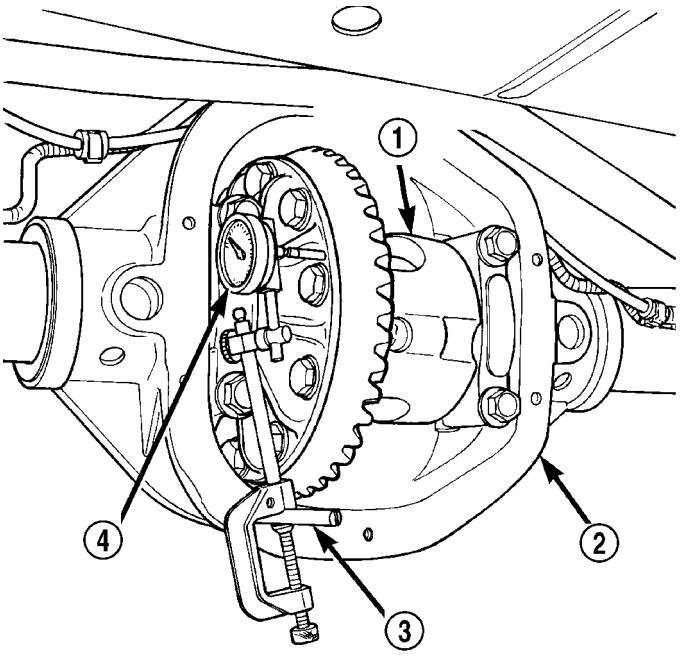


***Fig. 18 DIFFERENTIAL SIDE PLAY MEASUREMENT***

1 - DIFFERENTIAL CASE
2 - DIFFERENTIAL HOUSING
3 - PILOT STUD
4 - DIAL INDICATOR

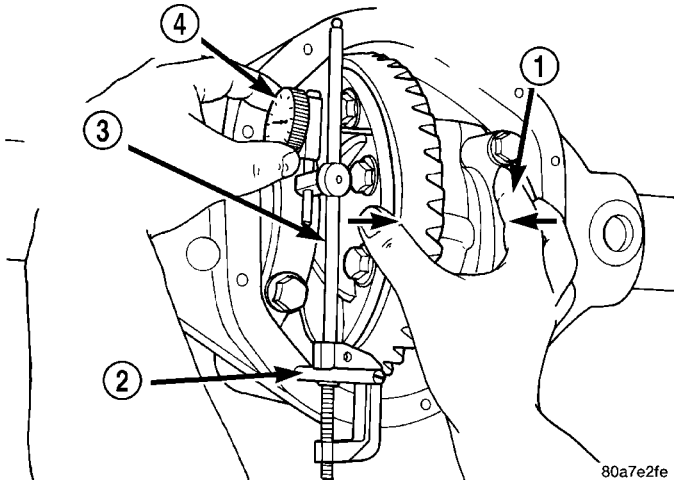


***Fig. 19 DIAL INDICATOR LOCATION***

1 - FORCE DIFFERENTIAL CASE TO PINION GEAR SIDE
2 - PILOT STUD
3 - DIAL INDICATOR
4 - ZERO DIAL INDICATOR FACE

(18) Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 18).

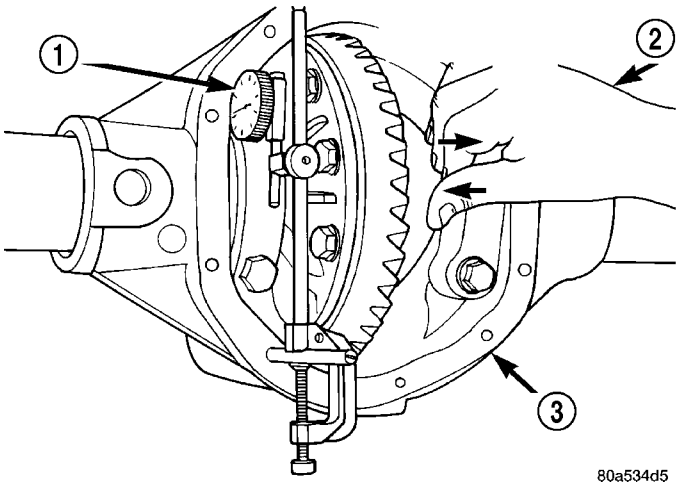


***Fig. 20 READ DIAL INDICATOR***

1 - READ DIAL INDICATOR
2 - DIFFERENTIAL CASE TO RING GEAR SIDE
3 - DIFFERENTIAL HOUSING

(19) Push and hold differential case toward pinion gear and zero the dial indicator (Fig. 21).

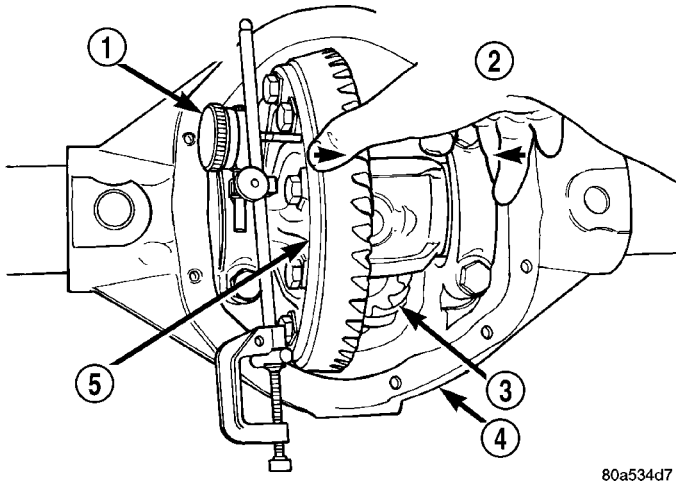


***Fig. 21 ZERO DIAL INDICATOR***

1 - ZERO DIAL INDICATOR FACE
2 - FORCE DIFFERENTIAL CASE TO PINION GEAR SIDE
3 - PINION GEAR
4 - DIFFERENTIAL HOUSING
5 - DIFFERENTIAL CASE