AXLE SHAFTS

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake components.
(3) Remove cotter pin, nut retainer and axle hub nut.
(4) Remove hub bearing bolts (Fig. 28).

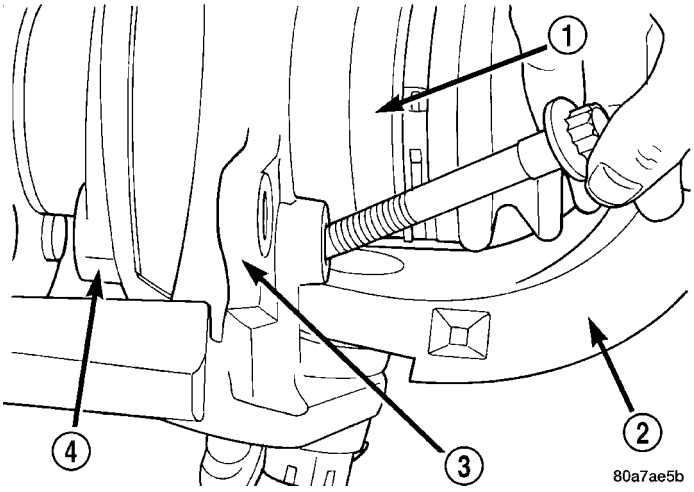

Fig. 28 HUB BEARING BOLTS

1 - AXLE SHAFT
2 - AXLE
3 - KNUCKLE
4 - HUB BEARING

(5) Remove hub bearing from steering knuckle.
(6) Remove axle shaft assembly (Fig. 29) from axle

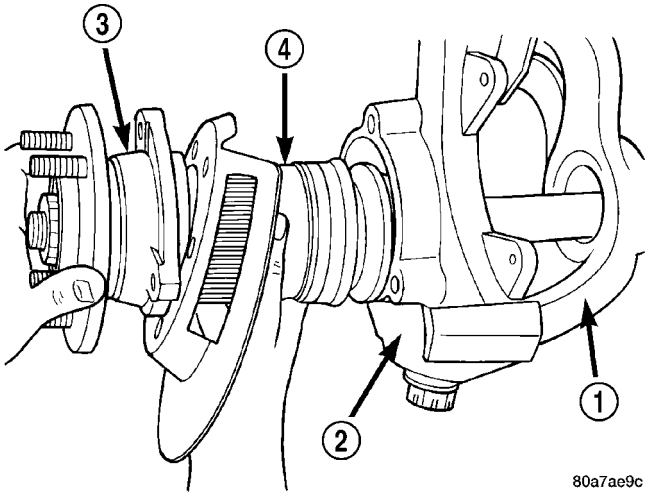

Fig. 29 HUB BEARING AND AXLE ASSEMBLY

1 - AXLE
2 - KNUCKLE
3 - HUB BEARING
4 - AXLE SHAFT

(7) Remove brake rotor shield from the hub bearing or knuckle.

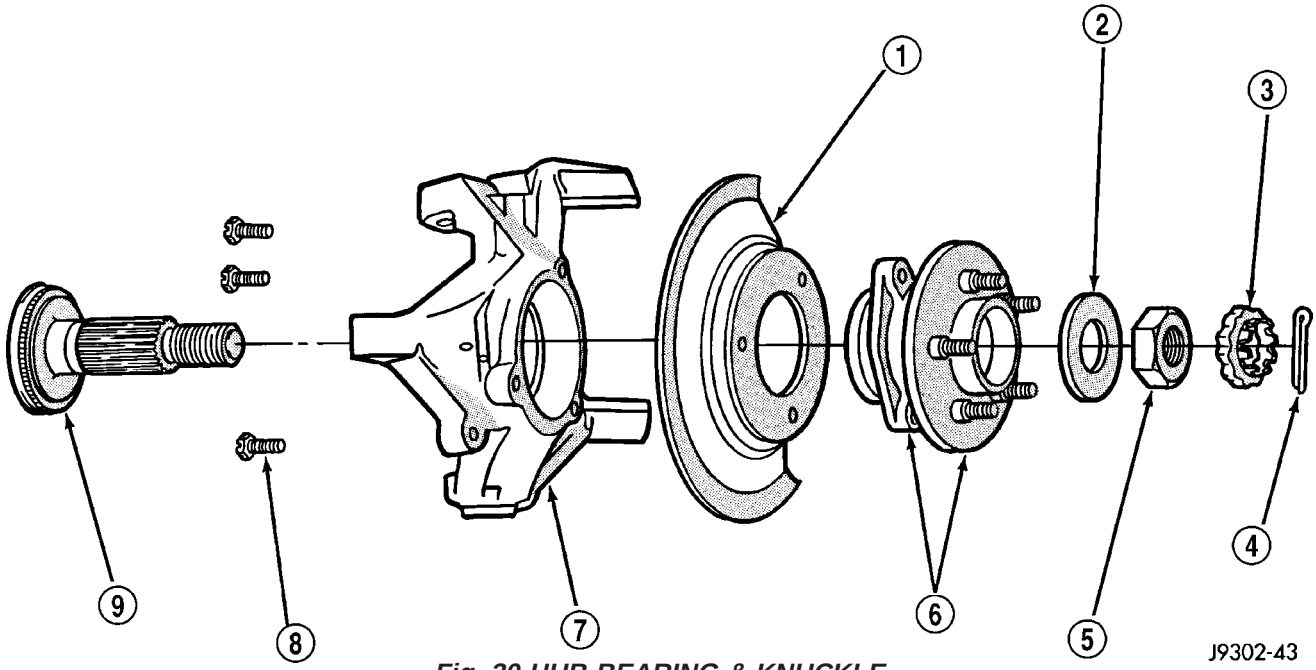

Fig. 30 HUB BEARING & KNUCKLE

1 - BRAKE SHIELD
2 - WASHER
3 - RETAINER
4 - COTTER PIN
5 - NUT
6 - HUB AND BEARING ASSEMBLY
7 - STEERING KNUCKLE
8 - BOLT
9 - TONE WHEEL (ABS)