AXLE SHAFTS (Continued)

INSTALLATION

(1) Clean axle shaft and apply a thin film of Mopar Wheel Bearing Grease or equivalent to the shaft splines, seal contact surface and hub bore.
(2) Install brake rotor shield on knuckle.
(3) Install axle shaft into differential side gears.
(4) Install hub bearing and tighten bolts to 102 N·m (75 ft. lbs.).
(5) Install axle washer and nut. Tighten nut to 237 N·m (175 ft. lbs.) and install nut retainer and cotter pin (Fig. 30).
(6) Install brake components.

AXLE SHAFT SEALS

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove axle shafts (Fig. 31).

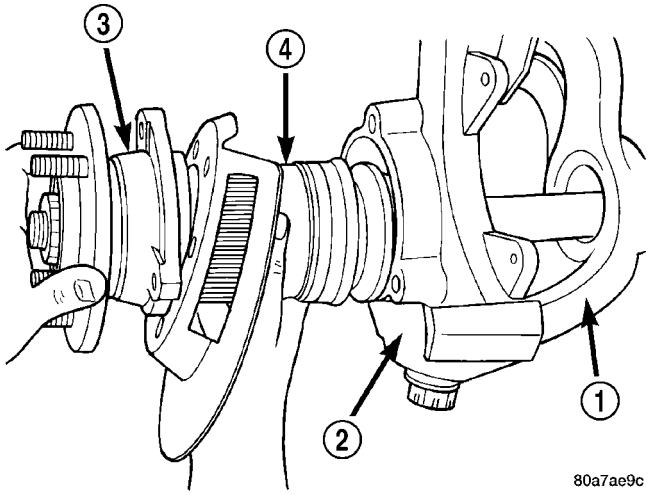

Fig. 31 HUB BEARING AND AXLE ASSEMBLY

1 - AXLE
2 - KNUCKLE
3 - HUB BEARING
4 - AXLE SHAFT

(3) Remove differential assembly (Fig. 32).
(4) Remove inner axle shaft seals with a pry bar.

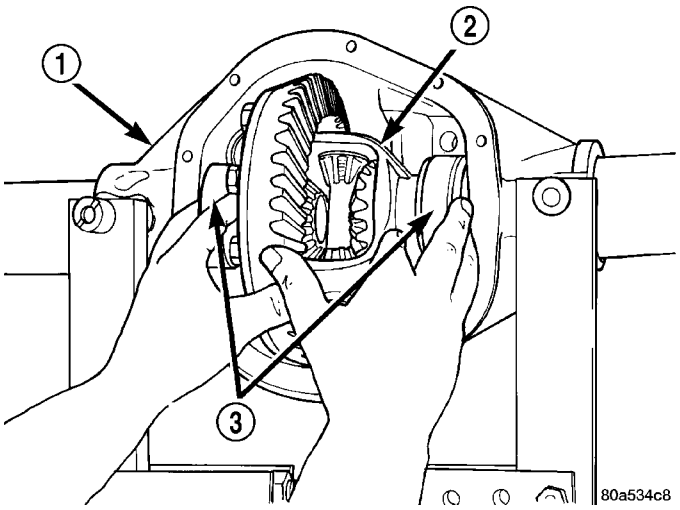

Fig. 32 DIFFERENTIAL CASE

1 - AXLE HOUSING
2 - DIFFERENTIAL CASE
3 - BEARING CUPS

INSTALLATION

(1) Remove any sealer remaining from original seals.
(2) Install oil seals with Discs 8110 and Turnbuckle 6797 (Fig. 33). Tighten tool until disc bottoms in housing.

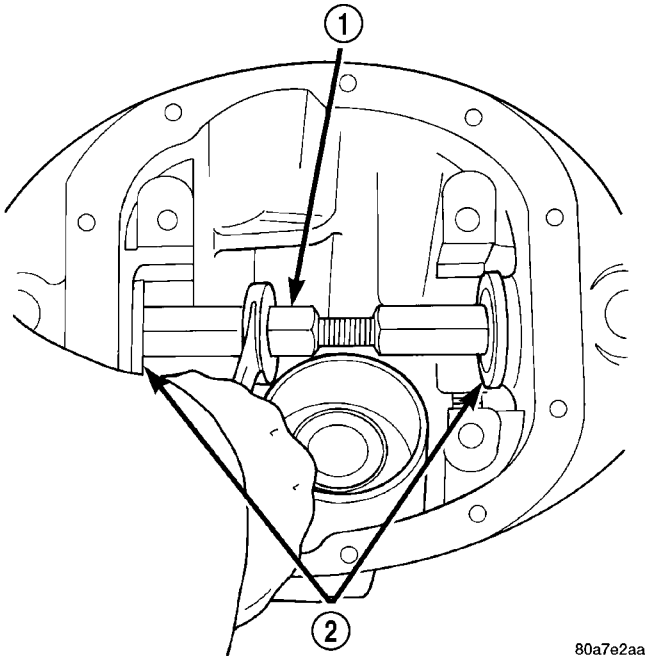

Fig. 33 AXLE SEAL INSTALLATION

1 - TURNBUCKLE
2 - DISCS

(3) Install differential and axle shafts.