SINGLE CARDAN UNIVERSAL JOINT

REMOVAL

CAUTION: Clamp only the narrow forged portion of the yoke in the vise. Failure to heed caution may result in damage.

(1) Remove axle shaft.
(2) Remove bearing cap retaining snap rings (Fig. 34).

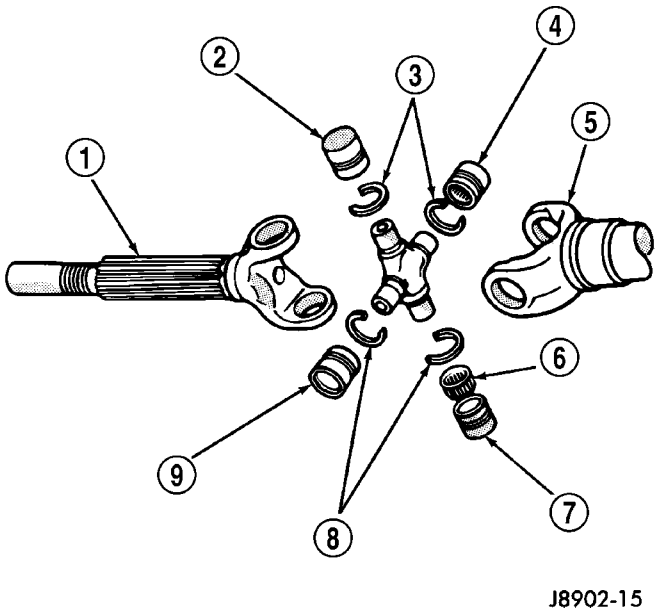

Fig. 34 AXLE SHAFT OUTER U-JOINT

1 - SHAFT YOKE
2 - BEARING CAP
3 - SNAP RINGS
4 - BEARING CAP
5 - SPINDLE YOKE
6 - BEARING
7 - BEARING CAP
8 - SNAP RINGS
9 - BEARING CAP

NOTE: Saturate the bearing caps with penetrating oil prior to removal.

(3) Place a socket (receiver) with an inside diameter larger than the bearing cap against the yoke and the perimeter of the bearing cap to be removed.
(4) Place a socket (driver) with an outside diameter smaller than the bearing cap against the opposite bearing cap.
(5) Position yoke with the sockets in a vise (Fig. 35).

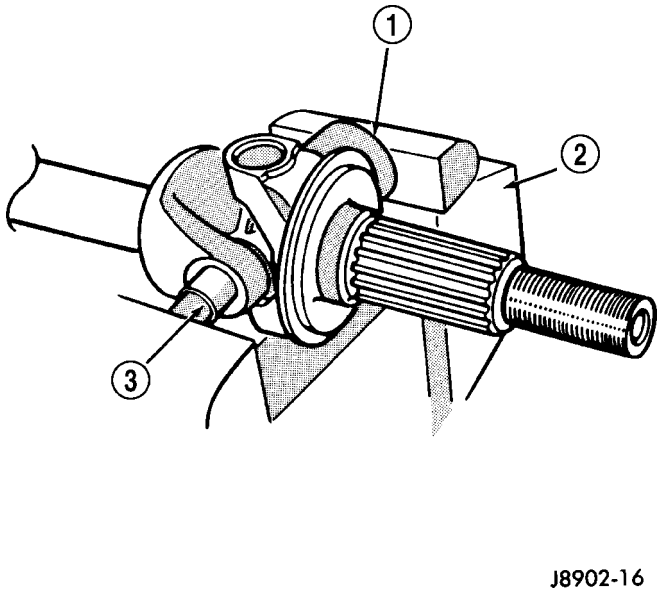

Fig. 35 YOKE BEARING CAP REMOVAL

1 - LARGE-DIAMETER SOCKET
2 - VISE
3 - SMALL-DIAMETER SOCKET

(6) Tighten vise jaws, to force bearing cap into the socket (receiver).
(7) Release vise jaws. Remove sockets and bearing cap forced out of the yoke.
(8) Repeat above procedure for the remaining bearing cap and remove cross from propeller shaft yoke.