SINGLE CARDAN UNIVERSAL JOINT (Continued)

## INSTALLATION

**CAUTION: Keep cross and bearing cap straight during installation. Failure to heed caution may result in damage.**

(1) Pack bearing caps 1/3 full of wheel bearing lubricant (Fig. 36). Apply extreme pressure (EP), lithium-base lubricant to aid in installation.

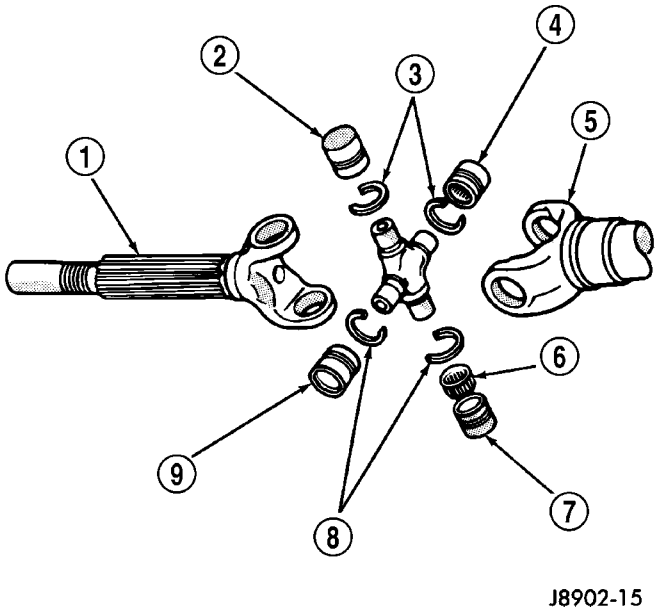


*Fig. 36 AXLE SHAFT OUTER U-JOINT*

1 - SHAFT YOKE
2 - BEARING CAP
3 - SNAP RINGS
4 - BEARING CAP
5 - SPINDLE YOKE
6 - BEARING
7 - BEARING CAP
8 - SNAP RINGS
9 - BEARING CAP

(2) Position cross in the yoke. Insert seals and bearings, then tap bearing caps into the yoke bores far enough to hold spider in position.

(3) Place socket (driver) against one bearing cap. Position yoke with the socket in a vise.

(4) Tighten vise to force bearing caps into the yoke. Force the caps enough to install retaining clips.

(5) Install bearing cap retaining clips.

(6) Install axle shaft.

# PINION SEAL

## REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove brake rotors and calipers.

(3) Remove propeller shaft from the yoke.

(4) Rotate pinion gear three or four times.

(5) Record rotating torque of the pinion gear with an inch pound torque wrench, for installation reference.

(6) Hold pinion yoke with Wrench 6958 and remove pinion nut and washer.

(7) Remove pinion yoke with Remover C-452 and Wrench C-3281 (Fig. 37).

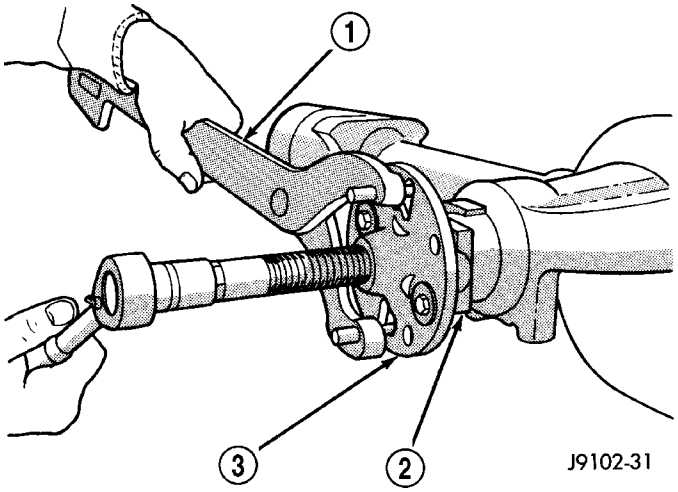


*Fig. 37 PINION YOKE REMOVER*

1 - WRENCH
2 - PINION YOKE
3 - REMOVER

(8) Remove seal with a pry tool or a slide hammer mounted screw.

## INSTALLATION

(1) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with an appropriate installer (Fig. 38).

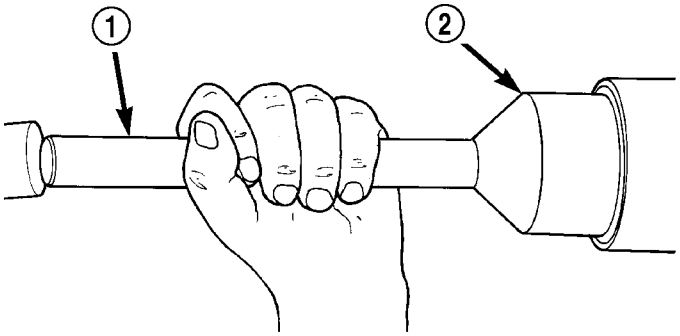


*Fig. 38 PINION SEAL INSTALLER*

1 - HANDLE
2 - INSTALLER