PINION SEAL (Continued)

(2) Install yoke on pinion gear with Installer W-162-D, Cup 8109 and Holder 6958 (Fig. 39).

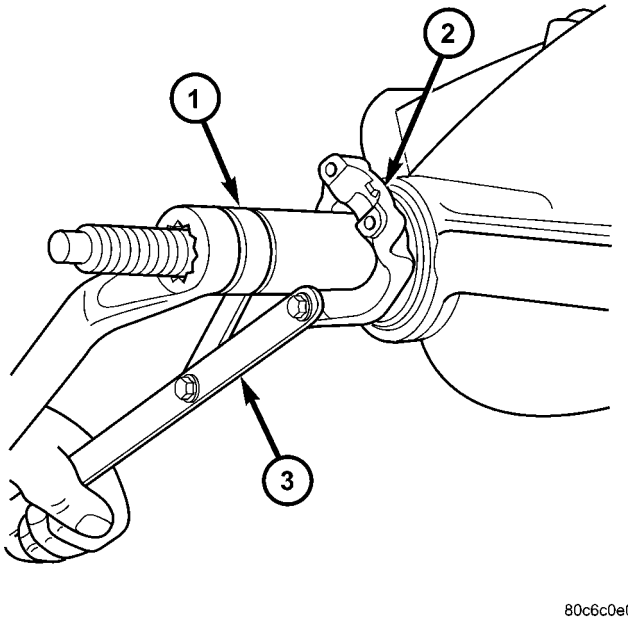

Fig. 39 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

CAUTION: Do not exceed the minimum tightening torque when installing the pinion yoke retaining nut at this point. Failure to heed caution may result in damage

(3) Install pinion washer and a **new** nut on the pinion gear shaft.

NOTE: Tighten nut only enough to remove the shaft end play.

(4) Tighten pinion nut to 217 N·m (160 ft. lbs.).

(5) Rotate pinion shaft using an inch pound torque wrench. Rotating torque should be equal to the reading recorded during removal, plus an additional 0.56 N·m (5 in. lbs.) (Fig. 40).

(6) If rotating torque is low, use Spanner 6958 (Fig. 41) to hold the pinion yoke and tighten pinion shaft nut in 6.8 N·m (5 ft. lbs.) increments until proper rotating torque is achieved.

(7) Install propeller shaft with reference marks aligned.

(8) Install brake rotors and calipers.

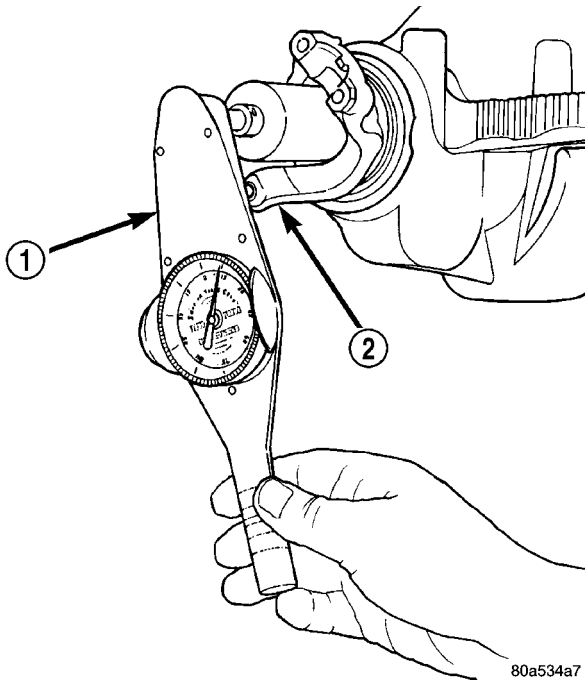

Fig. 40 PINION ROTATING TORQUE

1 - TORQUE WRENCH
2 - PINION YOKE

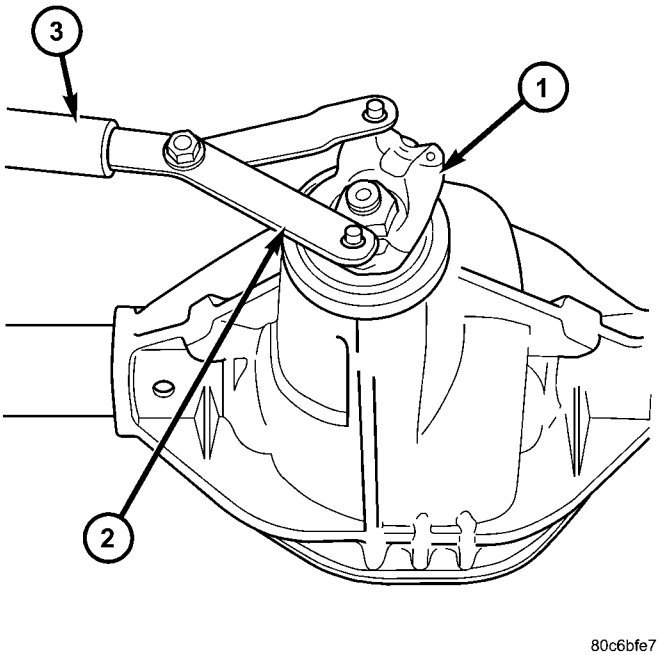

Fig. 41 YOKE HOLDER

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE