COLLAPSIBLE SPACER

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake rotors and calipers.
(3) Remove propeller shaft from axle yoke.
(4) Rotate pinion gear three or four times.
(5) Record rotating torque of the pinion gear with an inch pound torque wrench.
(6) Hold pinion yoke with Spanner Wrench 6958 and remove pinion nut and washer.
(7) Remove pinion yoke with Remover C-452 and Flange Wrench C-3281 (Fig. 42).

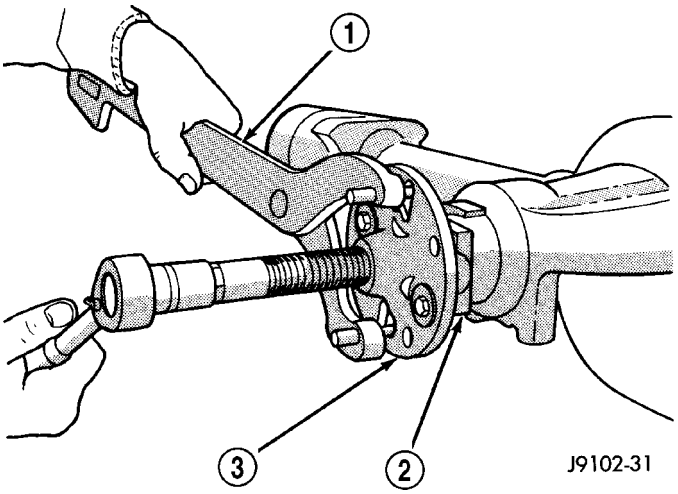

Fig. 42 PINION YOKE REMOVER

1 - WRENCH
2 - PINION YOKE
3 - REMOVER

(8) Remove pinion seal with a suitable pry tool or a slide hammer mounted screw.
(9) Remove front pinion bearing off pinion gear shaft, with a pair of pick tools. If bearing becomes bound on the shaft, lightly tap the end of the pinion gear with a rubber hammer.
(10) Remove collapsible spacer.

INSTALLATION

(1) Install **new** collapsible spacer on pinion shaft.
(2) Install front pinion bearing.
(3) Apply a light coating of gear lubricant on the lip of pinion seal and install seal with an appropriate installer (Fig. 43).
(4) Install yoke with Installer W-162-D, Cup 8109 and Spanner Wrench 6958 (Fig. 44).
(5) Install pinion washer and **new** nut and tighten nut to 217 N·m (160 ft. lbs.).

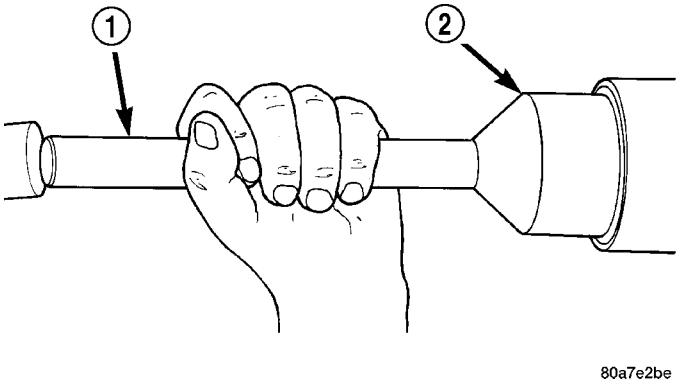

Fig. 43 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

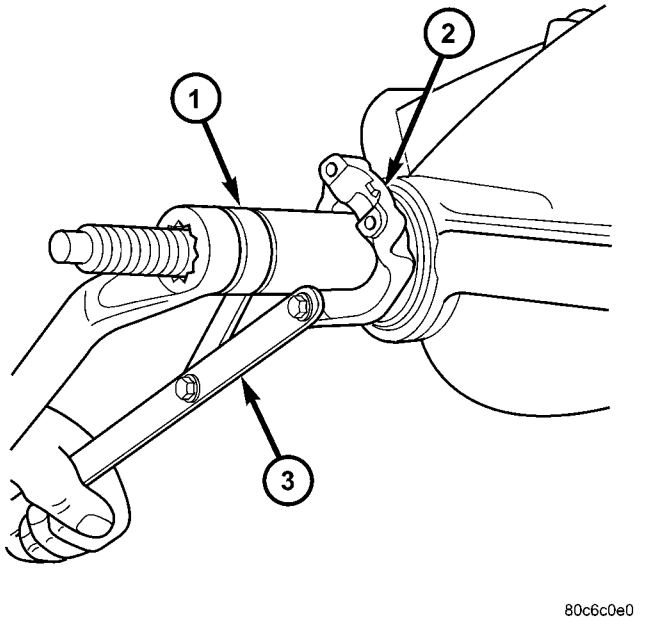

Fig. 44 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

CAUTION: Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. Failure to heed caution may result in damage.