COLLAPSIBLE SPACER (Continued)

(6) With yoke Spanner Wrench 6958 and a torque wrench set at 678 N·m (500 ft. lbs.), slowly tighten nut (Fig. 45) in 6.8 N·m (5 ft. lbs.) increments until rotating torque is achieved. Measure rotating torque with inch pound torque wrench frequently to avoid over crushing the collapsible spacer (Fig. 46).

CAUTION: If more than 687 N·m (500 ft. lbs.) torque is required to crush the collapsible spacer, the spacer is defective and must be replaced. Failure to heed caution may result in damage.

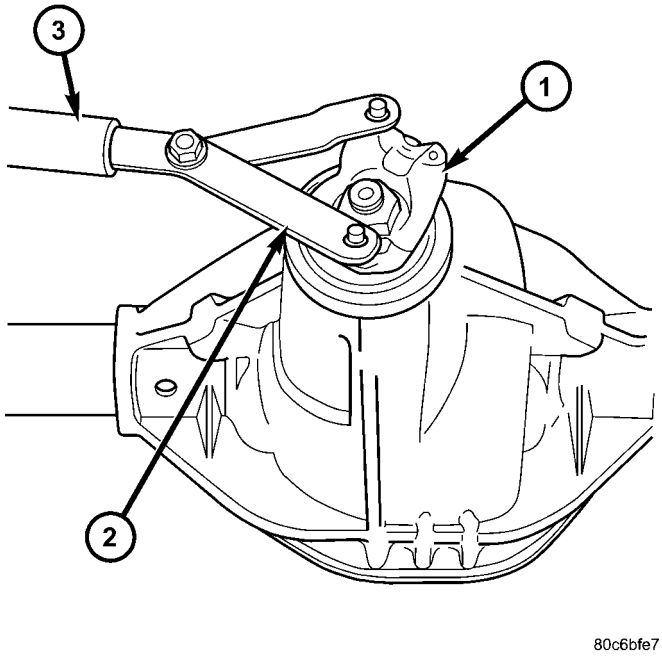

Fig. 45 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

(7) Rotating torque should be the recorded reading during removal, plus an additional 0.56 N·m (5 in. lbs.).

(8) Install propeller shaft.

(9) Install brake rotors and calipers.

DIFFERENTIAL COVER

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove drain plug.

(3) Remove cover bolts.

(4) Remove cover and drain lubricant.

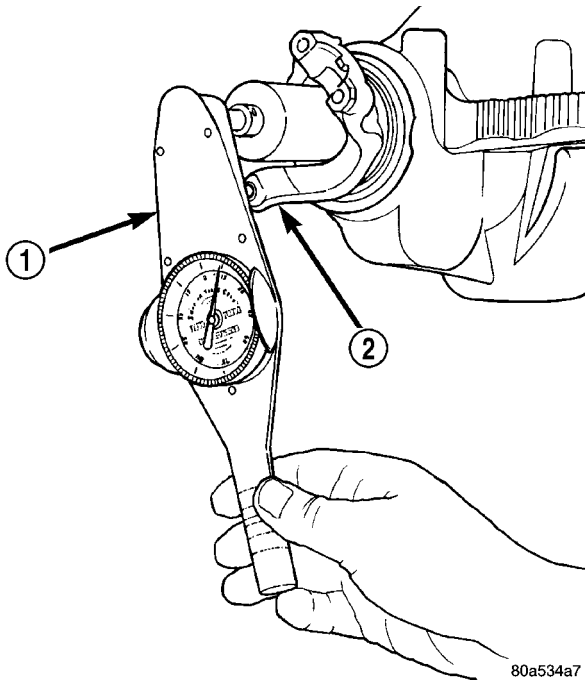

Fig. 46 PINION ROTATING TORQUE

1 - TORQUE WRENCH
2 - PINION YOKE

INSTALLATION

(1) Apply a 6.35mm (1/4 in.) bead of Mopar Silicone Rubber Sealant or equivalent to the housing cover (Fig. 47).

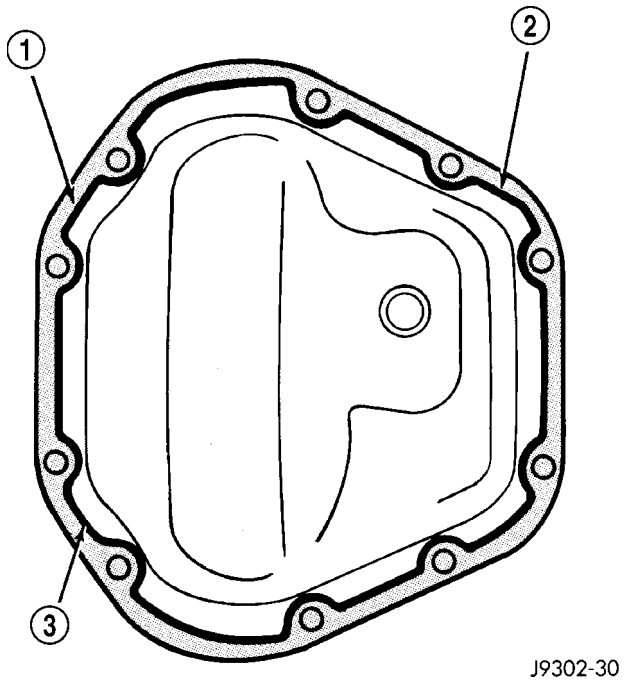

Fig. 47 HOUSING COVER - TYPICAL

1 - SEALANT SURFACE
2 - SEALANT
3 - SEALANT THICKESS