DIFFERENTIAL COVER (Continued)

CAUTION: If housing cover is not installed within 3 to 5 minutes, the cover must be cleaned and new RTV applied. Failure to heed caution may result in damage.

(2) Install cover and identification tag. Tighten cover bolts in a criss-cross pattern to 41 N·m (30 ft. lbs.).
(3) Fill differential to specifications.
(4) Install fill plug and tighten to 34 N·m (25 ft. lbs.).

DIFFERENTIAL

REMOVAL

(1) Remove differential cover and fluid to drain.
(2) Remove hub bearings and axle shafts.
(3) Note the installation reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 48).

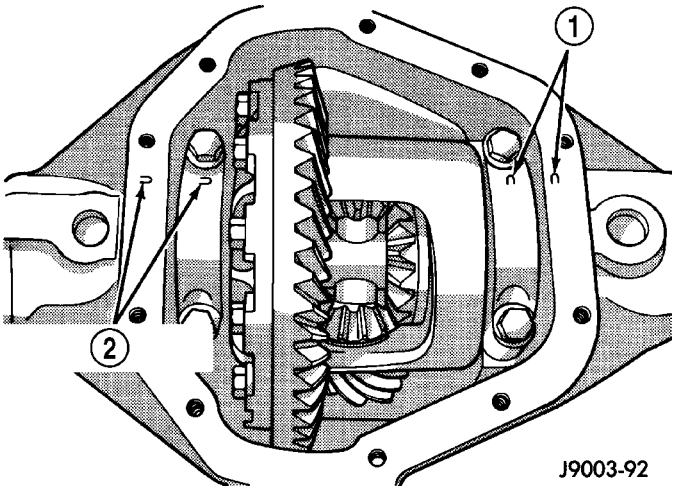


Fig. 48 BEARING CAP IDENTIFICATION

1 - INSTALLATION REFERENCE LETTERS
2 - INSTALLATION REFERENCE LETTERS

(4) Loosen the differential bearing cap bolts.
(5) Position Spreader W-129-B and Adapter from Kit 6987, with the tool dowel pins seated in the locating holes (Fig. 49). Install holddown clamps and tighten the tool turnbuckle finger-tight.
(6) Install Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to guide pin. Load indicator plunger against the opposite side of the housing (Fig. 50) and zero indicator.

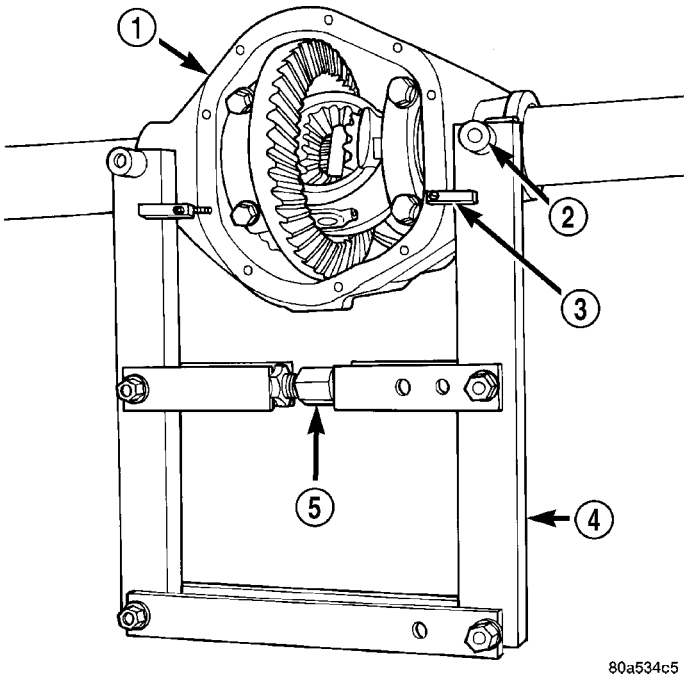


Fig. 49 SPREADER LOCATION

1 - AXLE HOUSING
2 - DOWEL
3 - SAFETY HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

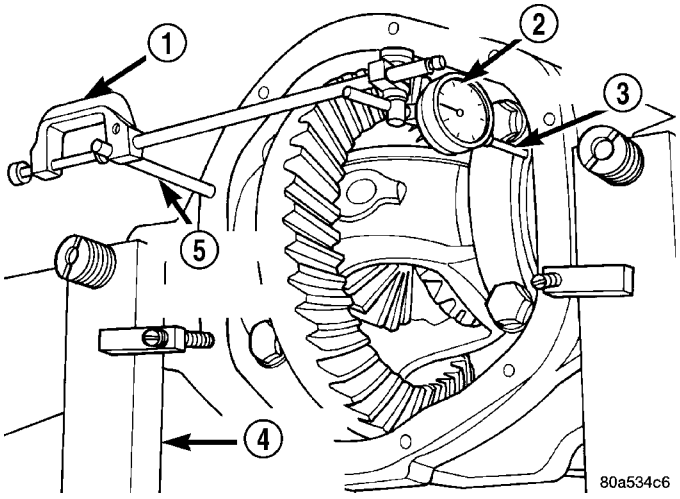


Fig. 50 DIAL INDICATOR LOCATION

1 - INDICATOR CLAMP
2 - DIAL INDICATOR
3 - LEVER ADAPTER
4 - SPREADER
5 - PILOT STUD